

CutMaster Plan / Plus

Version 11.0.1.143


Oct 15, 2025 06:03

imperial_templates

page: 8

3/4 - White MCP - 48 1/2 x 96 1/2

Sheet(8) - Width(48 3/32) - Length(96 3/32) - Parts(10) - Area(30.63 sq ft) - waste(4.59%)

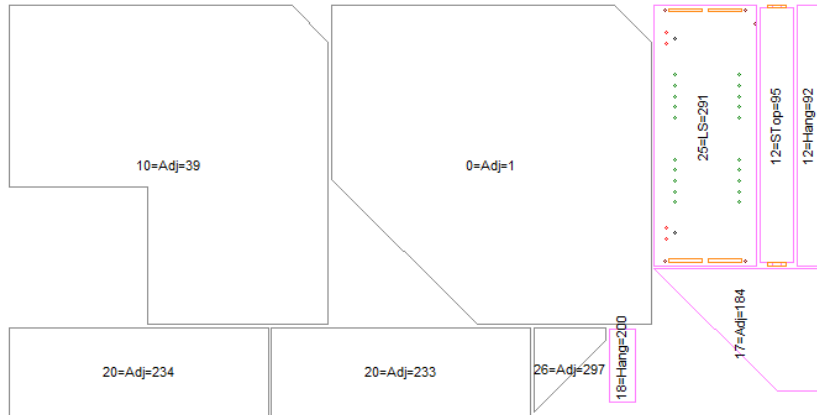

Cab	Width	Length	Code	Note	Cab	Width	Length	Code	Note	Cab	Width	Length	Description	Note
10	37 7/16	37 7/16	Adj		20	10 1/4	30 3/8	Adj		0	37 7/16	37 7/16	Adj	
20	10 1/4	30 3/8	Adj		25	30 1/2	12	LS		17	14 3/8	20 27/64	Adj	
12	30 1/2	4	STop		12	30 1/2	3	Hang		26	9 53/64	8 3/8	Adj	
18	8 1/2	3	Hang											


Oct 15, 2025 06:07

imperial_templates

page: 8

3/4 - White MCP - 48 1/2 x 96 1/2

Sheet(8) - Width(48 3/32) - Length(96 3/32) - Parts(10) - Area(30.63 sq ft) - waste(4.59%)

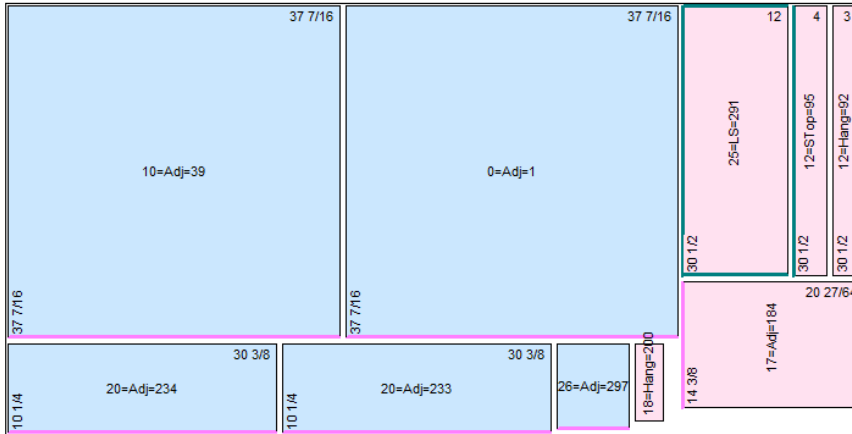

Cab	Width	Length	Code	Note	Cab	Width	Length	Code	Note	Cab	Width	Length	Description	Note
10	37 7/16	37 7/16	Adj		20	10 1/4	30 3/8	Adj		0	37 7/16	37 7/16	Adj	
20	10 1/4	30 3/8	Adj		25	30 1/2	12	LS		17	14 3/8	20 27/64	Adj	
12	30 1/2	4	STop		12	30 1/2	3	Hang		26	9 53/64	8 3/8	Adj	
18	8 7/8	3 3/8	Hang											

Table of Contents

CutMaster Plus Features	11	DXF Layout	26
CutMaster	12	Grid Traversal	28
Overview	13	In Grid Editing	28
Buttons	14	Main Options Tab	29
Jobs Button	14	1) Import / Open	29
Save Button	14	1 Show Database List at startup	29
Import Button	14	2 Optimize on Import / Open	29
Rules Button	14	3 Auto Add Sheets During Import and	
Units Button	14	Open	30
StrateGy Button	14	4 Default Saw Kerf	30
View dxf	14	5 Default Sheet Width	30
Layout Button	14	6 Default Sheet Length	31
Filter Button	15	7 Import Column Map	31
OptimiZe Button	15	8 Always Show Import	31
DXF	15	2) General	32
Off Cuts Button	15	1 Show Captions On Buttons below	
BAtch Button	15	menu	32
Edging Button	15	2 Show Project Note instead of “Batch	
Print Button	15	Summary” Caption	32
SummarY Button	15	3 Language File	32
Labels Button	15	4 Font Name	32
PlaN Button	15	5 Font Size	32
Report Button	15	6 Trim Sheets all edges	32
Assembly Button	15	7 Default Slide Value	33
Cabinets	15	8 Default Nest Orientation	33
Layout Page	16	9 Default Strategy	33
Parts Page	17	10 Sq Meters When Metric Units	34
Parts Grid (1)	17	11 Use Metric For Options	34
Sheet Grid (2)	17	12 Show Reminders	34
Off Cuts Grid (3)	17	13 Select First Thumbnail	35
Grid Editors	18	14 Restore Parts Grid Column Width	
Add Button	18	and Order	35
Delete Button	19	15 Back to Layout	35
Edit Button	19	16 DXF Files Both Group One and Two	36
Cancel Button	19	17 Show DXF Count and Prompt to	
Save Button	19	Run Cam	36
Clone	19	18 CAM Program	36
Grid Sorting	20	3) Sheet Layout Options	37
Edging	21	1 Printing	37
Edging Editor	21	2 Print Identifier	37
Edging Grid	22	3 Thumbnails	37
Joinery Form	23	4 Labels	38
		5 Show Progress Bar	38

6 Rotated Parts	38	Layers Tab	53
7 Rotated Parts Color	39	1) Global Layer Names	53
8 Parts Color	39	Labels Tab	54
9 Selected Color	39	Colors Tab	55
4) Batch Reports	40	1) System Colors	55
1 Print Nest Orientation	40	CNC Rules Tab	56
2 Paper Size	40	General Tab	56
3 Label Qty	40	1) Back Rabbet / Dado	56
CNC Globals Tab	41	1 Depth	56
Switches Tab	41	2 Dado Width	57
1) Global Switches	41	3 Bit Diameter	57
1 Adj Shelf Supports	41	4 Horizontal Offset Adjust	57
2 Full Dado	41	5 Horizontal Notch	58
3 Show Start of Line	42	6 Top Notch	58
4 Dado Backs	42	7 Bottom Notch	58
5 Drill Pullout System Holes	42	8 Corner Overrun Base	59
6 Use Radius for Corners	42	9 Corner Overrun Upper	59
2) DXF Switches	43	2) Tenons	60
1 Include Dxf Sheet Info	43	1 Tenon Thickness Adjust	60
2 Create 2D Dxf Files	43	2 Tenon Overrun	60
3 One Part Per DXF	43	3 Gap In Tenon	60
4 Require Blocks in DXF	44	4 Gap In Rail Tenon	61
5 Holes Need Extrusions in DXF	44	5 Gap In Top Hanger Tenon	61
6 Drill First DXF	44	6 Gap In Bottom Hanger Tenon	61
7 Score Fixed DXF	44	7 Tenon Cut as Pocket	62
8 Ignore Rotation	45	3) Combined – Door / Drawer	63
9 Horizontal Drilling DXF	45	1 Depth	63
10 Flatten 2D	45	2 Auto Depth Adjustment	63
11 DXF Enable Batch	46	3 Bit Diameter	63
12 Create Cabinet Folders	46	4) Blind Dado / Mortise	64
13 Swap DXF X and Y	46	1 Dado Depth	64
14 Use Code not Desc	47	2 Depth Adjustment	64
15 Show Text	47	3 Dado Width	64
16 Labels DXF	47	4 Bit Diameter	65
3) Small Area Modifiers	48	5 (Full) Front Notch	65
1 Pad Parts all edges	48	6 (Full) Back Notch	65
2 Only Pad Area smaller than	48	7 (Narrow) Front Notch	66
3 Small Area Modifier	48	8 (Narrow) Back Notch	66
4 Narrow Parts	49	9 (Split) Front Notch	66
5 Narrow Parts Modifier	49	10 (Split) Back Notch	67
6 Extra Narrow Parts	49	11 Sink Top Notch	67
7 Extra Narrow Parts Modifier	50	12 Sink Bottom Notch	67
4) CNC Labels	51	13 Sink Adjust	68
1 Scaling Factor	51	14 Kick Top Notch	68
2 Spacing	51	15 Kick Bottom Notch	68
3 Offset	51	16 Kick Adjust	69
4 Symbol Scaling Factor	52	17 Top Hanger Top Notch	69

18 Top Hanger Bottom Notch	69	1 Depth	87
19 Bottom Hanger Top Notch	70	2 Auto Depth Adjustment	87
20 Bottom Hanger Bottom Notch	70	3 Hole Diameter	87
21 Hanger Adjust	70	4 Pocket Length	88
22 Up Down Adjust	71	5 Offset Uppers List	88
5) Miscellaneous	72	6 Offset Base List	88
1 Narrow Fixed Top Bottom <	72	7 Horizontal Depth	89
2 Ignore c1 if Less than	72	8 Pilot Diameter	89
3 Acute Angle Adjust	72	9 Spacing List Uppers	89
4 Corner Brace Adjust	73	10 Spacing List Base	90
5 Scoring Depth	73	11 Spacing List Split	90
6 Cut Corners for Braces	74	12 Spacing List Tall	91
7 Dado Sides Only	75	13 Sink Stretcher List	91
8 Width Top As Split	75	14 Kick List	91
9 Flip Tops	75	15 Top Hanger List	92
10 Flip Fixed	76	16 Bottom Hanger List	92
11 Flip Bottoms	76	4) Closet Holes	93
12 Reverse Single Cuts	76	1 Depth	93
Holes Tab	77	2 Hole Diameter 1	93
1) Shelf Supports	77	3 Hole Offset 1	93
1 Depth	77	4 Hole Diameter 2	94
2 Depth for Backs	78	5 Hole Offset 2	94
3 Hole Diameter	78	5) Divider Joinery	95
4 Hole Spacing	78	1 Slot Thickness	95
5 Start Hole Uppers	79	2 Bit Diameter	95
6 End Hole Uppers	79	6) Dowel Holes	96
7 Spacing List Uppers	79	1 Depth	96
8 Start Hole Base	80	2 Hole Diameter	96
9 End Hole Base	80	3 Offset Uppers List	96
10 Spacing List Base	80	4 Offset Base List	97
11 Backs Wider Than	81	5 Horizontal Depth	97
12 Blind Panel Wider Than	81	6 Spacing List Uppers	97
13 Cluster Size	81	7 Spacing List Base	98
14 Shelves Control Supports	82	8 Spacing List Split	98
15 Balance Shotgun	82	9 Spacing List Tall	98
2) Side, Top and Bottom Pilot Holes	83	10 Sink Stretcher List	99
1 Depth	83	11 Kick List	99
2 Auto Depth Adjustment	83	12 Top Hanger List	99
3 Hole Diameter	83	13 Bottom Hanger List	100
4 Pilot for Back	84	7) Plant on Back Pilot Holes	101
5 Pilot for Hangers	84	1 Depth	101
6 Horizontal Offset	84	2 Auto Depth Adjustment	101
7 Vertical Offset	85	3 Hole Diameter	101
8 Maximum Hole Spacing	85	4 Horizontal Offset	102
9 Spacing List Full	85	5 Vertical Offset	102
10 Spacing List Split	86	6 Maximum Hole Spacing	102
3) Construction Holes	87	7 Skip Top Holes	103

8 Skip Bottom Holes	103	7 Chord Height	120
Doors Tab	104	8 Chord Start	120
1) Hinge Mounting Plates	105	9 Chord Length	120
1 Hole Depth	105	3) Rafix for Backs	121
2 Hole Diameter	105	1 Rafix Bolt Depth	121
3 Hole Spacing	105	2 Bolt Hole Pilot Diameter	121
4 From Front Edge	106	3 Rafix Bolt Offset	121
5 From Back Edge	106	4 Use Rafix	122
6 Bottom Hinge Start Uppers	106	5 1 Rafix Back Taller than	122
7 Top Hinge End Uppers	107	6 2 Rafix Back Taller than	122
8 Bottom Hinge Start Base	107	7 3 Rafix Back Taller than	123
9 Top Hinge End Base	107	8 Mortise Thickness	123
2) 3rd Hole	108	9 Mortise Depth	123
1 Hole Depth	108	10 Mortise Thickness Adj	124
2 Hole Diameter	108	11 Depth Adjustment	124
3 Third Offset	108	12 Bit Diameter	124
3) Cup Hinge	109	13 Back Offset Adjust	125
1 Cup Depth	109	14 Top Notch	125
2 Cup Diameter	109	15 Bottom Notch	125
3 Hole Center	109	16 Gap in Tenon	126
4 Length 3rd Hinge	110	4) Rafix Dowel	127
4) Door Mounting	111	1 Dowel Depth	127
1 Hole Depth	111	2 Dowel Diameter	127
2 Hole Diameter	111	3 Dowel Offset	127
3 Hole Spacing	111	5) Minifix or Cam Lock	128
4 Offset	112	1 Depth	128
Connectors Tab	113	2 Diameter	128
1) Rafix or Cabineo (Fittings)	114	3 From Edge	128
1 Rafix Depth	114	4 Spacing List	129
2 Rafix Diameter	114	5 Spacing List Split	129
3 From Edge	114	6 Spacing List Tall	129
4 Rafix Offset	115	7 Sink Stretcher List	130
5 Rafix Offset Hangers	115	8 Kick List	130
6 Spacing List	115	9 Hanger List Top	130
7 Spacing List Split	116	10 Hanger List Bottom	131
8 Spacing List Tall	116	6) Pocket Screws for Backs	132
9 Sink Stretcher List	116	1 Depth	132
10 Kick List	117	2 Hole Diameter	132
11 Hanger List Top	117	3 Pocket Length	132
12 Hanger List Bottom	117	4 Vertical Offset	133
2) Hanging Brackets	118	5 Horizontal Offset	133
1 Depth	118	6 Minimum Width	133
2 Hole Diameter	118	7 Maximum Spacing	134
3 From Top	118	7) Leg Levelers	135
4 Spacing List	119	1 Depth	135
5 Notch Height	119	2 Hole Diameter	135
6 Notch Width	119	3 Center to Center	135

Drawer Systems Tab	136	1 Layer Name	149
Sides Tab	136	2 Comment / Purpose	149
1) Drawer Side Pilot Construction Holes		3 Cut Depth	149
1 Layer Name	137	4 Groove Width	149
2 Comment / Purpose	137	5 Pocket Overrun	150
3 Through Drill Value	137	6 Inset Bottom	150
4 Use Side Thickness for Depth	137	7 Front And Back Groove Depth	150
5 Hole Diameter	138	8 Front	151
6 Horizontal Depth	138	9 Back	151
7 Spacing List	138	10 Sides	151
8 Front Edge	139	Fronts Tab	152
9 Back Edge	139	1) Drawer Front Handle Holes	152
2) Drawer Side for Bottom Groove	140	1 Layer Name	152
1 Layer Name	140	2 Comment / Purpose	152
2 Comment / Purpose	140	3 Through Drill Value	152
3 Groove Depth	140	4 Drw Front Thickness for Depth	153
4 Groove Width	140	5 Diameter	153
5 Pocket Overrun	141	6 Top Offset	153
6 Inset Bottom	141	7 Center to Center	154
7 Front And Back Groove Depth	141	2) Drawer Front Holes (for connection to sides)	155
8 Front	142	1 Layer Name	155
9 Back	142	2 Comment / Purpose	155
10 Sides	142	3 Through Drill Value	155
3) Drawer Side Bottom Edge Rabbet	143	4 Diameter	155
1 Layer Name	143	5 Horizontal Offset	156
2 Comment / Purpose	143	6 Vertical Spacing List	156
3 Cut Depth	143	7 Reference From Drawer Box	156
4 Groove Width	143	3) Drawer Box Front Pilot Holes	157
5 Pocket Overrun	144	1 Layer Name	157
6 Inset Bottom	144	2 Comment / Purpose	157
7 Front And Back Groove Depth	144	3 Through Drill Value	157
8 Front	145	4 Diameter	157
9 Back	145	5 Horizontal Offset	158
10 Sides	145	6 Vertical Spacing List	158
4) Drawer Side Bottom Edge Rabbet	146	4) Drawer Box Front (mid pilot holes)	159
1 Layer Name	146	1 Layer Name	159
2 Comment / Purpose	146	2 Comment / Purpose	159
3 Groove Depth	146	3 Through Drill Value	159
4 Groove Width	146	4 Use Part Thickness for Depth	159
5 Pocket Overrun	147	5 Diameter	160
6 To Top Edge Drw Side Dado	147	6 Bottom Offset	160
7 Front And Back Groove Depth	147	7 1 hole bottom wider than	160
8 Front	148	8 2 holes bottom wider than	161
9 Back	148	5) Drawer Box Front Pilot Holes	162
10 Sides	148	1 Layer Name	162
5) Optional Side Dado	149	2 Comment / Purpose	162

3 Through Drill Value	162	3 Through Drill Value	175
4 Diameter	162	4 Diameter	175
5 Horizontal Offset	163	5 Horizontal Offset	176
6 Vertical Spacing List	163	6 Vertical Spacing List	176
6) Pullout Front Holes (for connection to sides)	164	6) Drawer Back Hole Set 2	177
1 Layer Name	164	1 Layer Name	177
2 Comment / Purpose	164	2 Comment / Purpose	177
3 Depth	164	3 Through Drill Value	177
4 Diameter	164	4 Diameter	177
5 Horizontal Offset	165	5 Horizontal Offset	178
6 Spacing List	165	6 Vertical Spacing List	178
7 Reference From Drawer Box	165	Bottoms Tab	179
7) Under Mount Front Notch	166	1) Drawer Bottom Front Clip Locator	179
1 Front Notch Width	166	1 Layer Name	179
2 Front Notch Depth	166	2 Comment / Purpose	179
Backs Tab	167	3 Depth	180
1) Hook Holes	167	4 Diameter	180
1 Layer Name	167	5 Pocket Length	180
2 Comment / Purpose	167	6 Side Edge Offset List	181
3 Hook Hole Depth	167	7 Front Edge Spacing List	181
4 Diameter	168	2) Drawer Bottom to Front Connection	182
5 Horizontal Offset	168	1 Layer Name	182
6 Spacing List	168	2 Comment / Purpose	182
2) Under Mount Back Notching	169	3 Through Drill Value	182
1 Back Notch	169	4 Use Part Thickness for Depth	182
2 Back Notch Depth	169	5 Diameter	183
3 Drawer Back Height Adj	169	6 Pocket Length	183
3) Drawer Back to Bottom Holes	170	7 Front Edge Offset	183
1 Layer Name	170	8 1 hole bottom wider than	184
2 Comment / Purpose	170	9 2 holes bottom wider than	184
3 Through Drill Value	170	3) Drawer Bottom To Side Tenon Cut	185
4 Diameter	170	1 Layer Name	185
5 Horizontal Offset	171	2 Comment / Purpose	185
6 Vertical Spacing List	171	3 Depth	185
4) Drawer Back Mid Pilot Holes	172	4 Width	185
1 Layer Name	172	5 Side Edge Offset	186
2 Comment / Purpose	172	6 Front Overrun	186
3 Through Drill Value	172	7 Back Overrun / Length	186
4 Use Part Thickness for Depth	172	8 Back Overrun as Length	187
5 Diameter	173	4) Drawer Bottom to Side Connection	188
6 Bottom Offset	173	1 Layer Name	188
7 1 hole bottom wider than	173	2 Comment / Purpose	188
8 2 holes bottom wider than	174	3 Depth	188
5) Drawer Back Hole Set	175	4 Diameter	188
1 Layer Name	175	5 Pocket Length	189
2 Comment / Purpose	175	6 Side Edge Offset List	189
		7 Front Edge Spacing List	189

5) Drawer Bottom to Front Connection	190	7 Bottom Notch Side Wider Than	204
1 Layer Name	190	8 Box Front Tenon Notch Overrun	205
2 Comment / Purpose	190	9 Back Tenon Notch Overrun	205
3 Through Drill Value	190	10 Front	205
4 Use Part Thickness for Depth	190	11 Back	206
5 Diameter	191	12 Tenon Cut as Pocket	206
6 Pocket Length	191	Slide Details Tab	207
7 Front Edge Offset	191	2) Cabinet Side Drawer System Holes	207
8 1 hole bottom wider than	192	1 Layer Name	207
9 2 holes bottom wider than	192	2 Comment / Purpose	207
6) Metal Drawer Quick Build	193	3 Depth	208
1 Layer Name	193	4 Through Drill Adjust ??	208
2 Comment / Purpose	193	5 Diameter	208
3 Depth	193	6 Drw Sys Hole Vertical Offset	209
4 Width	193	7 Mfg Horizontal Offset Adj	209
5 Side Edge Offset	194	8 Pullout Vertical Offset	209
6 Front Overrun	194	9 Pullout Horizontal Offset	210
7 Back Overrun / Length	194	10 Index From Top	210
8 Back Overrun as Length	195	3) Drawer Side Hardware Mounting Holes	211
7) Drawer Bottom Pocket	196	1 Layer Name	211
1 Layer Name	196	2 Comment / Purpose	211
2 Comment / Purpose	196	3 Through Drill Value	211
3 Pocket Depth	196	4 Use Side Thickness for Depth	211
4 Width	196	5 Diameter	212
5 Pocket Offset	197	6 Vertical Offset	212
6 Pocket Length	197	7 Mfg Horizontal Offset Adj	212
7 1 Pocket bottom wider than	197	Drawer Layers	214
8 2 Pockets bottom wider than	198	Part Rotation Tab	215
Joinery Tab	199	Skipped Parts	216
1) Drawer Side Joinery	199	Manual Optimization	217
1 Layer Name	199	Summary Report	218
2 Comment / Purpose	199	Edge Banding Report	219
3 Mortise Depth	199	Labels	220
4 Mortise Width	200	Label Report	221
5 Bit Diameter	200	Import CSV File	222
6 Drw Box Front Inset	200	Add Button	222
7 Drw Box Front Top Adj Down	201	Delete Button	222
8 Side Ht minus Back Ht	201	Undo Button	222
9 Front	201	Save Button	222
10 Back	202	Match Button	223
Front / Back Tenon Cut	203	Import Button	223
1 Layer Name	203	Cancel Button	223
2 Comment / Purpose	203	Import Name	223
3 Depth	203		
4 Tenon Length	203		
5 Tenon Thickness Adjust	204		
6 Top Notch	204		

First Row has Column Names	223	Version 8.0.1.128 Dec 10, 2023	233
Units	223	Version 8.0.1.127 Nov 20, 2023	233
1 PartID	223	Version 8.0.1.125 Oct 16, 2023	234
2 Quantity	223	Version 8.0.1.122 Jul 21, 2023	234
3 Thickness	223	Version 8.0.1.121 Jul 16, 2023	234
4 Width	223	Version 8.0.1.119 Jun 12, 2023	234
5 Length	223	Version 8.0.1.116 Apr 17, 2023	235
6 Material	223	Version 8.0.1.112 Feb 27, 2023	235
7 Description	224	Version 7.0.1.111 Dec 18, 2022	236
8 Edging	224	Version 7.0.1.110 Dec 12, 2022	236
9 Part Type	224	Version 7.0.1.108 Nov 18, 2022	236
10 Cabinet Type	225	Version 7.0.1.106 Oct 3, 2022	237
11 Frame Type	225	Version 7.0.1.105 Jul 23, 2022	237
12 Base	225	Version 6.0.1.104 Oct 16, 2020	237
13 Cabinet	225	Version 6.0.1.103 Aug 24, 2020	237
14 Stretchers	226	Version 6.0.1.102 Aug 7, 2020	237
15 Corners	226	Version 6.0.1.101 Jun 30, 2020	237
16 Drawers	226	Version 6.0.1.99 Jun 19, 2020	237
17 Gaps	226	Version 6.0.1.98 Jun 7, 2020	237
18 Tall	226	Version 6.0.1.97 May 11, 2020	238
19 Rule	226	Version 6.0.1.96 Mar 31, 2020	238
20 Doors	226	Version 6.0.1.95 Feb 29, 2020	238
21 Fixed Shelves	227	Version 6.0.1.94 Feb 15, 2020	238
22 Pullouts	227	Version 6.0.1.92 Jan 31, 2020	238
23 Shelves	227	Version 4.0.1.91 Oct 14, 2019	238
24 Note	227	Version 4.0.1.90 Sep 27, 2019	239
25 Model	227	Version 4.0.1.88 Jun 23, 2019	239
26 Job	227	Version 3.0.1.87 Jun 11, 2019	239
27 Values	227	Version 3.0.1.85 Feb 9, 2018	239
28 Legs	227	Version 3.0.1.82 Dec 9, 2018	239
29 Hinges	227	Version 3.0.1.81 Nov 26, 2018	239
30 Clusters	227	Version 3.0.1.80 Nov 5, 2018	239
31 More Edging	227	Version 3.0.1.79 Oct 11, 2018	239
32 User Flag	227	Version 3.0.1.78 Oct 2, 2018	240
	227	Version 3.0.1.77 Jul 12, 2018	240
Import Selection	228	Version 3.0.1.76 Jun 27, 2018	240
		Version 3.0.1.74 Jun 15, 2018	240
Version History	230	Version 3.0.1.73 Jun 7, 2018	240
Version 11.0.1.143 Nov 5, 2025	230	Version 3.0.1.71 May 7, 2018	240
Version 10.0.1.138 Mar 23, 2025	230	Version 3.0.1.70 Apr 17, 2018	240
Version 9.0.1.136 Oct 25, 2024	231	Version 3.0.1.69 Apr 8, 2018	240
Version 9.0.1.135 Sep 20, 2024	232	Version 3.0.1.68 Mar 26, 2018	240
Version 9.0.1.134 Sep 08, 2024	232	Version 3.0.1.67 Mar 21, 2018	241
Version 9.0.1.133 Sep 05, 2024	232	Version 3.0.1.66 Mar 9, 2018	241
Version 9.0.1.132 Aug 15, 2024	232	Version 3.0.1.65 Mar 6, 2018	241
Version 9.0.1.131 Mar 15, 2024	232	Version 3.0.1.64 Feb 12, 2018	241
Version 8.0.1.129 Dec 28, 2023	233	Version 3.0.1.63 Feb 7, 2018	241

Version 3.0.1.62	Jan 2, 2018	241	Version 2.0.1.36	Feb 16, 2017	245
Version 3.0.1.61	Dec 28, 2017	241	Version 2.0.1.35	Jan 28, 2017	245
Version 3.0.1.60	Dec 12, 2017	241	Version 2.0.1.34	Jan 23, 2017	245
Version 2.0.1.57	Oct 20, 2017	241	Version 2.0.1.33	Dec 24, 2016	245
Version 2.0.1.56	Sep 29, 2017	242	Version 2.0.1.32	Dec 12, 2016	245
Version 2.0.1.55	Sep 19, 2017	242	Version 2.0.1.31	Dec 3, 2016	245
Version 2.0.1.54	Aug 4, 2017	242	Version 2.0.1.30	Nov 29, 2016	246
Version 2.0.1.53	Jul 24, 2017	242	Version 2.0.1.27	Nov 1, 2016	246
Version 2.0.1.52	Jul 15, 2017	243	Version 2.0.1.26	Oct 30, 2016	246
Version 2.0.1.51	Jul 2, 2017	243	Version 2.0.1.25	Sep 14, 2016	246
Version 2.0.1.49	Jun 19, 2017	243	Version 2.0.1.23	Jul 6, 2016	246
Version 2.0.1.48	Jun 10, 2017	243	Version 2.0.1.22	Jul 1, 2016	246
Version 2.0.1.47	May 23, 2017	243	Version 1.0.10.20	Oct 20, 2014	247
Version 2.0.1.46	May 9, 2017	244	Version 1.0.9.19	May 5, 2014	247
Version 2.0.1.45	May 6, 2017	244	Version 1.0.8.18	Jun 15, 2013	247
Version 2.0.1.44	May 2, 2017	244	Version 1.0.7.17	Jun 13, 2013	247
Version 2.0.1.43	Apr 25, 2017	244	Version 1.0.6.16	Jun 12, 2013	247
Version 2.0.1.42	Apr 13, 2017	244	Version 1.0.5.14	Jun 5, 2013	247
Version 2.0.1.41	Mar 31, 2017	244	Version 1.0.4.13	Jun 4, 2013	247
Version 2.0.1.40	Mar 31, 2017	244	Version 1.0.3.11	May 24, 2013	248
Version 2.0.1.39	Mar 24, 2017	244	Version 1.0.2.9	May 18, 2013	248
Version 2.0.1.38	Mar 20, 2017	245			

1 CutMaster Plus Features


With CutMaster Plus you get:

1. Supports commercial shelf standards – Plus version.
2. Assembly report – Plus version only.
3. Closet rod drilling in CutMaster - Plus version only.
4. Swap X and Y for vcarve etc – Plus version only.
5. Panel edging. Cut Plan view shows the edging type using color coding. So does the main layout area and also labels. There is an edging editor that is accesable with CutMaster Plus. You also get a banding report.
6. DXF output. You can create nested dxf files for the entire job with one click. CabMaker has a DXF button that will import these DXF files. This DXF import is different as it automatically puts a construction point at the pivot point for holes. This makes it much easier to test for accuracy.
7. Added Filtering to CutMaster - Plus version ONLY
8. DXF View. This toggles the Layout from Cut Plan to Dxf View. This also controls the Main Cutting report - Plus version ONLY
9. There is a joinery editor that is part of CutMaster Plus. This allows you to add additional parts and to to give them a panel type etc.
10. Added Short Code to parts.csv for DXF files. Now shows on Dxf View
11. The Cabinet Priority Optimizer is only available from CutMaster Plus version.
12. The Cabinet Priority report is only available from CutMaster Plus.

2 CutMaster

CutMaster has 2 main pages of information available directly from the main screen. These are the Layout and Parts pages.

CutMaster has 3 Parts editors and a Rules editor. CutMaster Plus has an Edging Editor.

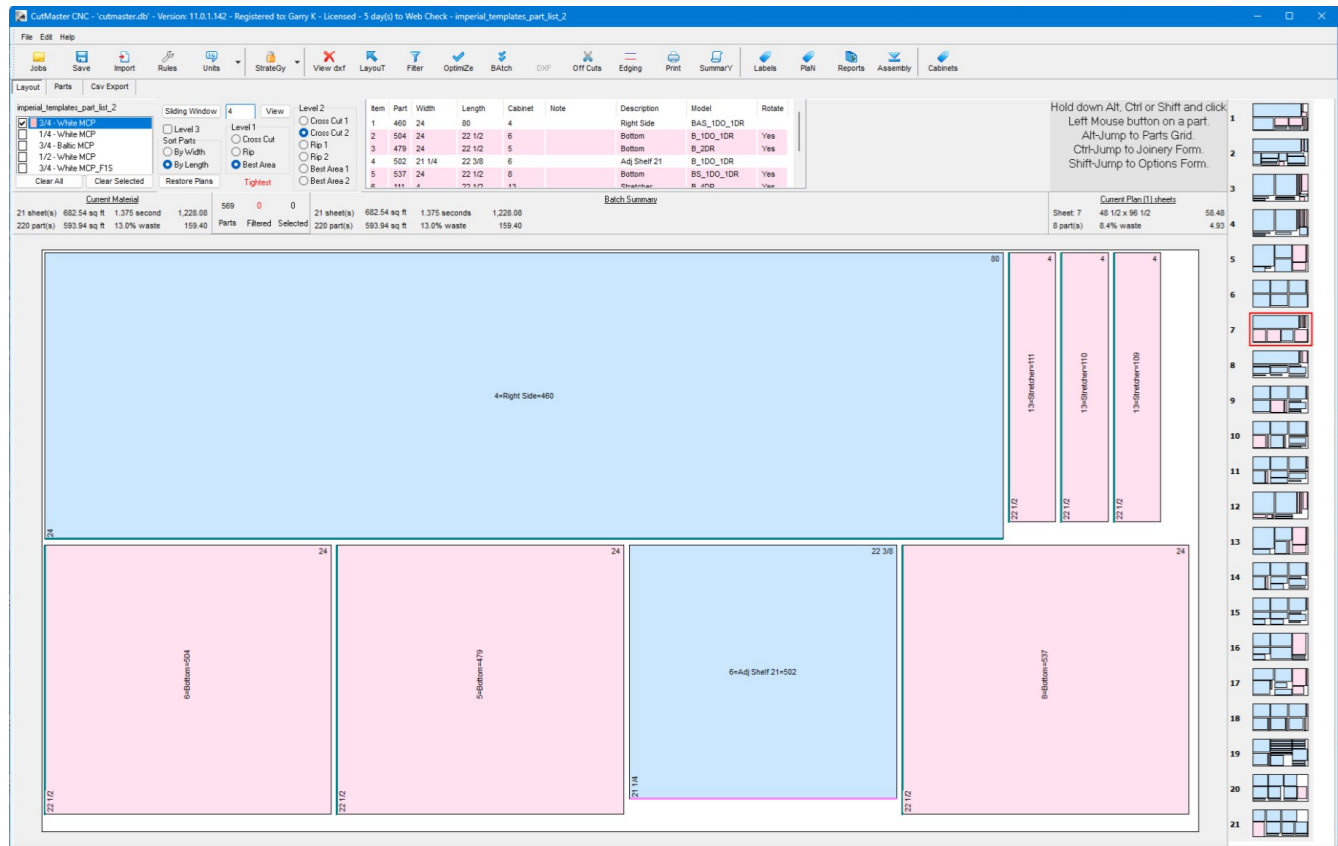

Added Short Code to parts.csv for View DXF.

There is also a menu available from the main screen. The menu performs various actions such as editing options, adding new jobs etc.

A row of buttons immediately below the main menu also performs the same actions as are in the menus.

Next are the two pages, the Layout page and the Parts page. The Layout page which is displayed here contains the results of the optimization.

3 Overview

CutMaster works with CabMaker Build sketchup plugin or as a stand alone program.

As a standalone program CutMaster stores its jobs in several SQLite tables. As an integrated solution CabMaker32 stores parts in a CSV file and calls CutMaster with the name of the CSV file for the current job. CutMaster then automatically imports the CSV file and displays a list of materials for that job.


CabMaster is an optimization program that uses various solutions to figure out the best way to cut sheets of material with the least amount of waste.

Please note that the optimizer normally optimizes all materials. There are two exceptions:

1. The Optimize button.
2. Changing the Strategy.

4 Buttons

Each button performs an action. For each button there is a menu item. The underlined letter signifies the hot key. Hold down the Alt key and press the underlined key.



In the options form you can un-check “Show Captions”.



Jobs Button

The Jobs button provides a list of saved jobs. Double click on a job or highlight a job and click “Jobs”. The hot key is Alt+J.

Save Button

The Save button stores the optimizer strategy for each material. Very helpful when on manual. The hot key is Alt+S.

Import Button

The Import button provides a list of CSV files. Double click on a CSV file or highlight a CSV file and click “Open”. The hot key is Alt+I.

Rules Button

The Rules button displays an options form containing a number of useful options. The hot key is Alt+O.

Units Button

The Units button changes the display and data entry units. The three choices are Millimeters, Inches fractions and inches decimal. The hot key is Alt+U.

StrateGy Button

The Strategy button provides four main settings for panel optimization. These are “Prefer Cross Cuts”, “Prefer Rips”, “Pack Tightest” and manual. The shortcuts for these are Alt 1, Alt 2, Alt 3 and Alt 4

Prefer Cross cuts attempts to cut the sheet across its width whereas Prefer Rips attempts to slice the sheet down its length. Pack Tightest checks each and every combination and uses the one which gives the tightest packing but also takes the longest time. Manual allows you to try any combination yourself. The hot key is Alt+G.

View dxf

With CutMaster Plus this allows you to toggle between Dxf view and Cut Plan View. The hot key is Alt+V.

LayouI Button



The Layout button displays the sheet packed top to bottom or bottom to top and right to left or left to right. Clicking the button toggles through the four choices. Changing the setting does not trigger optimization. The hot key is Alt+T.

Filter Button

The Filter button allows you to filter out parts by cabinet number.

Optimize Button

The Optimize button runs the optimizer for the current material. The hot key is Alt+Z.

DXF

With CutMaster Plus you can export nested dxf files. The hot key is Alt+X.

Off Cuts Button

The Off Cuts button controls whether off cuts are used for optimization (if there are any). The hot key is Alt+C

Batch Button

The Batch button runs the optimizer for all of the materials. The hot key is Alt+Z.

Edging Button

The Edging button gives you control of edging for colour code, thickness, and symbols.

Print Button

The Print button creates a parts layout view which can be viewed and or sent to a printer. The Print button works with the currently selected material. The hot key is Alt+P.

Summary Button

The Summary button creates a summary report complete with costing information. The hot key is Alt+Y.

Labels Button

The Labels Button prints labels. There is 1 label for every part. The hot key is Alt+L.

Plan Button

The Plan Button prints labels for just the current Plan.

Report Button

The Report button also creates a print view which can be viewed and or sent to a printer. This is essentially a batch report. Choose which reports you want to batch in the Options. The Hot key is Alt+R.

Assembly Button

With CutMaster Plus you can create an Assembly report. The hot key is Alt+Q.


Cabinets

The Cabinets labels button is 1 label per cabinet.

5 Layout Page

The layout page is separated into six areas.

1. The top left area is a list containing all of the materials required for the current job.
2. The next area to the right of the material list are a series of buttons and check boxes which represents the optimization strategy used in the current solution for the current material.
3. There is a grid on the top row containing all of the individual parts that are in the current sheet.
4. This area is where Tool Tips are displayed (when you hover the mouse over an object)
5. The area on the right hand side give you a thumb view of each sheet. The one that is outlined with a red rectangle is the same sheet that is at the bottom left.
6. The area in the middle contains the sheet summary, the batch or job summary and the summary for the current material.
7. The bottom left area is a cutting diagram of the full sheet complete with dimensions (when they fit) and a part identifier.

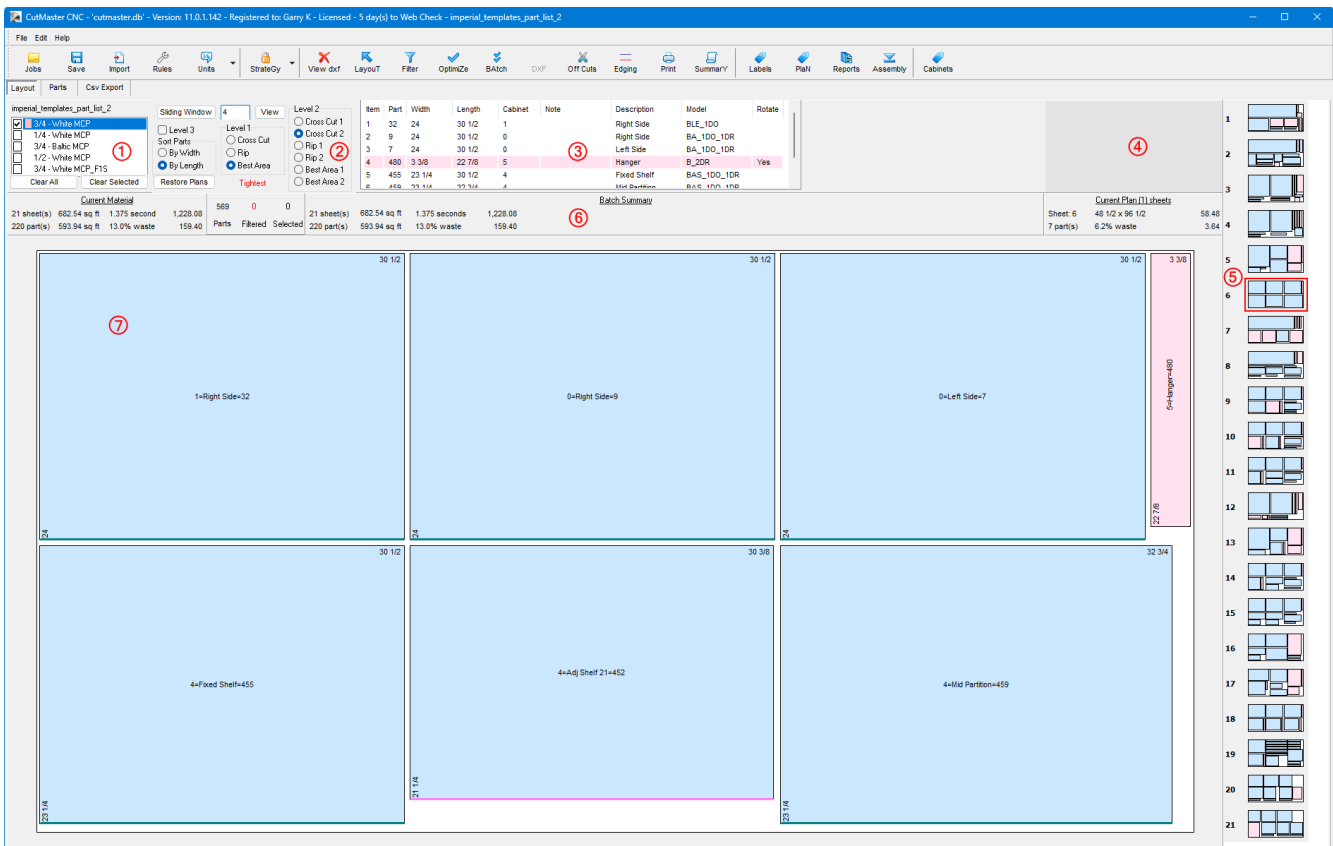


Notice that parts with edging shows up as a colored line. Also notice that the first sheet is an Off Cut. Off Cuts are managed in the 3rd grid on the Parts page.

6 Parts Page

The Parts page contains 3 in grid editors.

1. The Parts grid.
2. The Sheet grid.
3. The Off Cuts grid.

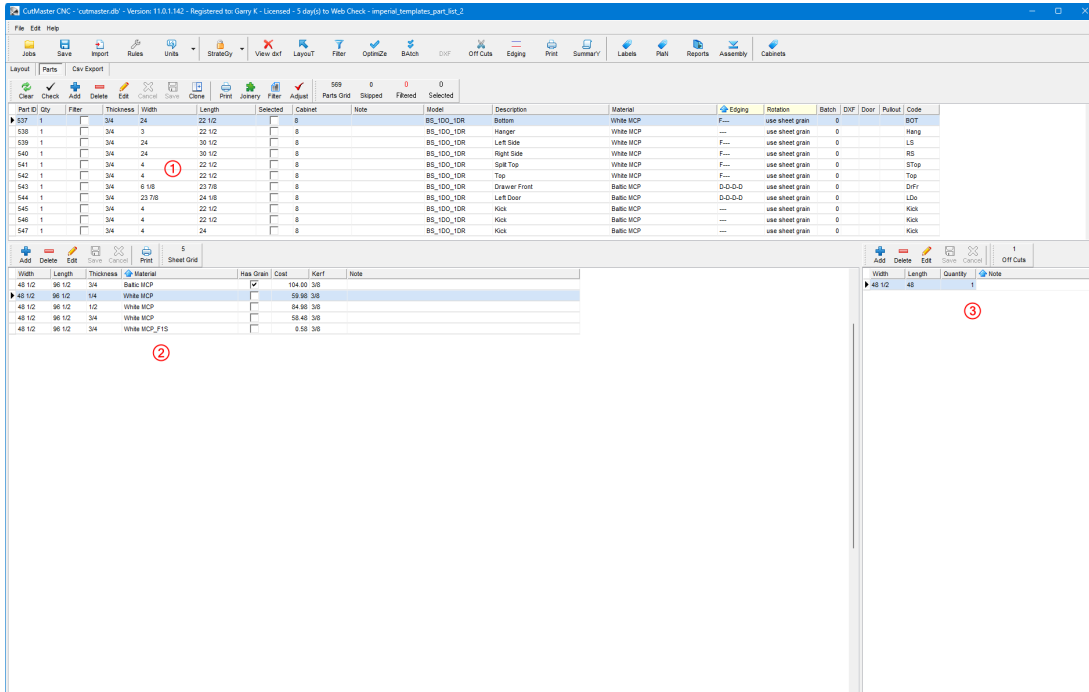

Parts Grid (1)

The Parts grid contains all of the different parts for a complete job. This grid populates with data during the Open or Import process. You also have the option to insert as many additional parts as the job requires. There is a clone button which copies the current record and pastes it into a new record. You may adjust the width of the columns and drag columns into a new order. This view is saved when cutmaster closes and used the next time you run the program.

Sheet Grid (2)

The sheet grid is maintained independent of the jobs and is stored in it's own MyBase table. There is an option that will automatically add a new part to the Sheet grid during the Open or Import process.

Off Cuts Grid (3)

The Off Cuts grid contains off sized pieces from a previous job that you may want to use for the current job.

7 Grid Editors

The Grid Editors all work the same way. There is a row of buttons above each grid. The first five buttons are used for grid editing. Editing actions can also be performed with various key strokes.

In browse mode there are 3 buttons that are enabled, Add, Delete and Edit. There is a black triangle in the first column on the far left of the current record. Also the Add Delete and Edit buttons are available and the Save and Cancel buttons are disabled. This is always the case when you are in Browse mode. You can bypass delete confirmation by holding down the Ctrl key when deleting.

Width	Length	Thickness	Material	Has Grain	Cost	Kerf	Note
1231.9	2451.1	19.05	Baltic MCP	<input checked="" type="checkbox"/>	104.00	9.525	
1231.9	2451.1	6.35	White MCP	<input type="checkbox"/>	59.98	9.525	
▶ 1231.9	2451.1	12.7	White MCP	<input type="checkbox"/>	84.98	9.525	
1231.9	2451.1	19.05	White MCP	<input type="checkbox"/>	58.48	9.525	
1231.9	2451.1	19.05	White MCP_F1S	<input type="checkbox"/>	0.58	9.525	
1230	2450	19	White MCP	<input type="checkbox"/>	0.00	10	
1230	2450	19	Baltic MCP	<input checked="" type="checkbox"/>	0.00	10	
1230	2450	6	White MCP	<input type="checkbox"/>	0.00	10	
1230	2450	12	White MCP	<input type="checkbox"/>	0.00	10	

When you click the Edit button or simply start editing a column then you are in Edit mode. Also notice that when you are in Edit mode that the Save and Cancel buttons are now enabled and the Add, Delete and Edit buttons are disabled. The triangle also changed to a bar in the first column on the far left of the current record.

Width	Length	Thickness	Material	Has Grain	Cost	Kerf	Note
1231.9	2451.1	19.05	Baltic MCP	<input checked="" type="checkbox"/>	104.00	9.525	
1231.9	2451.1	6.35	White MCP	<input type="checkbox"/>	59.98	9.525	
█ 1231.9	2451.1	12.7	White MCP	<input type="checkbox"/>	84.98	9.525	
1231.9	2451.1	19.05	White MCP	<input type="checkbox"/>	58.48	9.525	
1231.9	2451.1	19.05	White MCP_F1S	<input type="checkbox"/>	0.58	9.525	
1230	2450	19	White MCP	<input type="checkbox"/>	0.00	10	
1230	2450	19	Baltic MCP	<input checked="" type="checkbox"/>	0.00	10	
1230	2450	6	White MCP	<input type="checkbox"/>	0.00	10	
1230	2450	12	White MCP	<input type="checkbox"/>	0.00	10	

In Insert mode (Add), there are 2 buttons enabled, Save and Cancel and there is an asterisk in the first column on the far left of the current record. Also notice that the grid opens up a new row.


Width	Length	Thickness	Material	Has Grain	Cost	Kerf	Note
* 0	0	0			0.00	0	
1231.9	2451.1	12.7	White MCP	<input type="checkbox"/>	84.98	9.525	
1231.9	2451.1	19.05	White MCP	<input type="checkbox"/>	58.48	9.525	
1231.9	2451.1	19.05	White MCP_F1S	<input type="checkbox"/>	0.58	9.525	
1230	2450	19	White MCP	<input type="checkbox"/>	0.00	10	
1230	2450	19	Baltic MCP	<input checked="" type="checkbox"/>	0.00	10	
1230	2450	6	White MCP	<input type="checkbox"/>	0.00	10	
1230	2450	12	White MCP	<input type="checkbox"/>	0.00	10	

Add Button

The Add button puts allows you to insert a new record. The button opens up a row and you simply start typing. You can also use the "Insert" key from the keyboard. If you are at the bottom of the grid you may also use the "Down Arrow" key.

Delete Button

The Delete button brings up a confirmation screen. The wording changes depending on whether you are deleting a Part, a Sheet or an Off Cut. The Ctrl Delete key performs the same action as clicking on the Delete button.

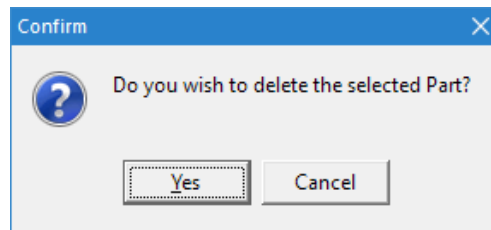

Edit Button

The Edit button puts the grid into edit mode. You can also start typing in a cell which puts the editor into Edit mode.

Cancel Button

The Cancel button cancels an edit or an insert. You may also press the "Escape" key to cancel an edit or an insert.

Save Button


The Save button saves the currently edited or added record and then puts the grid back into browse mode. Moving off the current record also performs a Save.

Clone

The Clone button inserts a copy of the current part into a new record.

Grid Sorting

You can sort the grid by clicking on a column title. In this example there is a blue up arrow at the beginning of the Length column. The grid is now sorted by Length in ascending order. If you click the Length a second time a blue down arrow will appear and the grid will sort in descending order. Clicking on other column titles will sort the grid by that column.

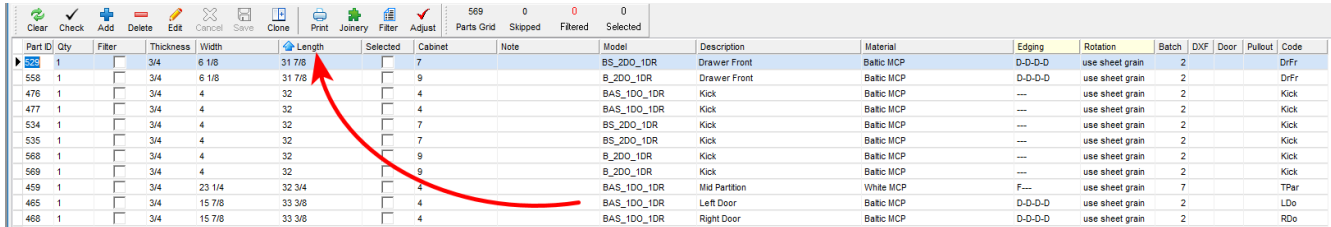

Part ID	Qty	Filter	Thickness	Width	Length	Selected	Cabinet	Note	Model	Description	Material	Edging	Rotation	Batch	DXF	Door	Pulout	Code
558	1		3/4	6 1/8	31 7/8		7		BS_2DO_IDR	Drawer Front	Batic MCP	D-D-D-D	use sheet grain	2				DfFr
476	1		3/4	4	32		4		BS_2DO_IDR	Drawer Front	Batic MCP	D-D-D-D	use sheet grain	2				DfFr
477	1		3/4	4	32		4		BAS_1DO_IDR	Kick	Batic MCP	---	use sheet grain	2				Kick
534	1		3/4	4	32		7		BAS_1DO_IDR	Kick	Batic MCP	---	use sheet grain	2				Kick
535	1		3/4	4	32		7		BS_2DO_IDR	Kick	Batic MCP	---	use sheet grain	2				Kick
568	1		3/4	4	32		9		B_2DO_IDR	Kick	Batic MCP	---	use sheet grain	2				Kick
569	1		3/4	4	32		9		B_2DO_IDR	Kick	Batic MCP	---	use sheet grain	2				Kick
459	1		3/4	23 1/4	32 3/4		4		BAS_1DO_IDR	Mid Partition	White MCP	F---	use sheet grain	7				TPar
465	1		3/4	15 7/8	33 3/8		4		BAS_1DO_IDR	Left Door	Batic MCP	D-D-D-D	use sheet grain	2				LDo
468	1		3/4	15 7/8	33 3/8		4		BAS_1DO_IDR	Right Door	Batic MCP	D-D-D-D	use sheet grain	2				RDo

8 Edging

Edging Editor

With CutMaster Plus double clicking on a cell in the Edging column brings up an Edging Editor. You can change the edging by clicking on 1 of the 4 buttons. Each button represents one edge on the part. Each buttons caption represents the type of edging by the edging's short code (explained with the Edging Grid immediately following the Editor).

Colored labels below each button represent the report color of the edge. These colors are not Sketchup textures, they are used to distinguish each edge type on various reports. The number that appears below the edge is the thickness of the edging and will be subtracted from each parts length or width.

The order of the parts edging is from that parts point of view. In this example the part is a Top where the sides are sandwiched between the Top and the Bottom therefore the left and right edges are also edge banded. The first edge is the front of the part. The second is the back (no edging). The third is right side and the fourth is the left side. Notice that this cabinet is finished on the left side but not on the right side.

Parts are oriented in the cut plan so that the side of the part requiring the majority of joinery is always placed upwards. This means that Tops and Bottoms are reversed as are Left and right Sides. Also drawer sides are reversed and drawer fronts and backs are reversed.



To change an edging or to remove an edging click on one of the four buttons. This brings up the Edging Grid.

Edging Grid

The Edging Grid has two purposes. The first is to manage edgings and the second purpose is when editing a parts edging. You then select an edge and Click Select.

Notice that the first entry is colored black and has no Description. Use this selection to remove edging from a parts edge when editing parts edging.

Edging							
+ Add - Delete ✎ Edit 💾 Save ✕ Cancel 🖨 Print 🔒 Close 15 Edging							
Code	Full Name	Description	Cost	Thickness	Color	Symbol	Extra
D555	No banding		0.00	0	Black	Ellipse	0
DB	Drawer Bottom	White Tape	0.00	0	Orange	None	2
DE	Drawer Edging	White Tape	0.00	0	Red	Plate	2
DI	Divider	White Tape	0.00	0	Cyan	Cross	2
DS	Drawer Side Edging	White Tape	0.00	0	Black	Line	2
▶ F	Finished	PVC	0.00	3	Dark Green	Triangle	2
H	Hanger	White Tape	0.00	0	Green	Arc	2
PS	Pullout Side Edging	White Tape	0.00	0	Black	Line	2
S	Shelves	White Tape	0.00	0	Pink	Arc	2
SR	Sink Stretcher	Solid Oak	0.00	0	Purple	Line	2
ST	Stretcher	White Tape	0.00	0	Yellow	Rectangle	2

9 Joinery Form

The Joinery is available on the Parts Grid as a CutMaster Plus feature in preparation for DXF support. Various drop down list controls and or text editors will show up based on the part type. For instance a Shelf does not require any more information whereas a Side requires drawer placement etc. so that the proper holes are set up in the DXF file.

These values are usually exactly what CutMaster requires. However you can edit them if you wish.

Joinery

Part Type: Part ID:
 Cabinet Type: Cabinet:
 Frame Type: Base:
 Rule:
 Len: Wd: Th:

Attributes:

<input checked="" type="checkbox"/> Has Bottom	<input checked="" type="checkbox"/> Slide Back	<input type="checkbox"/> Integrate Kicks
<input type="checkbox"/> Standard Top	<input checked="" type="checkbox"/> Extend Back	<input type="checkbox"/> Has Legs
<input type="checkbox"/> Split Top	<input type="checkbox"/> Left Back	<input type="checkbox"/> Merged Side
<input checked="" type="checkbox"/> Front Stretcher	<input type="checkbox"/> Right Back	<input checked="" type="checkbox"/> Has Left Side
<input checked="" type="checkbox"/> Has Back	<input type="checkbox"/> Has Sink Rail	<input checked="" type="checkbox"/> Has Right Side

Parameters | **Doors / Drawers** | Pullouts | Closets | Fixed Shelves | Adjustable Shelves | Miscellaneous | Hinges | Clusters | Handless

Stretchers	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="18"/>	<input type="text" value=""/>
Corners	<input type="text" value="0"/>	<input type="text" value="18"/>	<input type="text" value="0"/>	<input type="text" value="0"/>
	<input type="text" value="0"/>	<input type="text" value="264"/>	<input type="text" value="0"/>	<input type="text" value=""/>
Drawers	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>
	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>
Gaps	<input type="text" value="0"/>	<input type="text" value="3"/>	<input type="text" value="0"/>	<input type="text" value="24697"/>
Tall	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>
Legs	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>
	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>

Here is the Doors / Drawers section.

Parameters | **Doors / Drawers** | Pullouts | Closets | Fixed Shelves | Adjustable Shelves | Miscellaneous | Hinges | Clusters | Handless

	Position Bottom Edge	Actual Height	Hinged	Drawer Box Depth	Drawer Box Short Code	Drawer Box Height	Drawer Overhang
1	<input type="text" value="0"/>	<input type="text" value="765"/>	<input type="text" value="6"/>	<input type="text" value="0"/>	<input type="text" value=""/>	<input type="text" value="0"/>	<input type="text" value="0"/>
2	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>	<input type="text" value="0"/>	<input type="text" value="0"/>
3	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>	<input type="text" value="0"/>	<input type="text" value="0"/>
4	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>	<input type="text" value="0"/>	<input type="text" value="0"/>
5	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>	<input type="text" value="0"/>	<input type="text" value="0"/>
6	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>	<input type="text" value="0"/>	<input type="text" value="0"/>
7	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>	<input type="text" value="0"/>	<input type="text" value="0"/>
8	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>	<input type="text" value="0"/>	<input type="text" value="0"/>
9	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>	<input type="text" value="0"/>	<input type="text" value="0"/>

Here is the Pullouts section.

Parameters | Doors / Drawers | **Pullouts** | Closets | Fixed Shelves | Adjustable Shelves | Miscellaneous | Hinges | Clusters | Handless

	Position Bottom Edge	Actual Height	Drawer Box Depth	Placement	Drawer Box Short Code	Position Bottom Edge	Actual Height	Drawer Box Depth	Placement	Drawer Box Short Code
1	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>	7	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>
2	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>	8	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>
3	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>	9	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>
4	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>	10	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>
5	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>	11	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>
6	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>	12	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value=""/>

Here is the Closets section

Parameters	Doors / Drawers	Pullouts	Closets	Fixed Shelves	Adjustable Shelves	Miscellaneous	Hinges	Clusters	Handless
Code	<input type="text"/>	Code	<input type="text"/>	Code	<input type="text"/>				
Quantity	<input type="text" value="0"/>	Quantity	<input type="text" value="0"/>	Quantity	<input type="text" value="0"/>				
From Back	<input type="text" value="0"/>	From Back	<input type="text" value="0"/>	From Back	<input type="text" value="0"/>				
1	<input type="text" value="0"/>	1	<input type="text" value="0"/>	1	<input type="text" value="0"/>				
2	<input type="text" value="0"/>	2	<input type="text" value="0"/>	2	<input type="text" value="0"/>				
3	<input type="text" value="0"/>	3	<input type="text" value="0"/>	3	<input type="text" value="0"/>				
4	<input type="text" value="0"/>	4	<input type="text" value="0"/>	4	<input type="text" value="0"/>				

Here is the Fixed Shelves section

Parameters	Doors / Drawers	Pullouts	Closets	Fixed Shelves	Adjustable Shelves	Miscellaneous	Hinges	Clusters	Handless		
	Position Bottom Edge	Placement	Inset	Position Bottom Edge	Placement	Inset	Position Bottom Edge	Placement	Inset		
1	<input type="text" value="95"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>	9	<input type="text" value="855"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>	17	<input type="text" value="1615"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>
2	<input type="text" value="190"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>	10	<input type="text" value="950"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>	18	<input type="text" value="1710"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>
3	<input type="text" value="285"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>	11	<input type="text" value="1045"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>	19	<input type="text" value="1805"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>
4	<input type="text" value="380"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>	12	<input type="text" value="1140"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>	20	<input type="text" value="1900"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>
5	<input type="text" value="475"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>	13	<input type="text" value="1235"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>	21	<input type="text" value="1995"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>
6	<input type="text" value="570"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>	14	<input type="text" value="1330"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>	22	<input type="text" value="2090"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>
7	<input type="text" value="665"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>	15	<input type="text" value="1425"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>	23	<input type="text" value="2185"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>
8	<input type="text" value="760"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>	16	<input type="text" value="1520"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>	24	<input type="text" value="2280"/>	<input type="text" value="-1"/>	<input type="text" value="0"/>

Here is the Adjustable Shelves section

Parameters	Doors / Drawers	Pullouts	Closets	Fixed Shelves	Adjustable Shelves	Miscellaneous	Hinges	Clusters	Handless
	Position Bottom Edge	Placement	Inset	Position Bottom Edge	Placement	Inset	Position Bottom Edge	Placement	Inset
1	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	9	<input type="text" value="0"/>	<input type="text" value="0"/>			
2	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	10	<input type="text" value="0"/>	<input type="text" value="0"/>			
3	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	11	<input type="text" value="0"/>	<input type="text" value="0"/>			
4	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	12	<input type="text" value="0"/>	<input type="text" value="0"/>			
5	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>						
6	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>						
7	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>						
8	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>						

Here is the Miscellaneous section

Parameters	Doors / Drawers	Pullouts	Closets	Fixed Shelves	Adjustable Shelves	Miscellaneous	Hinges	Clusters	Handless
Kick Height	1	<input type="text" value="0"/>		Back Inset	11	<input type="text" value="47/64"/>	Combined Gap Adjust	21	<input type="text" value="25/64"/>
Notch Width	2	<input type="text" value="2 23/64"/>		Omit Kicks	12	<input type="text" value="0"/>	Combined Door Banding	22	<input type="text" value="0"/>
Stretcher Width	3	<input type="text" value="3 49/64"/>		Back Thickness	13	<input type="text" value="47/64"/>	Slab Drawer Front Width	23	<input type="text" value="0"/>
Stretcher Adjust	4	<input type="text" value="0"/>		Dado Hanger	14	<input type="text" value="1"/>	Slab Door Width	24	<input type="text" value="0"/>
Sink Stretcher Width	5	<input type="text" value="-1"/>		Back Height	15	<input type="text" value="28 29/64"/>	Top Style	25	<input type="text" value="1"/>
Bottom Offset	6	<input type="text" value="0"/>		Back Vertical Position	16	<input type="text" value="1/2"/>	Bottom Style	26	<input type="text" value="0"/>
Hanger Width	7	<input type="text" value="28 47/64"/>		Back Dado	17	<input type="text" value="15/64"/>	Split Part	27	<input type="text" value="0"/>
Tip Out Info	8	<input type="text" value="0"/>		Dado	18	<input type="text" value="15/64"/>			
Case Thickness	9	<input type="text" value="47/64"/>		Hanger Width Bottom	19	<input type="text" value="47/64"/>			
Reduce Back Height	10	<input type="text" value="0"/>		Back has Horizontal Grain	20	<input type="text" value="0"/>			

Here is the Hinges section

Parameters	Doors / Drawers	Pullouts	Closets	Fixed Shelves	Adjustable Shelves	Miscellaneous	Hinges	Clusters	Handless
-1	-1	0	0	0					
-1	-1	0	0	0					
-1	-1	0	0	0					

Here is the Clusters section

Parameters	Doors / Drawers	Pullouts	Closets	Fixed Shelves	Adjustable Shelves	Miscellaneous	Hinges	Clusters	Handless
-1	0								
0	0								
0	0								
0	0								

Here is the Handless section

Parameters	Doors / Drawers	Pullouts	Closets	Fixed Shelves	Adjustable Shelves	Miscellaneous	Hinges	Clusters	Handless
J Profile Height	0								
C Profile Height	0								
Profile Width	0								
Notch 1	0								
Notch 2	0								
Notch 3	0								
Notch 4	0								

CabMaker sends these values over to CutMaster during the import.

10 DXF Layout

The View Dxf button is available with CutMaster Plus. You can toggle between Standard View and DXF view. The DXF button is only enabled when in this view. The print button will honor the current view choice. In this example the Dxf view is for thumbnail 2. You can click on a part in the list or click on the part in the layout. The current part will display as a hatch and the part will become selected in the list.


You can also right click on the selected part and choose CAD. If you have created the dxf files and have chosen 1 part per dxf then your CAD will open with that part.

If you did not choose 1 part per dxf then you can right click on the selected thumbnail and open the nested dxf in the CAD. CAD is used to modify the selected part prior to running CNC.

You can double click on the part line and it will take you to the Parts Tab and you will be on the correct part.

You can also Left Click on a part while holding down either the Shift Key, the Ctrl Key or the Alt Key.

- Shift Key – Left Mouse Button will take you to the Configuration System.
- Ctrl Shift Keys – Left Mouse Button will take you to the Joinery Form.
- Alt Key – Left Mouse Button will take you to the Parts Tab.
- Escape – will clear the highlighting on the chosen part.
- Left Mouse – will clear the chosen part if already highlighted or will choose the part if not already highlighted and at the same time clear a different part if a different part was highlighted.

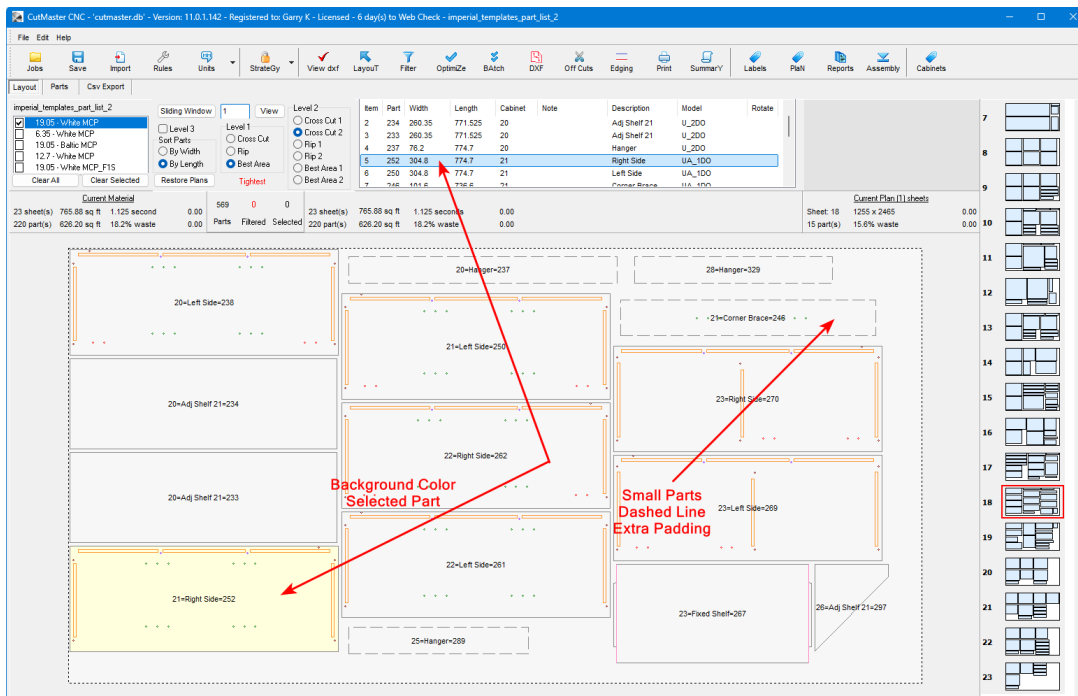

11 Grid Traversal

You may also use the Tab key and or Shift Tab key to move between columns in a grid. If you are on the last column in a grid then the Tab key moves you to the next record.

Home (or Ctrl Left) and End (or Ctrl Right) keys move you to the first or last column.

Page Up and Page Down keys move you a page full of records.

Ctrl Page Up (or Ctrl Up) and Ctrl Page Down (or Ctrl Down) keys move you to the first or last record in the visible window.

Ctrl Home and Ctrl End keys move you to the very first or very last record.


In Grid Editing

There are a few things to mention about in grid editing.

1. Ctrl-Delete will delete the current record directly and bypass the Delete Confirmation.
2. The parts grid "Thickness" column is read only. The thickness value is set after you choose a material.
3. The parts grid "Material" column uses a drop down list. The drop down button appears on the right had side when you enter the column. The drop down list contains a complete list of material choices.
4. The sheet grid "Has Grain" column displays a check box. You can use the down arrow key in conjunction with the space bar to move quickly down the grid and to toggle the check marks. You can also use click the left mouse button within the checkbox to toggle the check mark.
5. All editable measurement columns, "Width", "Thickness" and "Length" have built in expression evaluators.
6. If data entry is set to inches you can enter expressions such as
 - a) $8 * 12$
 - b) $23 \frac{1}{2} + \frac{1}{8}$
4. If data entry is set to millimeters you can enter expressions such as
 - a) $800 - 38$
 - b) $1200 / 5$

Main Options Tab


There are a number of options available for CutMaster.

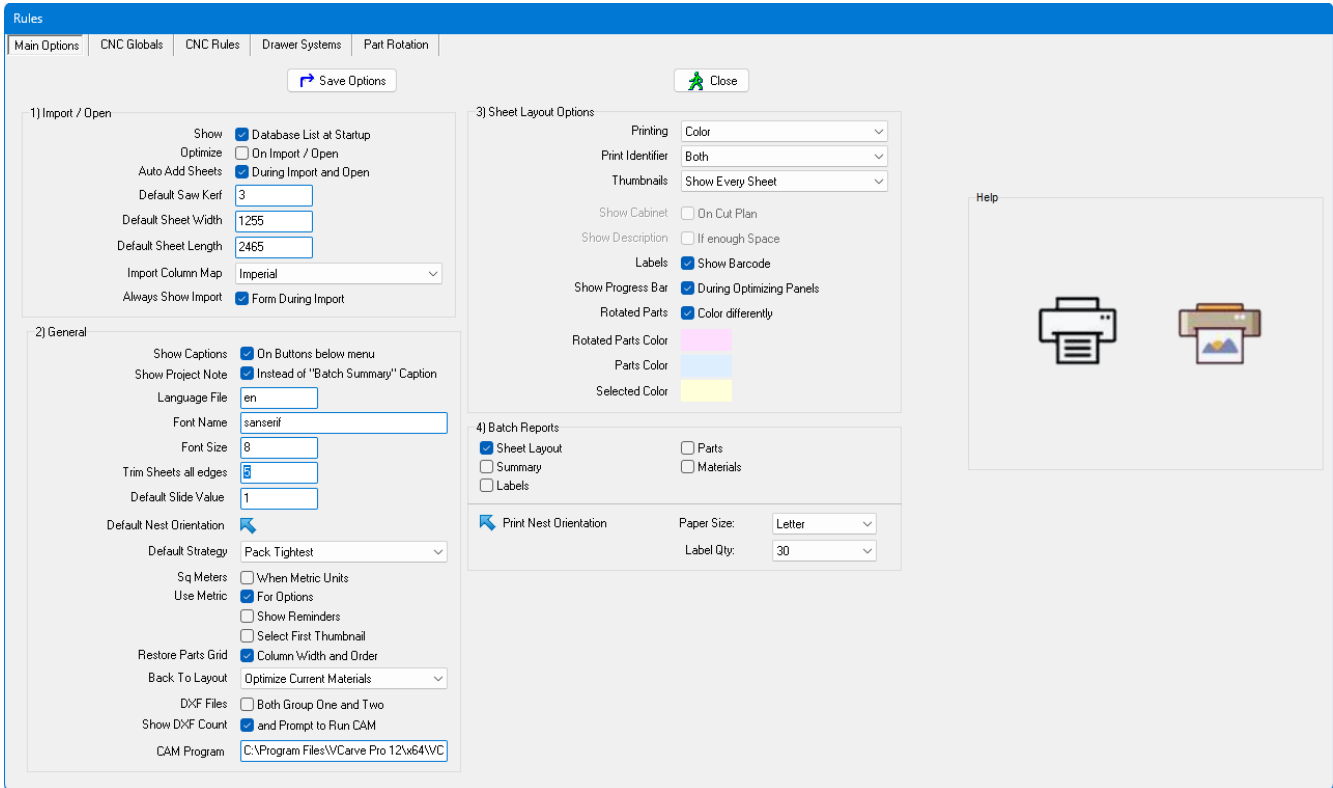

1) Import / Open


1 Show Database List at startup

Check this if you want to choose a Database at startup. You may want to switch between Metric and Imperial or look at an older backed up Database.




2 Optimize on Import / Open

Check "Optimize on Import / Open" if you want the CutMaster to optimize all materials every time you open a job or import.

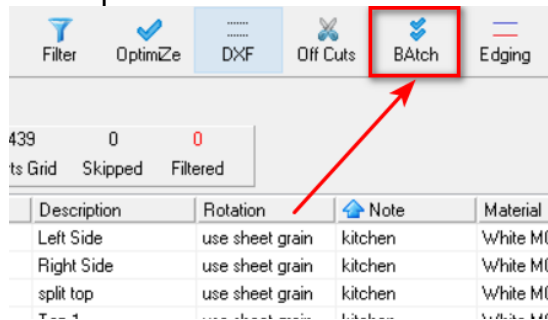

3 Auto Add Sheets During Import and Open


If you import or open a job that has material that is not in the sheet list then you can have CutMaster automatically add the required material to the sheet grid.

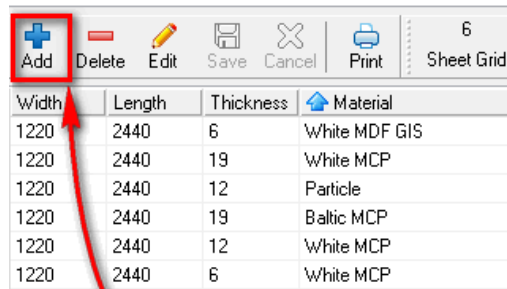

Width	Length	Thickness	Material
1220	2440	6	White MDF GIS
1220	2440	19	White MCP
1220	2440	12	Particle
1220	2440	19	Baltic MCP
1220	2440	12	White MCP
1220	2440	6	White MCP


4 Default Saw Kerf

Saw Kerf is the thickness of the saw blade or router bit. CutMaster will apply this value for the Kerf of each newly added sheet.

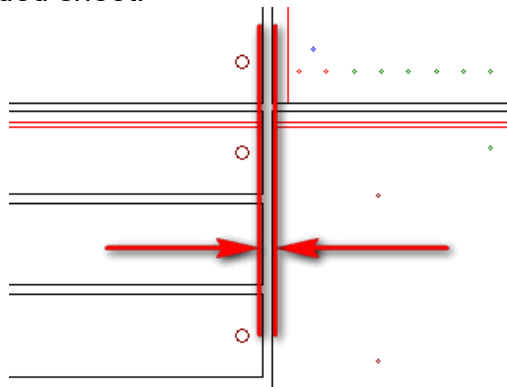


5 Default Sheet Width

When Auto Add Sheets is checked this is the Default Width for the added sheet.

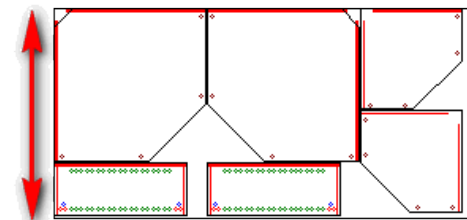

6 Default Sheet Length

When Auto Add Sheets is checked this is the Default Length for the added sheet.

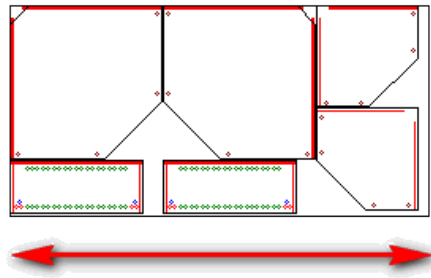

7 Import Column Map

This is the name of the import configuration.



8 Always Show Import

Check this if you want the import map form to always show during an import. If you are using CutMaster from Cabmaker32 then you will probably want to leave this un-checked.

Importing - C:\Users\Owner\Documents\simple_integrated_part_list_2.csv


Map File: Metric
Delimiter: .
 First Row has Column N
Units: Millimeters Inches

Columns	Import Col Names	Example Data	Default Value	Columns	Import Col Names	Example Data	Default Value
Part ID	#	1		Tall	Tall	II	
Quantity	Quantity	1		Rule	Rule	metric_rules	
Thickness	Thickness	18.0000		Doors	Doors	100.0=765.0=1=0.0=0.0=0.0	
Width	Width	576.0000		Fixed	Fixed	III	
Length	Height	750.0000		Pullouts	Pullouts	III	
Material	Material	White MCP		Shelves	Shelves		
Description	Item	Back		Note	Note	bathroom	
Edging	Edging	--B-		Model	Model	b-2d	
Part Type	Part Type	10		Job	Job	simple_integrated	
Cabinet Type	Cab Type	0		Values	Values	118.00.0118.0118.0118.0	
Frame Type	Frame Type	0		Legs	Legs	II	
Base	Base	y		Hinges	Hinges		
Cabinet	Cabinet	1		Clusters	Clusters	-1=0	
Stretchers	Stretchers	0III		More Edging	More Edging		
Corners	Corners	0.0118.00.0000.00.00		User Flag	User Flag		
Drawers	Drawers	III		Handless	Handless		
Gaps	Gaps	0.003.000.0024889		Closets	Closets		

2) General

1 Show Captions On Buttons below menu

Check Show Captions displays captions on the main form buttons. Un-Check for small buttons.

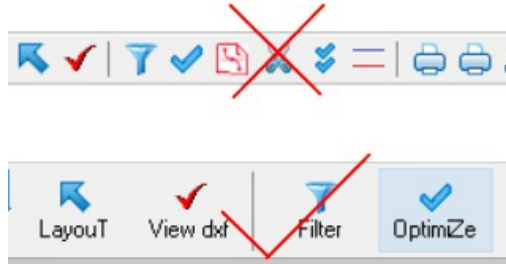

2 Show Project Note instead of “Batch Summary” Caption

The layout screen can show the project note instead of the caption “Batch Summary”.

3 Language File

The default language is en – English. You can choose other language files (some are partially created). Fr – French, ru – Russian etc. You can also help work on the language files and I will distribute them with the CutMaster Installer.

4 Font Name


Choose the font that you would like to use. The recommendation is Arial.

5 Font Size

Choose the font size that you would like to use. The recommendation is 8.


6 Trim Sheets all edges

Trim Sheets is the amount you need to trim from all 4 sides of sheets.

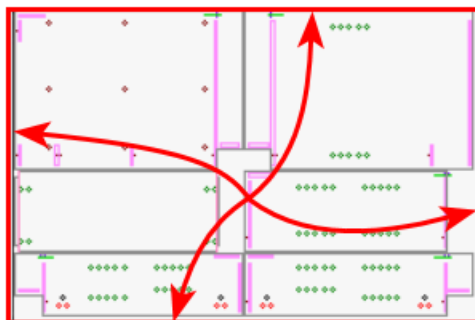

7 Default Slide Value

If Slide value is set to 0 then it is ignored otherwise this is the number of cabinets to provide to the optimizer. When a cabinet is completely optimized the the optimizer picks the next cabinet to add in for optimization.

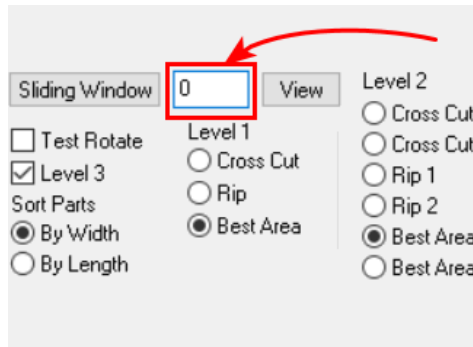


8 Default Nest Orientation

Optimization will use this Orientation for new materials.




9 Default Strategy

Default Strategy is used at startup, during Imports and on New Job.

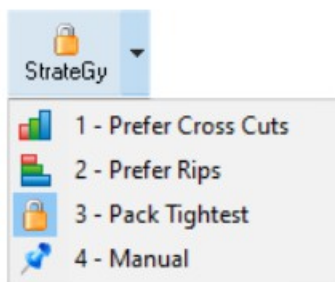


10 Sq Meters When Metric Units

When units are set to Metric you can have summaries in sq ft (unchecked) or in sq Meters (checked).

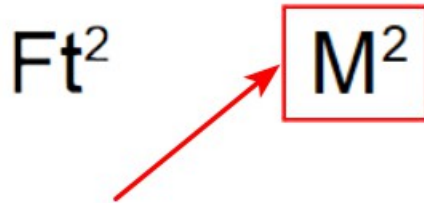


11 Use Metric For Options

You can force options to remain metric regardless of report units.

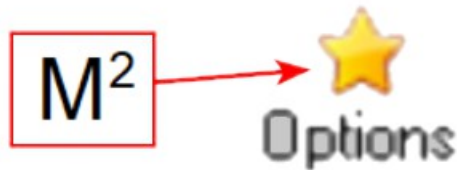

12 Show Reminders

You can turn off reminders such as "Have you checked Edging thickness?".

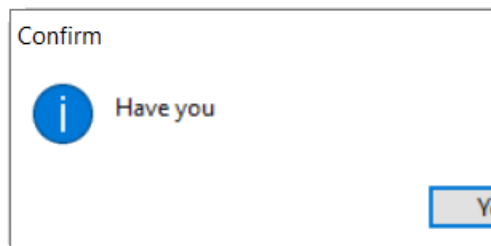


13 Select First Thumbnail

After optimization you can have CutMaster jump to the first thumbnail instead of the last one.



14 Restore Parts Grid Column Width and Order


Saves the Column widths and Column order at cutmaster shut down and restores the next time cutmaster starts.

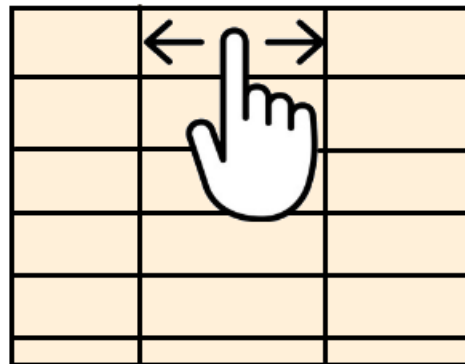

15 Back to Layout

After making an edit in the Parts Grid you can choose one of the following

- 0 = No Optimization
- 1 = Optimize Current Material
- 2 = Batch Optimize

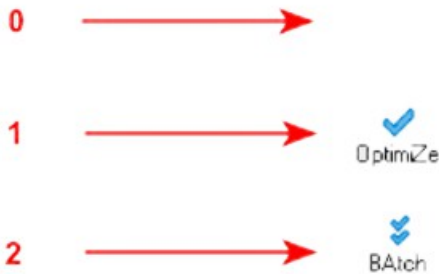

16 DXF Files Both Group One and Two


Use this to have two separate DXF Files. Use 1 for Nested and 1 for One Part per DXF.

17 Show DXF Count and Prompt to Run Cam

Optionally turn off the total count of created DXF Files.

18 CAM Program

Type in the path and the name of your CAM program.

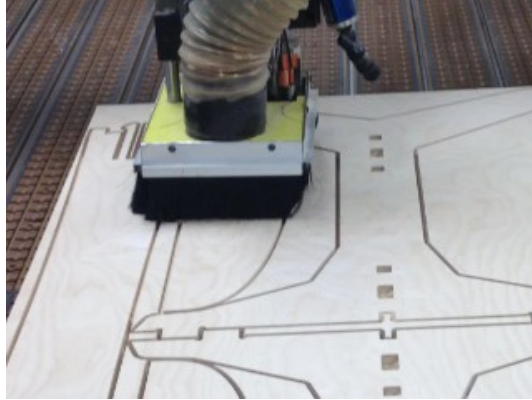

3) Sheet Layout Options

1 Printing

Choose B&W or Color for printouts.




2 Print Identifier

CutMaster will use the “Cabinet #” or CutMaster will use it's own “item #”. The “Item #” starts at 1 for each sheet.




3 Thumbnails

Choose “Unique Cut Plan”, “Unique Routing Plan” or “Show Every Sheet”. “Unique Cut Plan” reduces paper by combining cut patterns that are the same. “Unique Routing Plan” is for a future release and for dxf files.

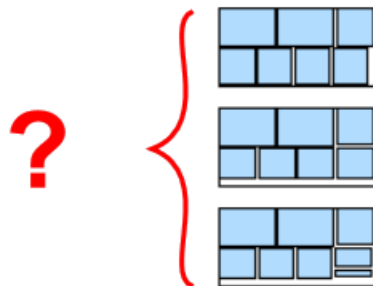


4 Labels

Check this to print or view barcodes for part labels.

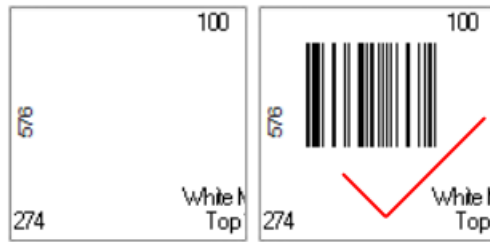


5 Show Progress Bar

Show Progress Bar lets you choose to display the progress bar or not.




6 Rotated Parts

Rotated Parts lets you visually identify which parts have been rotated through color.

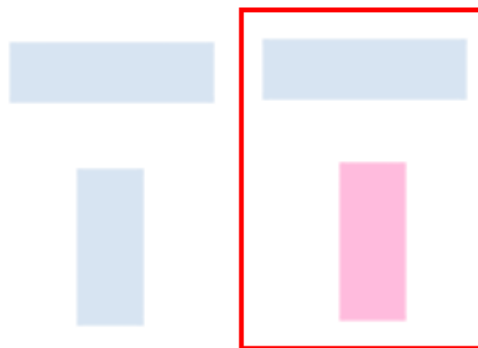


7 Rotated Parts Color

If Color Rotated Parts is checked then this is the color that you want to use for Rotated Parts.

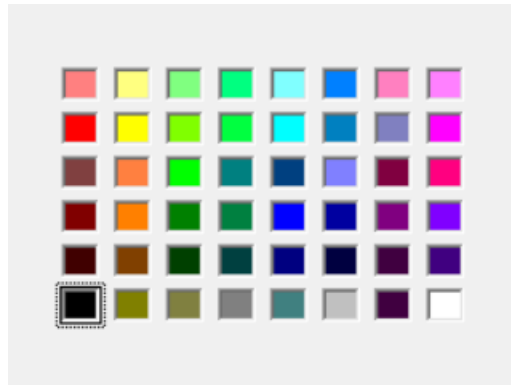


8 Parts Color

This is the Color you want to use for non rotated Parts.

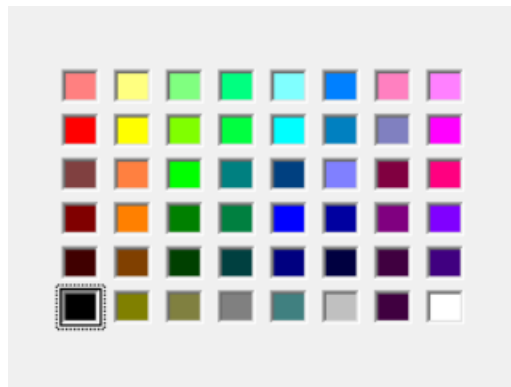

9 Selected Color

This is the Color you want for the one selected part.

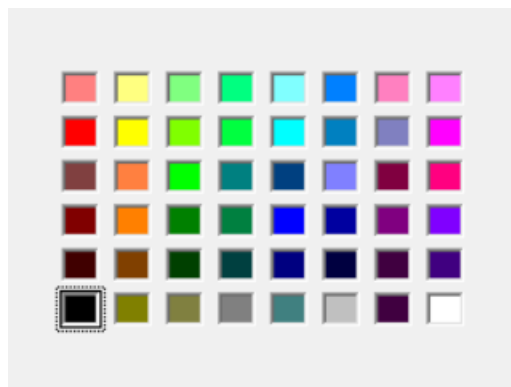

4) Batch Reports

Check each report that you want to include in the Batch of Reports.


1 Print Nest Orientation

Adjust the Orientation to simplify working with CNC routers.




2 Paper Size

Printed reports can be in either Letter format or A4 format.

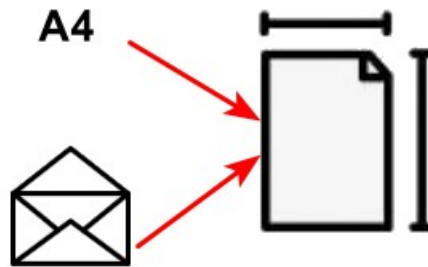

3 Label Qty


This is the number of labels per sheet. Letter supports 30. A4 supports 24 or 30. Additionally A4 supports L7159.

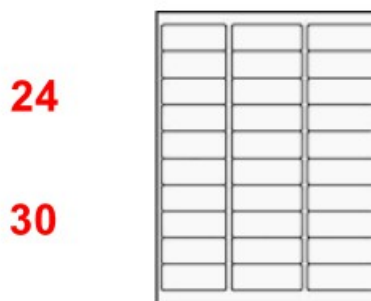

CNC Globals Tab

The CNC Globals section contains Switches, Flags, Layers and Slides.


Switches Tab

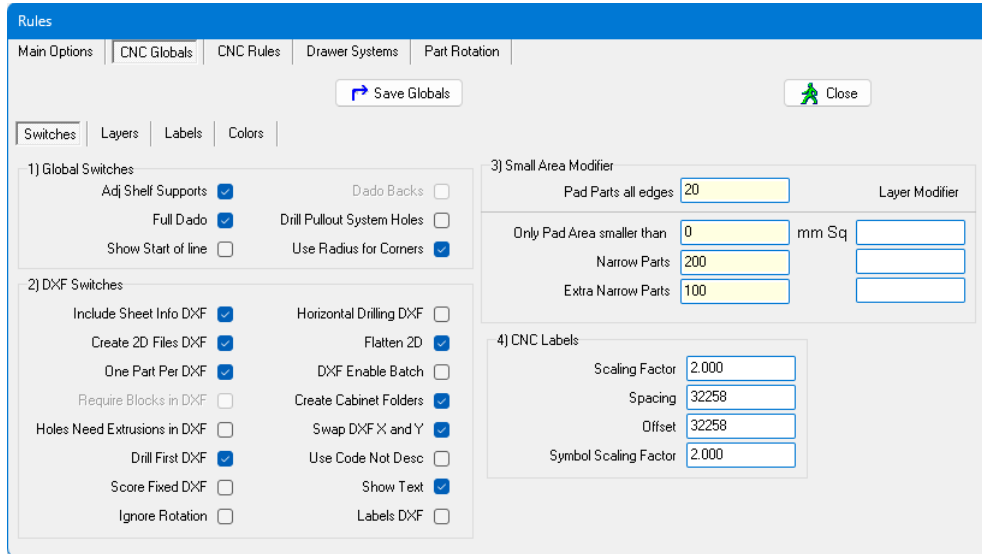

1) Global Switches


1 Adj Shelf Supports

Check Adjust Shelf Supports if you want the End Holes setting to be from the last drawer instead of from the Top Edge of the Side Panel.

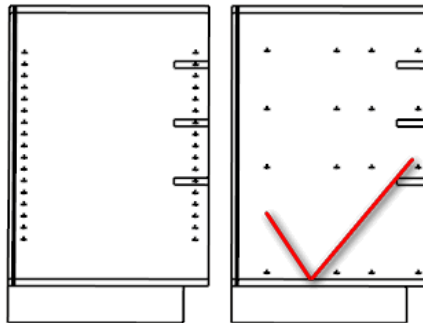


2 Full Dado

Check this if your blind dado's are the same width as the thickness of the case material.

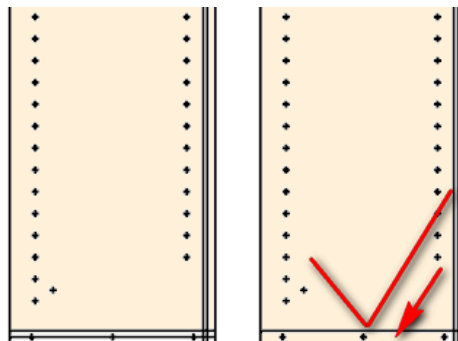

3 Show Start of Line

This option puts a small red slash at the starting point of single lines (not pockets) and indicates directionality of the CNC rout.

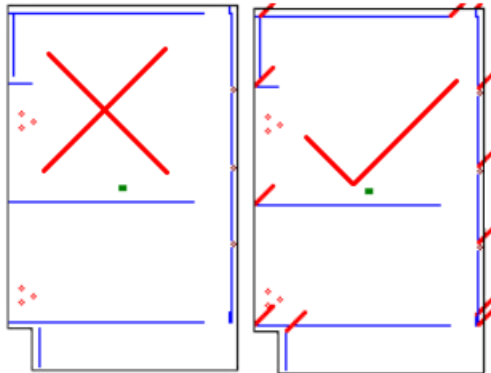


4 Dado Backs

This is currently disabled

5 Drill Pullout System Holes

Check this if you want pullout drilling for side panels.

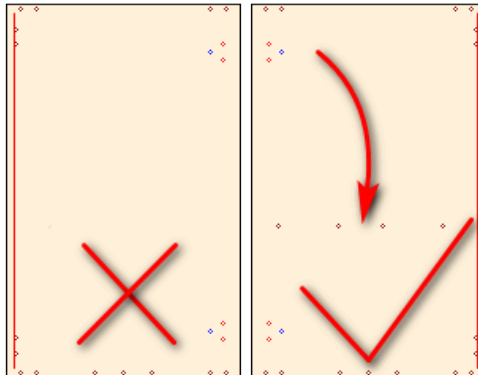


6 Use Radius for Corners

2) DXF Switches


1 Include Dxf Sheet Info

This setting will include the sheet information in the Dxf file when checked.

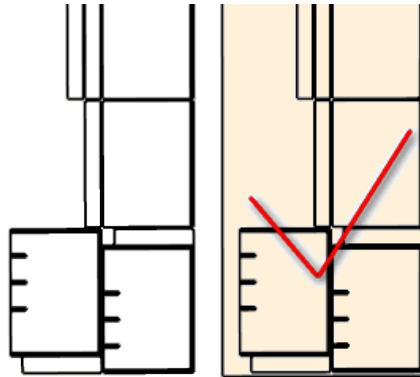


2 Create 2D Dxf Files

You now have the option to create 2D Dxf Files. The default (unchecked) is 3D.

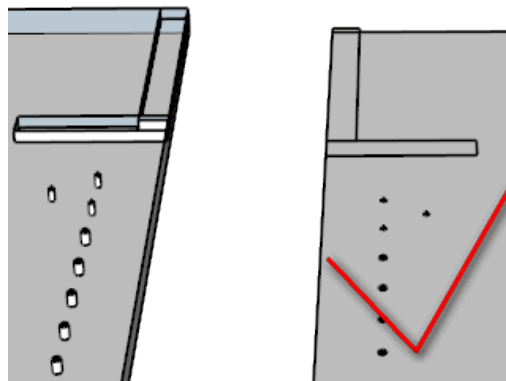

3 One Part Per DXF

Some cabinet shops cut parts with a saw and rout parts one at a time. In this case check this setting and you will get one part per DXF file. DXF will also include horizontal drilling if DXF is 3D and "One Part Per DXF" is checked.

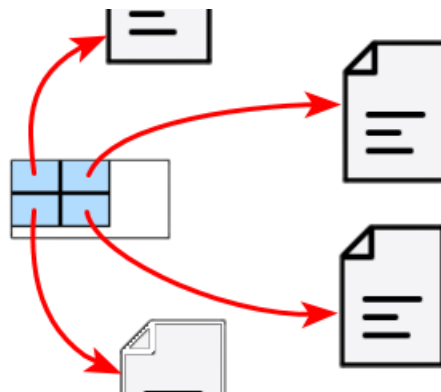


4 Require Blocks in DXF

Some CAM software requires blocks in DXF. This is currently disabled


5 Holes Need Extrusions in DXF

Some CAM software requires 210, 220 and 230 codes for drilling.

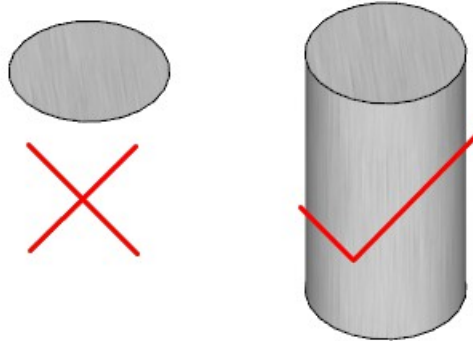


6 Drill First DXF

Some CAM software chooses tooling order based on DXF order. In this case nested solutions usually want to do all the drilling before cutting out the parts whereas One part per DXF usually wants to trim the part first.

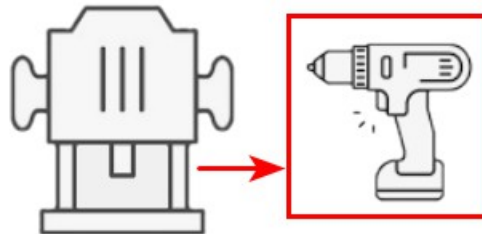


7 Score Fixed DXF

Some manufacturers use a score line to line up Fixed shelves and Drawer Stretchers.

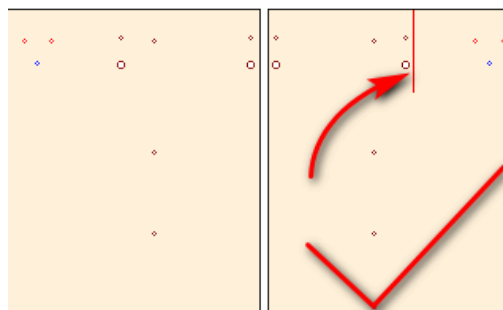


8 Ignore Rotation

This setting overrides the grain direction in the Sheet Grid.

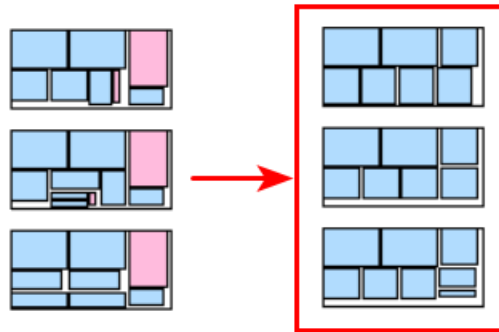


9 Horizontal Drilling DXF

Some CNC machines are able to drill horizontal holes. Horizontal Drilling is only partially supported.

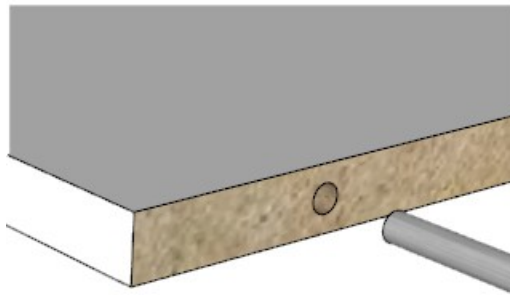


10 Flatten 2D

This forces all geometry to Z axis 0.

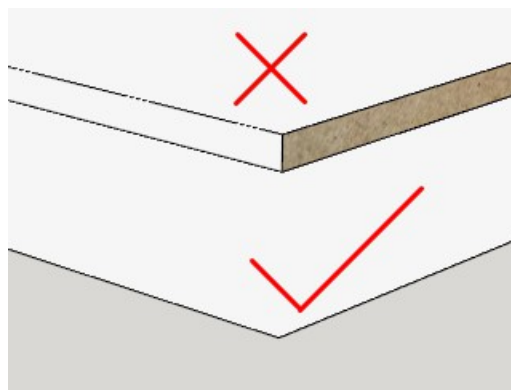

11 DXF Enable Batch

Using the filter you can create small batches of DXF files – just what you can machine today.

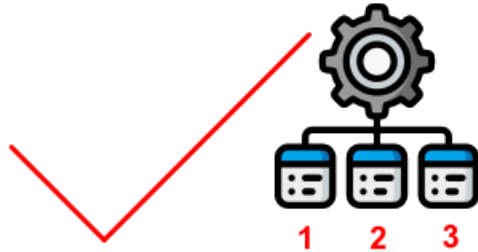


12 Create Cabinet Folders

This option organizes all DXF files and creates folders for each cabinet and places the DXF files into the appropriate folder. Cabinets without Cabinet Number have their DXF's placed into the projects root.




13 Swap DXF X and Y

Some CAM software such as Vcarve want X and Y swapped.

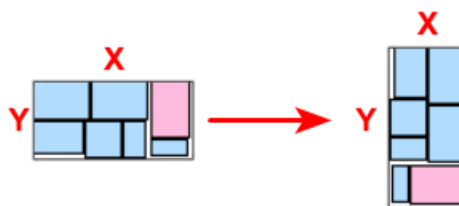

14 Use Code not Desc


There is a Short Code that you can use instead of part description. You can enter Short Codes in the next section "Flags".

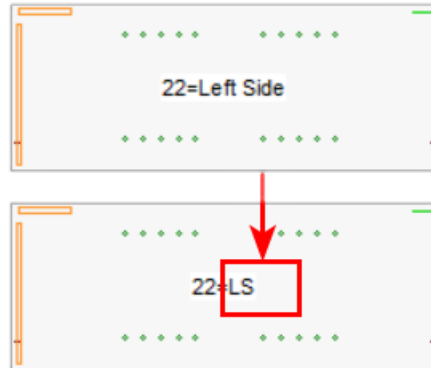

15 Show Text


You can turn off labelling parts for the DXF and Plan view.

Additionally this switch will create material folders for nested DXF's

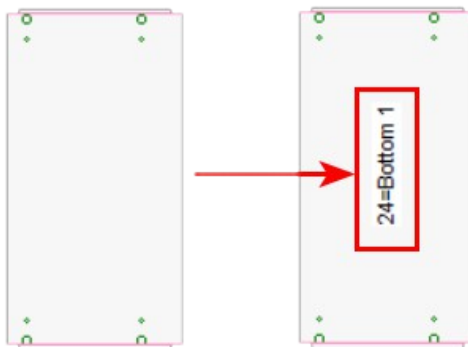

16 Labels DXF


Some shops prefer to have the CNC score the labeling information on to the various parts. You can choose where the label goes and also choose which parts you do not want labels.

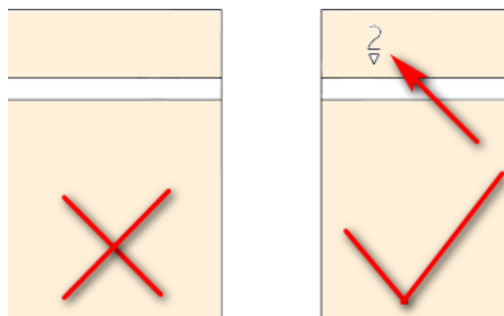

3) Small Area Modifiers


1 Pad Parts all edges

Trim Parts is the amount of extra room that you want to add to all 4 edges of Parts. If you set it to 1/8" then CutMaster adds 1/4" to the width and to the length of each part.

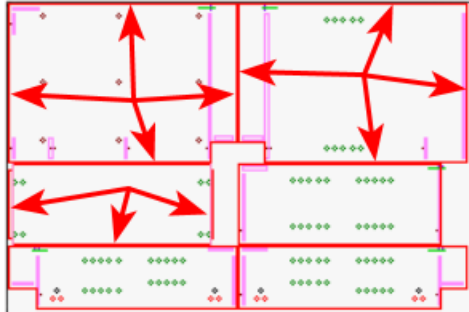


2 Only Pad Area smaller than

This provides extra space for small parts so the CNC router doesn't grab the part and throw it across the room.

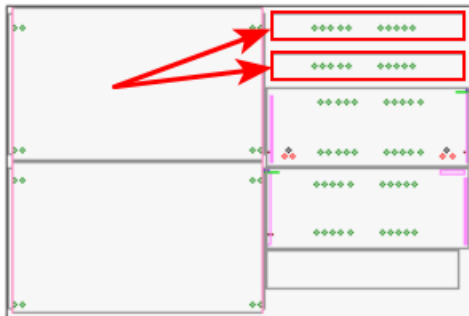


3 Small Area Modifier

Specify the modifier for parts with a Small Area.

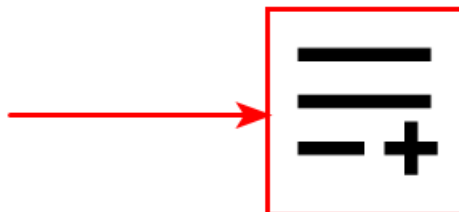


4 Narrow Parts

Specify the width of narrow parts and also specify the modifier which will be added to the end of the layer name.

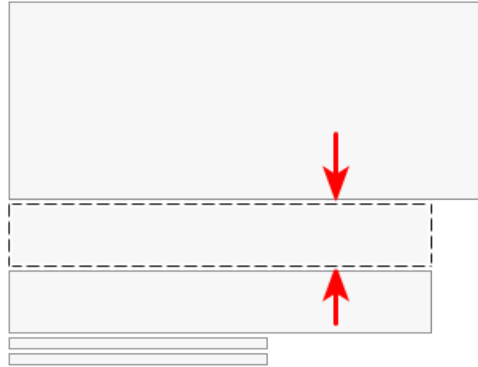


5 Narrow Parts Modifier

Specify the modifier for Narrow Parts.

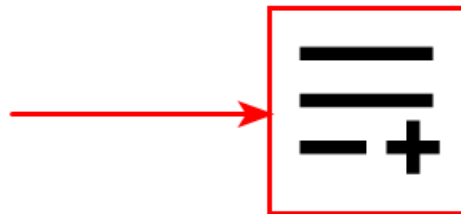


6 Extra Narrow Parts

Specify the width of extra narrow parts and also specify the modifier which will be added to the end of the layer name.

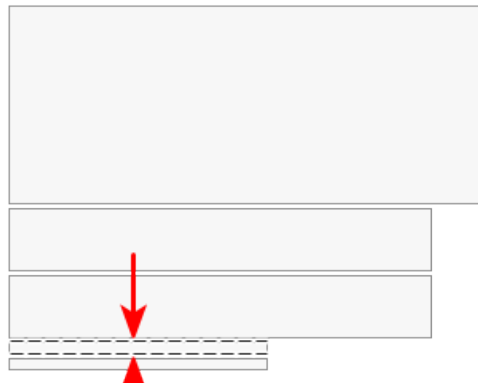

7 Extra Narrow Parts Modifier


Specify the modifier for Extra Narrow Parts.

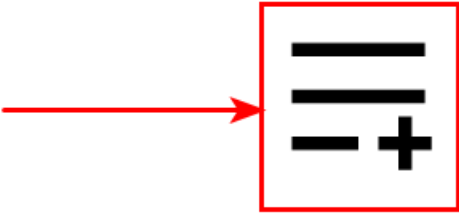

4) CNC Labels


1 Scaling Factor

Cabinet numbers by default are 3.5 mm wide and 6.5 mm high. As an example a scaling parameter of 1.25 scales the label to 4.375 mm wide and 8.125 mm high.

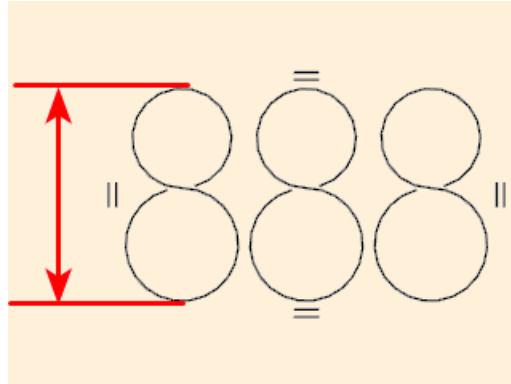


2 Spacing

This is the space between numbers and or symbols.

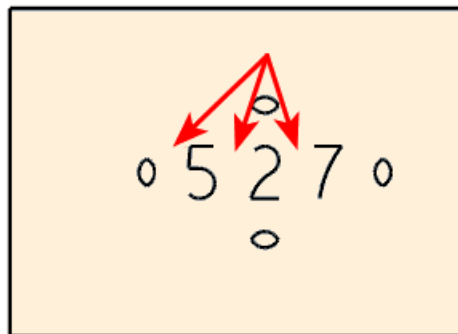


3 Offset

This is the space between the edge of the panel and the symbols.

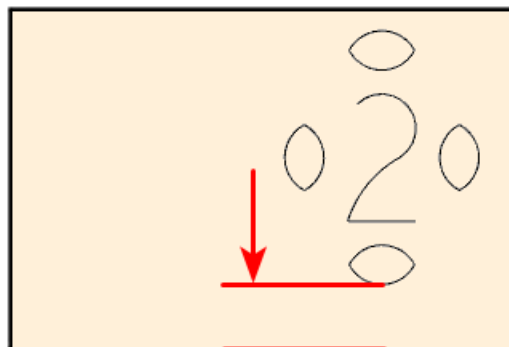

4 Symbol Scaling Factor

A value of 1 keeps the default size. 1.05 increases the size by this factor

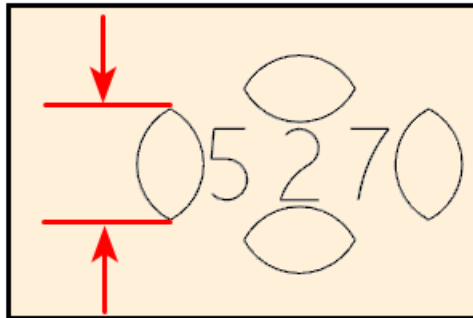

Layers Tab

CAM software such as VCarvePro use layer names to determine what machining feature uses which Toolpath.

The screenshot shows the 'Rules' dialog box with the 'Layers' tab selected. The dialog has a blue header with the title 'Rules' and a navigation bar with tabs: 'Main Options', 'CNC Globals', 'CNC Rules', 'Drawer Systems', and 'Part Rotation'. Below the navigation bar are two buttons: 'Save Globals' and 'Close'. The 'Layers' tab is active, and the 'Switches' section is expanded to show 'Layers'. The main area is titled 'Global Layer Names' and contains a list of 29 items, each with a number and a text input field. The items are arranged in two columns. The first column contains items 1 through 16, and the second column contains items 17 through 31. Each item's name is visible in the input field.

Item Number	Item Name	Value in Input Field
1	Box Parts	BoxParts
2	Box Blind Dado	BoxBlindDado
3	Blind Tenon	Tenon
4	Back Dado	BackDado
5	Shelf Holes	ShelfHoles
6	Hinge Holes	HingeHoles
7	3rd Hinge Hole	3rdHingeHole
8	Construction Holes	ConstructionHoles
9	Horizontal Construction Holes	HorizontalConstructionHoles
10	Dowel Holes	DowelHoles
11	Horizontal Dowel Holes	HorizontalDowelHoles
12	Labels	LabelTest
13	Closets	Closets
14	Cup Hinges	CupHinges
15	Cup Fastner	CupFastner
16	MiniFix	MiniFix
17	RaFix	RaFix
18	Rafix Dowel	CupConnector
19	Sheet	Sheet
20	Score	Score
21	Legs	Legs
22	Hangers	Hangers
23	Hanger Notch	HangerNotch
24	Side Pilot Holes	SidePilotHoles
25	Back Pilot Holes	BackPilotHoles
26	Rafix Bolt for Backs	RafixBolt
27	Rafix Tenon for Backs	RafixTenon
28	Separate Combined	Combined
29	Separate Combined Vertical	CombinedVertical
30	Pocket Screws for Backs	7
31	Shelf Holes for Mid Partition	10

1) Global Layer Names

There are 29 layer names. Some 3rd party CNC software require specific names. Change them here as required. Please note that some CNC software have naming rules and may require no spaces in the names.

Labels Tab

There are 39 optional Flags that you can preset during import. Additionally there are 39 Short Codes for Cutmaster to optionally use for DXF and Plan View.

		Short Code	X	Y			Short Code	X	Y		
Split Top	1	Back Left	SPT	0	0	Drawer Box Left Side	21	DSL	0	0	
Top	2	Back Left	TOP	0	0	Drawer Box Right Side	22	DSR	0	0	
Bottom	3	Back Left	BOT	0	0	Drawer Box Back	23	DNB	0	0	
Adj Shelves	4	Back Center	AJ	0	0	Drawer Box Front	24	DNF	0	0	
Fixed Shelves	5	Back Left	FX	0	0	Drawer Box Bottom	25	DBT	0	0	
Divider	6	Back Left	DIV	0	0	Left Stile	26	Front Left	LST	0	0
Left Side	7	Back Left	LS	0	0	Right Stile	27	Front Left	RST	0	0
Right Side	8	Back Left	RS	0	0	Mid Stile	28	Front Left	MST	0	0
Corner Brace	9	Back Left	DCS	0	0	Top Rail	29	Front Right	TRA	0	0
Blind Panel	10	Back Left	BPNL	0	0	Bottom Rail	30	Front Right	BRA	0	0
Back	11	Back Left	BK	0	0	Mid Rail	31	Front Right	MRA	0	0
Hanger	12	Back Right	NLR	0	0	Left Partition	32	Front Right	LPAR	0	0
Stretcher	13	Back Right	RLL	0	0	Finished Panel	33	Front Center	FPNL	0	0
Sink Stretcher	14	Back Right	SRL	0	0	Left Door	34	Front Center	LDO	0	0
Door Panel	15	Back Right	DOR	0	0	Right Door	35	Front Center	RDO	0	0
Drawer Front	16	Back Right	DWR	0	0	Tall Partition	36	Center	TPAR	0	0
Finished End	17	Back Right	FE	0	0	Pullout Finished Front	37	Center	PFT	0	0
Finished Back	18	Back Right	FBK	0	0	Right Partition	38	Center	RPAR	0	0
Filler	19		FIL	0	0	Doors/Drawers Combined	39	Center	SLAB	0	0
Toe Kick	20		TOE	0	0						

There are also 38 drop downs used for DXF labeling. There are 9 choices for positioning the label on the panels (including none).


- Back Left
- Back Right
- Back Center
- Front Left
- Front Right
- Front Center
- Center
- Center Left
- Center Right

There are also 39 optional check boxes which are used during parts import and may be useful by 3rd party CAM software such as V-Carve

The optional X and Y text boxes are for precision adjustment of DXF labeling. Negative values are converted to 0. Values that have no meaning for example "Center" are internally set to 0.

Colors Tab

1) System Colors

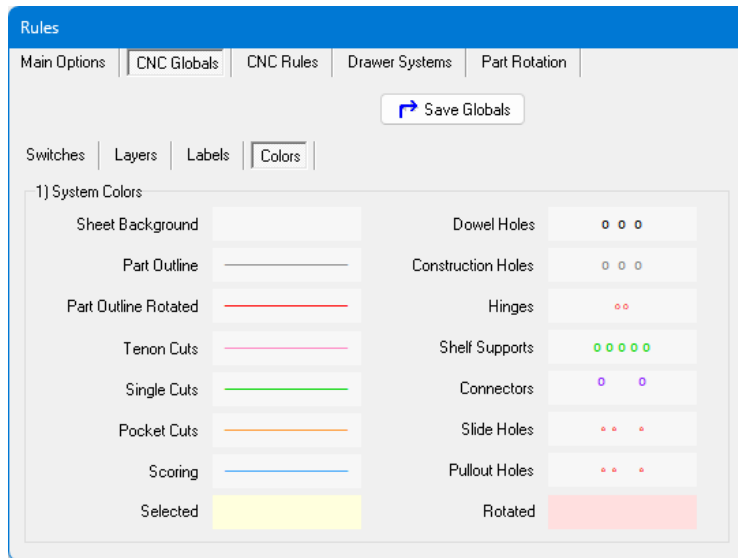

CNC Rules Tab

These are the general drilling and routing options for CNC routers.

General Tab

The screenshot shows the 'Rules' software interface with the 'General' tab selected. The '1) Back Rabbet / Dado' section is active, displaying the following settings:

- Depth: 8
- Dado Width: 9
- Bit Diameter: 8
- Horizontal Offset Adjust: 12
- Horizontal Notch: 0
- Top Notch: 0
- Bottom Notch: 0
- Corner Overrun Base: 75
- Corner Overrun Upper: 75

Other sections visible include:


- 2) Tenons: Tenon Thickness Adjust (0), Tenon Overrun (0), Gap In Tenon (26), Gap In Rail Tenon (26), Gap In Top Hanger Tenon (26), Gap In Bottom Hanger Tenon (26), Tenon Cut as Pocket (checked).
- 3) Combined - Door / Drawer: Depth (1), Auto Depth Adjustment (-1), Bit Diameter (5).
- 4) Blind Dado / Mortise: Dado Depth (8), Depth Adjustment (0), Dado Width (9), Bit Diameter (8), (Full) Front Notch (0), (Full) Back Notch (0), (Narrow) Front Notch (0), (Narrow) Back Notch (0), (Split) Front Notch (20), (Split) Back Notch (20).
- 5) Miscellaneous: Narrow Fixed Top Bottom < (200), Ignore c1 if Less than (450), Acute Angle Adjust (0), Corner Brace Adjust (0), Scoring Depth (0), Cut Corners for Braces (None), Dado Sides Only (unchecked), Width Top As Split (0).

Checkboxes at the bottom: Flip Tops (unchecked), Flip Fixed (checked), Flip Bottoms (checked), Reverse Single Cuts (checked).

1) Back Rabbet / Dado


1 Depth

This is the Depth of the Rabbet or Dado. Set this value to 0 if you do not want a back rabbeted or dadoed into the side panels and, top and bottom panels.

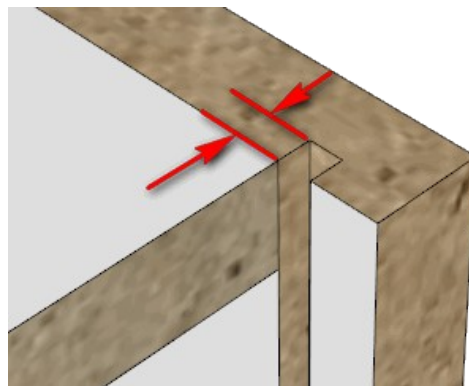


2 Dado Width

This is the width of the Dado or Rabbet. If you use dado's then set this value to the thickness of your backs and make sure that you set Inset Back option to a value. If you rabbet the sides and want the sides to extend past the back then set this value greater than the thickness of your back by the amount you want the sides to overhang the back. Also you must set the Inset Back value to 0 when you use a rabbet.

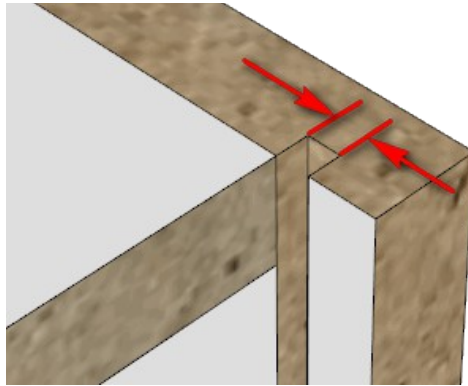


3 Bit Diameter

Single Line mortise uses 1/2 Bit Diameter increasing the length of the mortise. Pocket cuts use the full Bit Diameter.

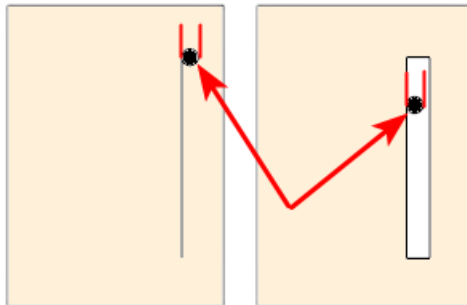


4 Horizontal Offset Adjust

Set this to 0 if your back is flush with the side panel. If you want the back grooves to be dado's then set this value to offset the grooves.

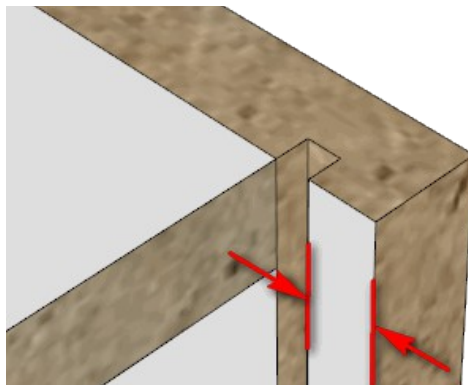


5 Horizontal Notch

This is the actual size of the Notch.

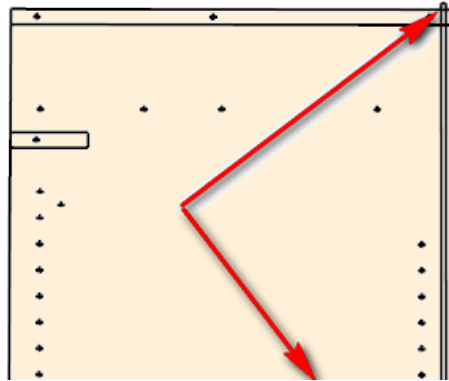


6 Top Notch

The Top Notch is.

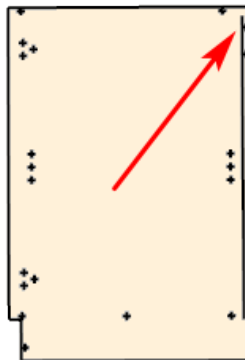

7 Bottom Notch

The Bottom Overrun is the amount that the router goes past the edges of the top panels. Use negative values to keep the routing within the part.

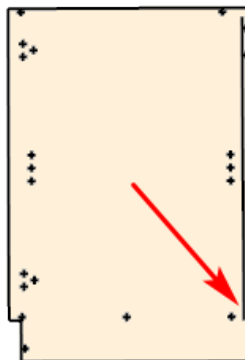


8 Corner Overrun Base

This is for the top and bottom panels for base corner cabinets. If you use corner braces and want the groove to stop where the braces ends then set this value to a larger negative value to accomodate the brace.



9 Corner Overrun Upper


This is for the top and bottom panels for upper corner cabinets. If you use corner braces and want the groove to stop where the braces ends then set this value to a larger negative value to accomodate the brace.

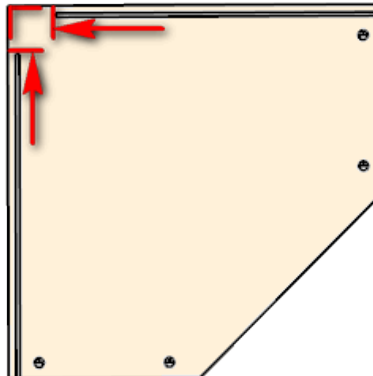

2) Tenons


1 Tenon Thickness Adjust

You have fine control to adjust your tenon thickness here. One use is to allow a bit of room for glue.

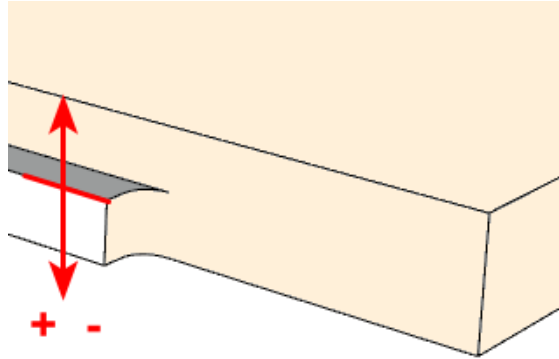


2 Tenon Overrun

Set the tenon Overrun here. A cleaner cut may be achieved with a true overrun.

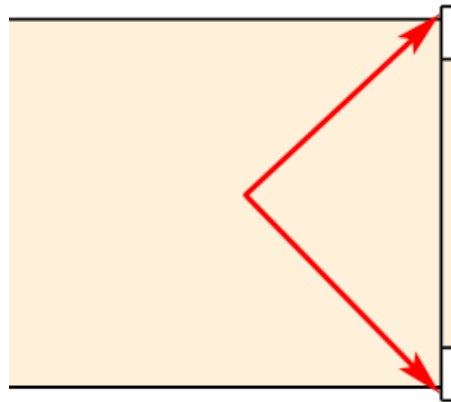


3 Gap In Tenon

If you want a Rafter or a Screw such as a confirmat in the middle of the tenon for bottoms tops or fixed shelves then set the Gap here.

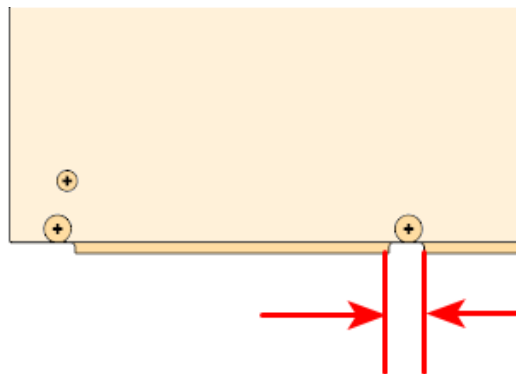


4 Gap In Rail Tenon

If you want a Rafix or a Screw such as a confirmat in the middle of the tenon for stretchers or Split Tops then set the Gap here.

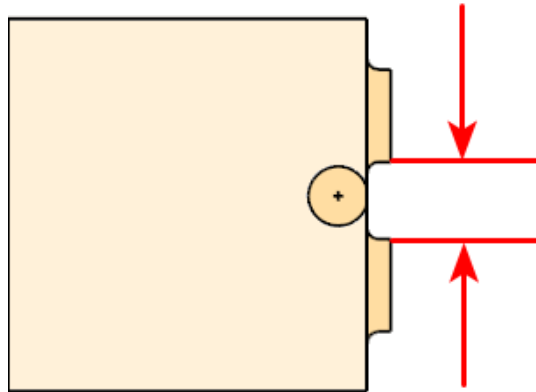


5 Gap In Top Hanger Tenon

If you want a Rafix or a Screw such as a confirmat in the middle of the tenon for Top Hangers then set the Gap here.

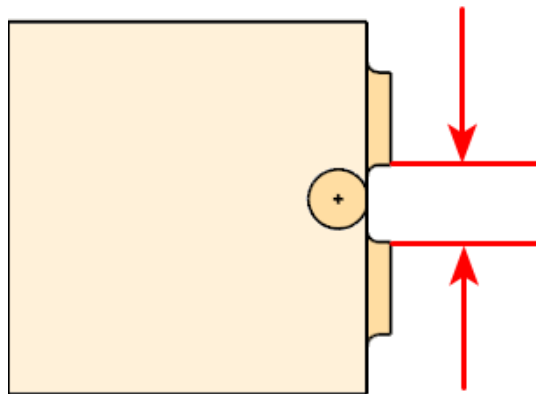


6 Gap In Bottom Hanger Tenon

If you want a Rafix or a Screw such as a confirmat in the middle of the tenon for Top Hangers then set the Gap here.

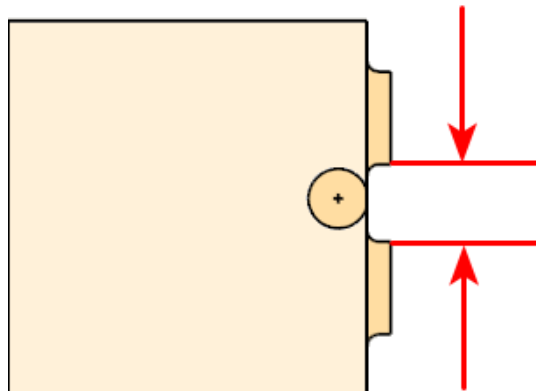

7 Tenon Cut as Pocket


Check this if you want a full pocket for Tenon cuts. Unchecked the CNC router will make a single pass.

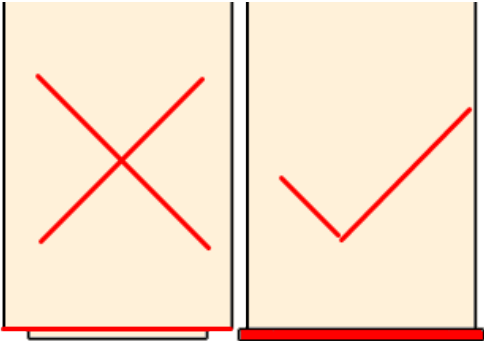

3) Combined – Door / Drawer


1 Depth

This is the Depth of cut OR a micro adjust if Auto Depth Adjustment is set to -1.

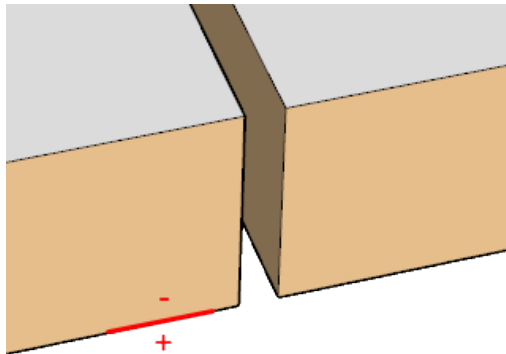


2 Auto Depth Adjustment

Set this to -1 for CutMaster to use the Thickness of the material.

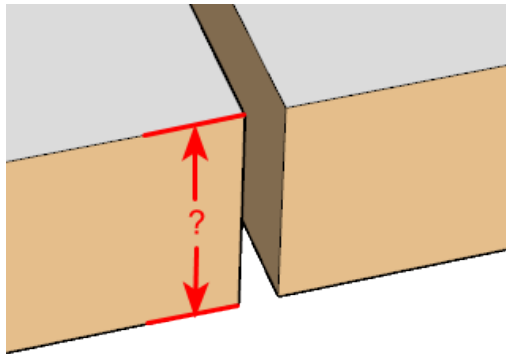

3 Bit Diameter


CutMaster calculates over runs and under runs as 1/2 Bit Diameter.

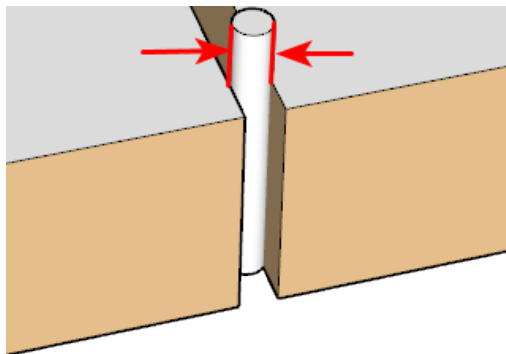

4) Blind Dado / Mortise


1 Dado Depth

This is the depth of the blind dado. Set this value to 0 if you do not want Blind Dado's.

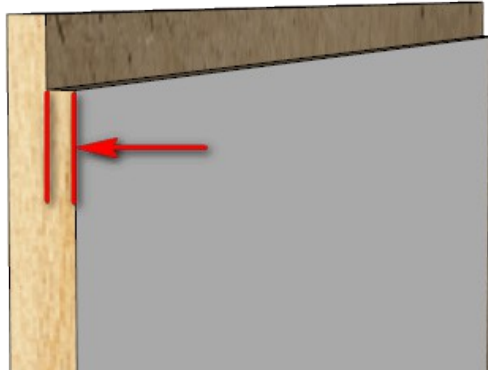


2 Depth Adjustment

Provides additional space for glue.

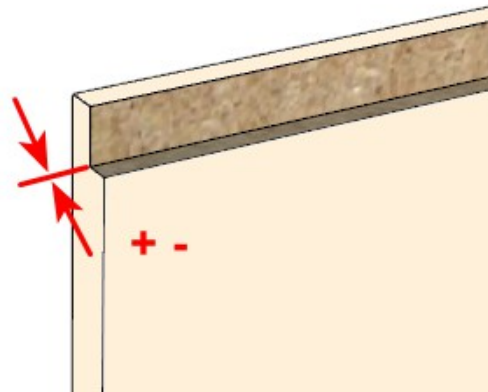


3 Dado Width

This is to set the size of your blind dado. If it is set to 0 then the Dado's width is set to the Bit Diameter

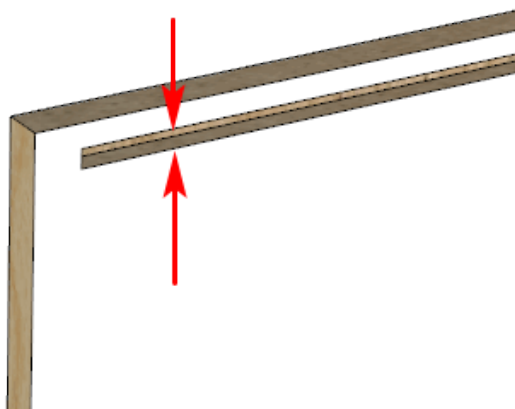


4 Bit Diameter

The Bit Diameter is used to calculate the actual length of the mortise. The mortise is longer than the tenon by the Bit Radius for Single Pass or $2 * \text{Bit Radius}$ for Pocket cuts.

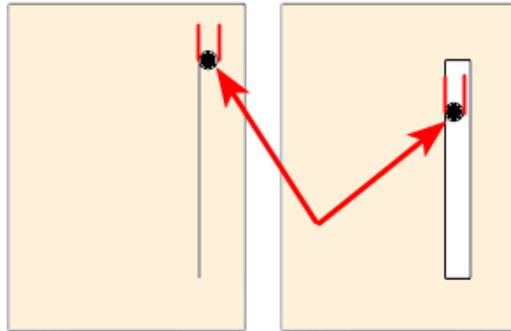


5 (Full) Front Notch

Tops, bottoms and Fixed shelves use the (Full) Front Notch value. The mortise is longer than the tenon by the Bit Radius for Single Pass or $2 * \text{Bit Radius}$ for Pocket cuts.

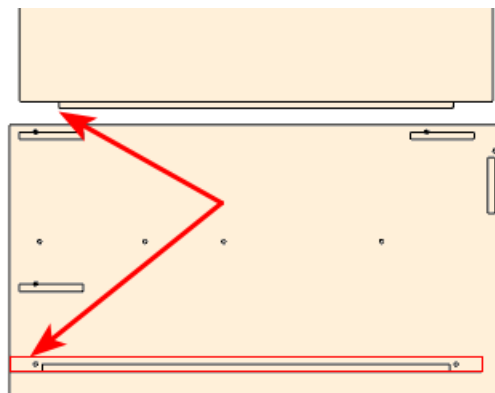


6 (Full) Back Notch

Tops, bottoms and Fixed shelves use the (Full) Back Notch value. The mortise is longer than the tenon by the Bit Radius for Single Pass or $2 * \text{Bit Radius}$ for Pocket cuts.

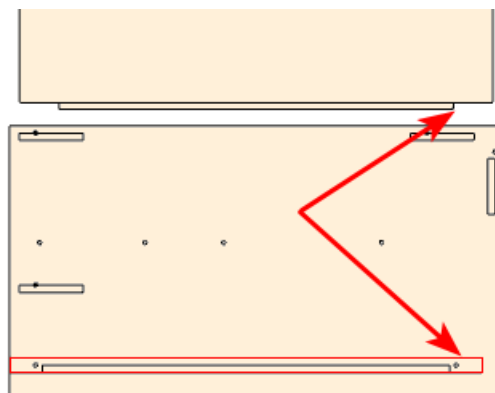


7 (Narrow) Front Notch

Narrow Tops are back portion of the split top and use the (Narrow) Front Notch value. The mortise is longer than the tenon by the Bit Radius for Single Pass or 2 * Bit Radius for Pocket cuts.

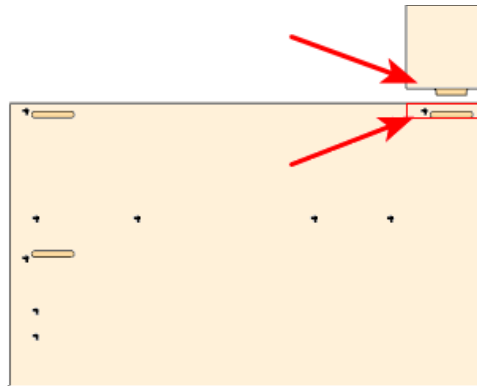


8 (Narrow) Back Notch

Narrow Tops are back portion of the split top and use the (Narrow) Back Notch value. The mortise is longer than the tenon by the Bit Radius for Single Pass or 2 * Bit Radius for Pocket cuts.

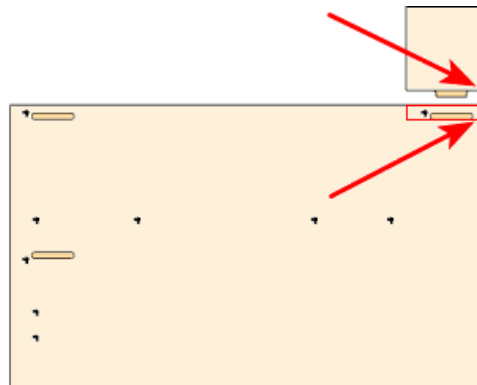


9 (Split) Front Notch

Split Tops and Stretchers use the (Split) Front Notch value. The mortise is longer than the tenon by the Bit Radius for Single Pass or 2 * Bit Radius for Pocket cuts.

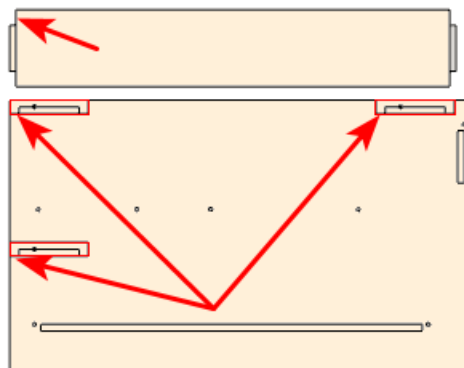


10 (Split) Back Notch

Split Tops and Stretchers use the (Split) Back Notch value. The mortise is longer than the tenon by the Bit Radius for Single Pass or 2 * Bit Radius for Pocket cuts.

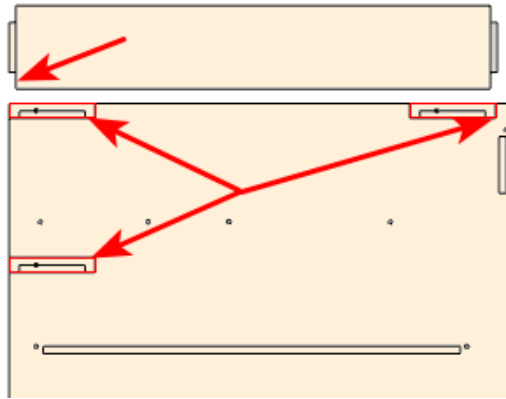


11 Sink Top Notch

Sink Rails use the Sink Top Notch value. The mortise is longer than the tenon by the Bit Radius for Single Pass or 2 * Bit Radius for Pocket cuts.

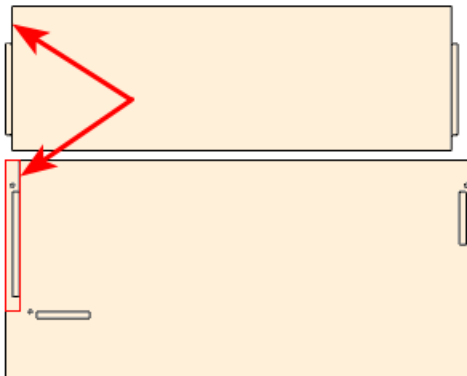


12 Sink Bottom Notch

Sink Rails use the Sink Bottom Notch value. The mortise is longer than the tenon by the Bit Radius for Single Pass or 2 * Bit Radius for Pocket cuts.

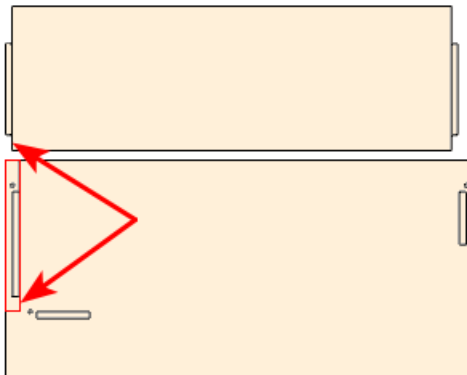


13 Sink Adjust

The Blind Sink Adjust is optional and normally used as a micro adjust to adjust the final placement of the sink rail.

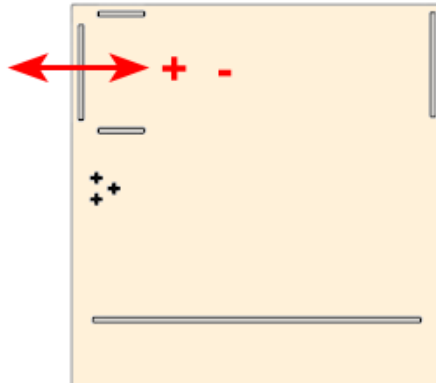


14 Kick Top Notch

This is the Top Notch for kicks. The mortise is longer than the tenon by the Bit Radius for Single Pass or 2 * Bit Radius for Pocket cuts.

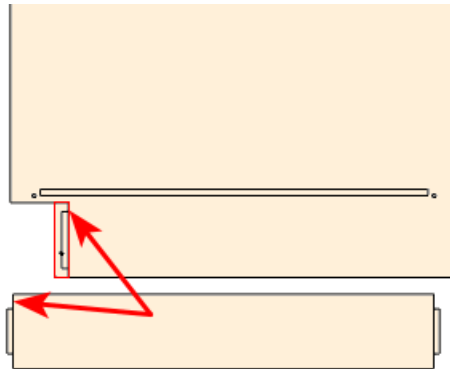


15 Kick Bottom Notch

This is the Bottom Notch for kicks. The mortise is longer than the tenon by the Bit Radius for Single Pass or 2 * Bit Radius for Pocket cuts.

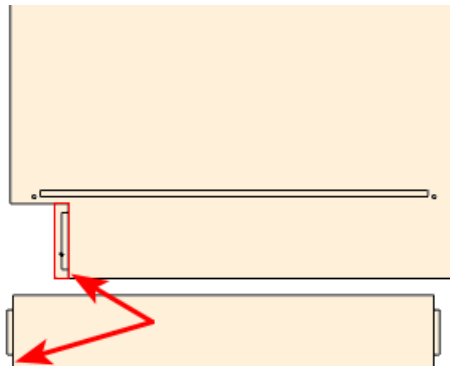


16 Kick Adjust

The Kick Adjust is optional and normally used as a micro adjust to adjust the final placement of the Kick.

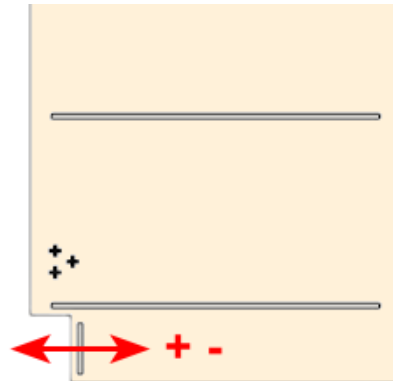


17 Top Hanger Top Notch

This is the Top Notch for Top Hangers. The mortise is longer than the tenon by the Bit Radius for Single Pass or $2 * \text{Bit Radius}$ for Pocket cuts.

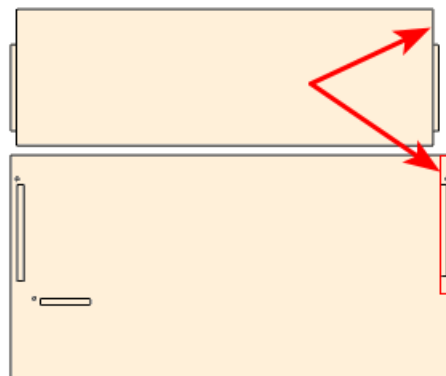


18 Top Hanger Bottom Notch

This is the Bottom Notch for Top Hangers. The mortise is longer than the tenon by the Bit Radius for Single Pass or $2 * \text{Bit Radius}$ for Pocket cuts.

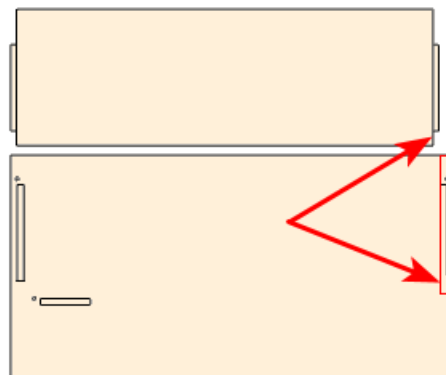


19 Bottom Hanger Top Notch

This is the Top Notch for Bottom Hangers. The mortise is longer than the tenon by the Bit Radius for Single Pass or 2 * Bit Radius for Pocket cuts.

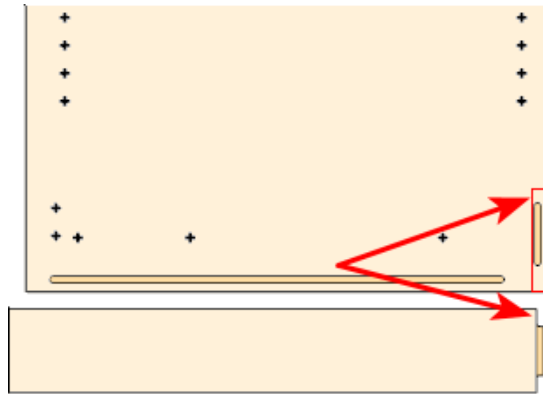


20 Bottom Hanger Bottom Notch

This is the Bottom Notch for Bottom Hangers. The mortise is longer than the tenon by the Bit Radius for Single Pass or 2 * Bit Radius for Pocket cuts.

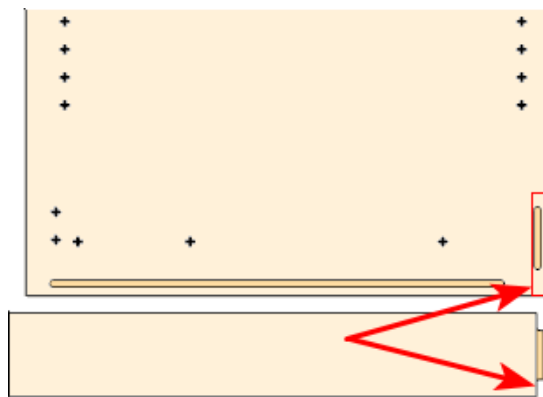


21 Hanger Adjust

The Hanger Adjust is optional and normally used as a micro adjust to adjust the final placement of the Hanger Rail.

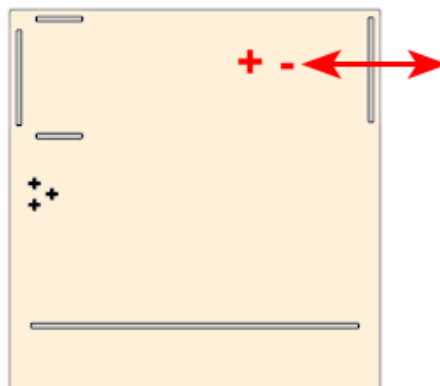

22 Up Down Adjust


This allows you to dial in the Tops using a micro adjust.

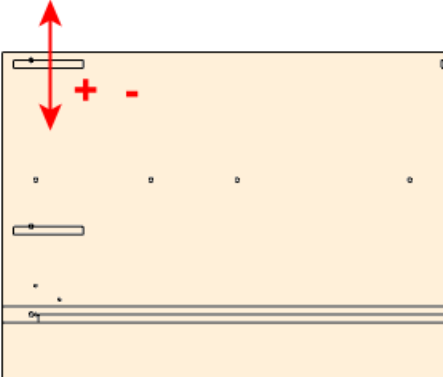

5) Miscellaneous


1 Narrow Fixed Top Bottom <

Narrow width parts use different parameters than wider parts.

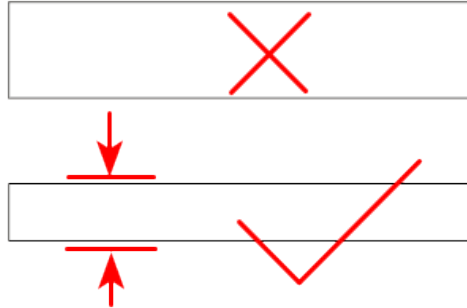


2 Ignore c1 if Less than

Reduce the number of holes or gaps for narrow parts where there isn't enough width.

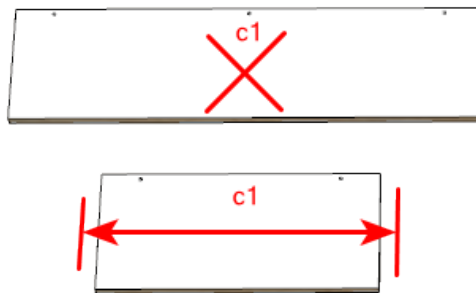


3 Acute Angle Adjust

Angled End Cabinets have Tops and Bottoms that have an acute (45 degree) angle. This parameters adjusts front Connectors, Construction holes and Dowel holes by this amount.

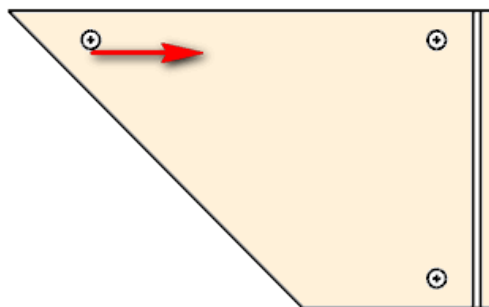


4 Corner Brace Adjust

Top and bottom shelves may have the back corner lopped off. In this case if you want the back brace to sit on top of the bottom at the corner then you need to provide an adjustment which is 2 X brace thickness.

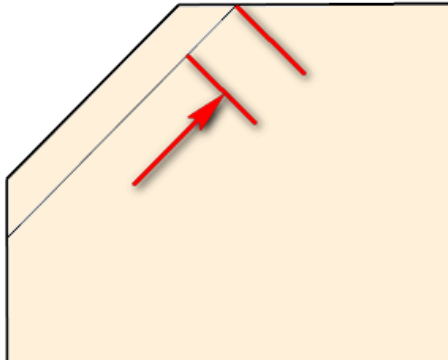


5 Scoring Depth

Set the Scoring Depth for all score lines and for DXF labeling. Some examples of scoring lines include Stretchers and Fixed shelves.

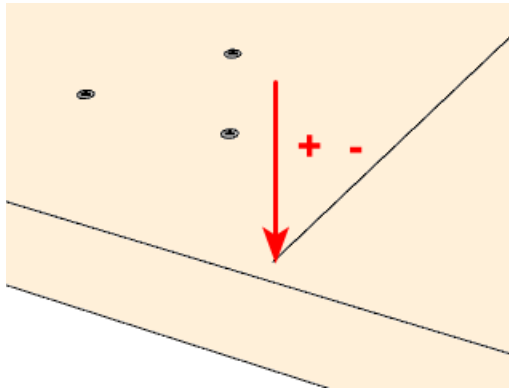


6 Cut Corners for Braces


You can now optionally cut the corners off of tops and bottoms for corner cabinets. You can choose None, Base, Uppers or Both.

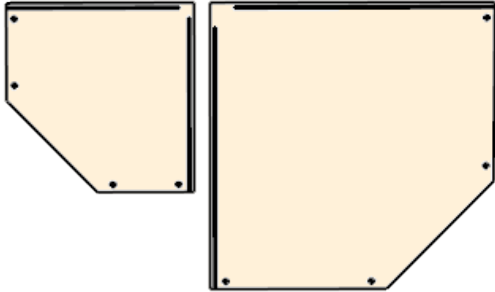


None

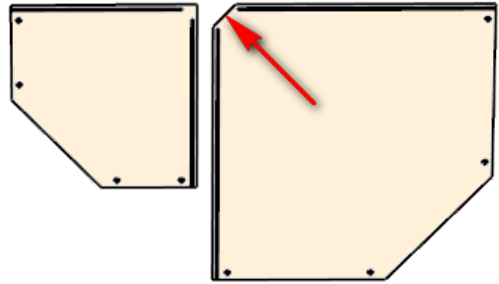

Base

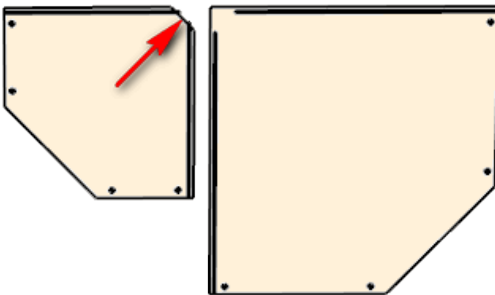


Uppers

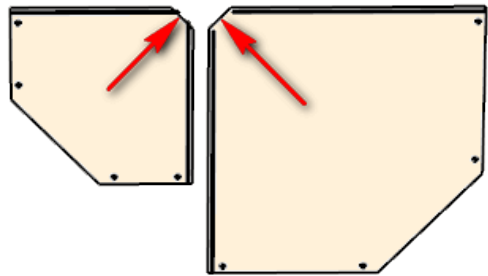

Both


7 Dado Sides Only

Check this option if your backs dado into the sides but not into the tops and bottoms.

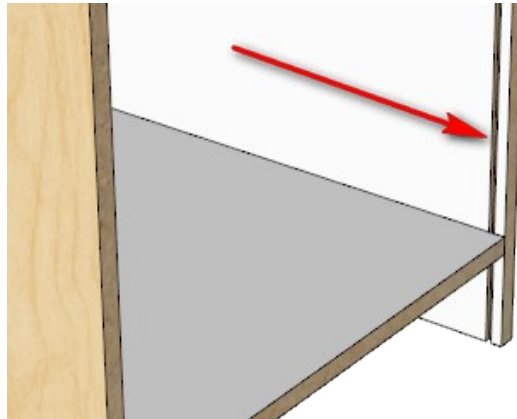


8 Width Top As Split

This is the width of the top when it is a split top. This refers to the second top which is close to the back of the cabinet.

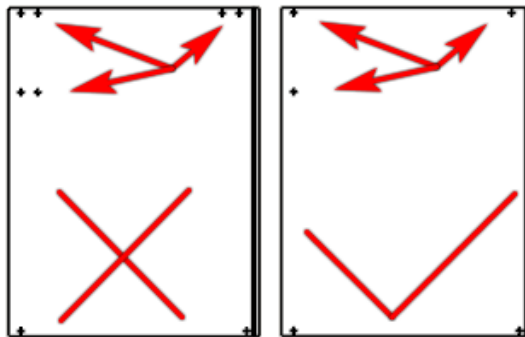


9 Flip Tops

Check this to place Tops - Bottom surface up.

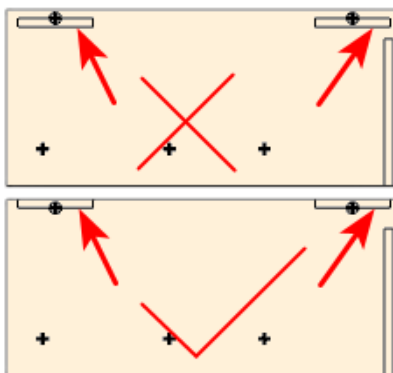


10 Flip Fixed

Check this to place Fixed Shelves and Stretchers - Bottom surface up.

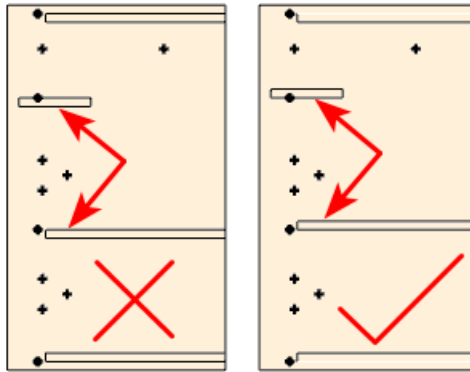


11 Flip Bottoms

Check this to place Bottoms - Bottom surface up.

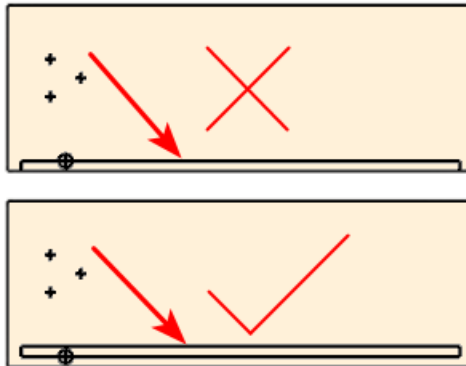

12 Reverse Single Cuts

Check this if you need to change router directions.

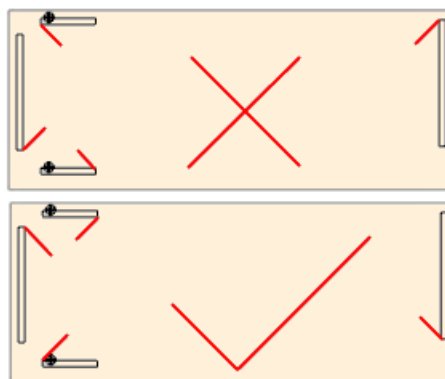

Holes Tab

These are mostly for Side Panels and are Construction Holes, Dowel Holes and Rules.


The screenshot shows the 'Rules' software interface with the 'Holes' tab selected. The interface is organized into several sections, each with its own set of parameters:

- 1) Shelf Supports:** Depth (8), Auto Depth Adjustment (-1), Hole Diameter (5), Hole Spacing (32), Start Hole Uppers (96), End Hole Uppers (96), Spacing List Uppers (37,-32), Start Hole Base (96), End Hole Base (160), Spacing List Base (37,-32), Backs Wider Than (600), Blind Panel Wider Than (300), Cluster Size (3), Shelves Control Supports (checked), Balance Shotgun (unchecked).
- 2) Side, Top and Bottom Pilot Holes:** Depth (8), Auto Depth Adjustment (1), Hole Diameter (5), Pilot for Back (checked), Pilot for Hangers (checked), Horizontal Offset (0), Vertical Offset (0), Maximum Hole Spacing (300), Spacing List Full (32,-32), Spacing List Split (32).
- 3) Construction Holes:** Depth (0), Auto Depth Adjustment (-1), Hole Diameter (5), Pocket Length (0), Offset Uppers List (0), Offset Base List (0), Horizontal Depth (8), Pilot Diameter (8.5), Spacing List Uppers (32,-32,c1), Spacing List Base (32,-32,c1), Spacing List Split (32), Spacing List Tall (32,-32,c1), Sink Stretcher List (32,-32), Kick List (32), Top Hanger List (32,-32), Bottom Hanger List (32,96).
- 4) Closet Holes:** Depth (8), Hole Diameter 1 (5), Hole Offset 1 (-5), Hole Diameter 2 (5), Hole Offset 2 (27).
- 5) Divider Joinery:** Slot Thickness (0), Bit Diameter (5).
- 6) Dowel Holes:** Depth (0), Hole Diameter (8), Offset Uppers List (0), Offset Base List (0), Horizontal Depth (40), Spacing List Uppers (64,-64,c2), Spacing List Base (64,-64,c2), Spacing List Split (64), Spacing List Tall (64,-64,c2), Sink Stretcher List (64,-64), Kick List (64), Top Hanger List (32,-32), Bottom Hanger List (64).
- 7) Plant On Back Pilot Holes:** Depth (0), Auto Depth Adjustment (1), Hole Diameter (3), Horizontal Offset (32), Vertical Offset (32), Maximum Hole Spacing (300), Skip Top Holes (unchecked), Skip Bottom Holes (unchecked).

1) Shelf Supports


1 Depth

This is the depth of the hole for Shelf Supports. Set to 0 if you do not want Shelf Support holes.

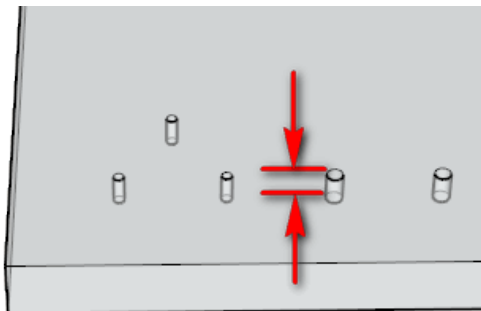


2 Depth for Backs

Set this parameter to -1 if you do not want to use it. If you provide it with a value then the Depth setting is ignored and the Depth will be determined by the thickness of the Sides.

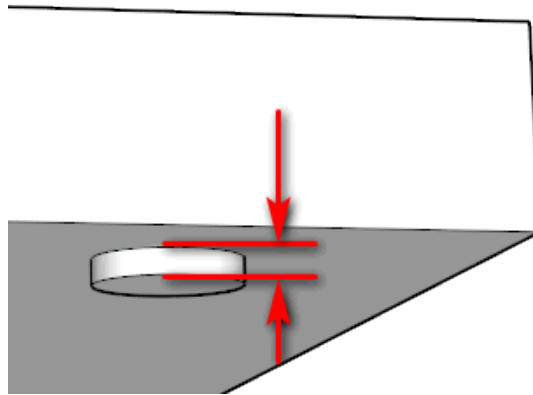


3 Hole Diameter

This is the diameter of the hole for shelf supports.

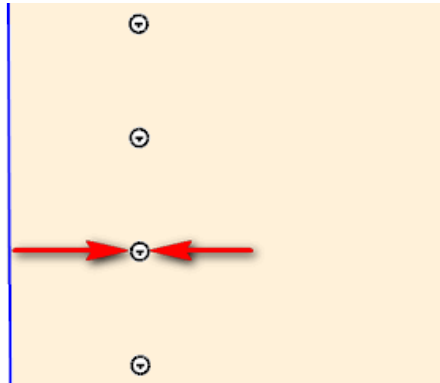


4 Hole Spacing

This is distance between Shelf Support holes – center to center. Typically this is 32 mm.

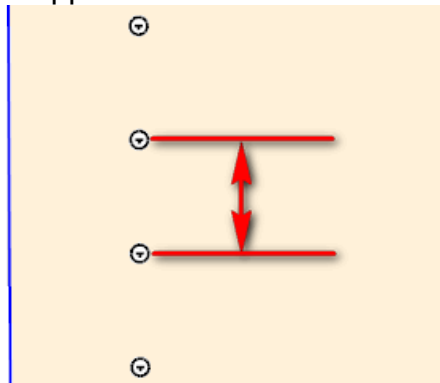


5 Start Hole Uppers

This is the distance to the center of the first hole from the bottom of the side panel. This is used for each column of holes for upper cabinets.

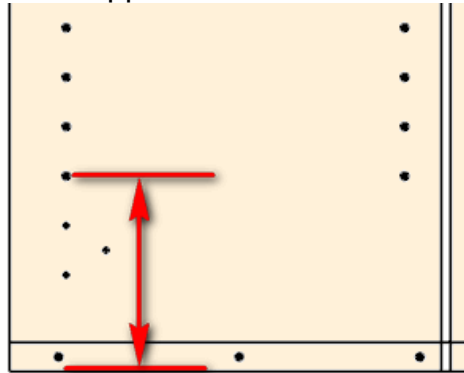


6 End Hole Uppers

This is primarily used to determine the number of shelf holes. The center of the top shelf hole will not be any closer than this value to the top of the opening. This is used for each column of holes for upper cabinets.

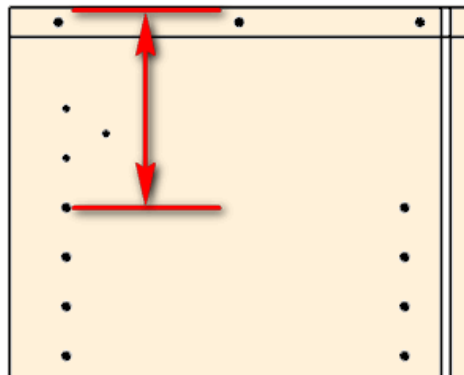


7 Spacing List Uppers

This is a list of distances to the center of the holes from the front edge and from the back edge of the side panel for upper cabinets. The list is separated by commas. Values that are positive are from the front edge and values that are negative are from the back edge. Typically the first column of holes is at 37 mm.

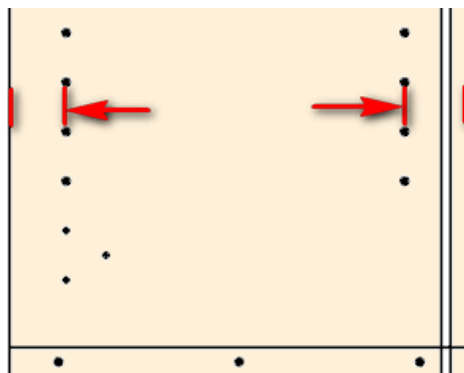


8 Start Hole Base

This is the distance to the center of the first hole from the bottom of the side panel. This is used for each column of holes for base cabinets.

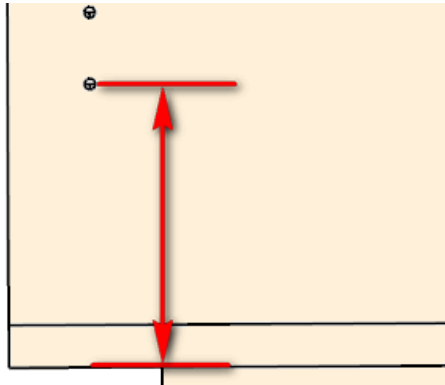


9 End Hole Base

This is primarily used to determine the number of shelf holes. The center of the top shelf hole will not be any closer than this value to the top of the opening. This is used for each column of holes for base cabinets.

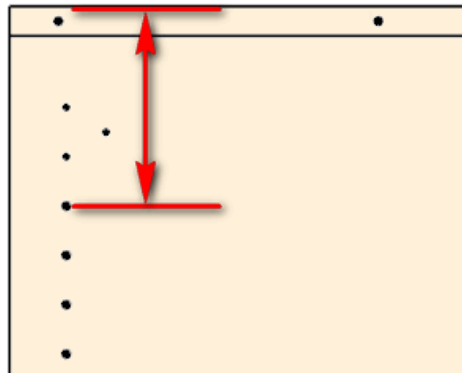


10 Spacing List Base

This is a list of distances to the center of the holes from the front edge and from the back edge of the side panel for base cabinets. The list is separated by commas. Values that are positive are from the front edge and values that are negative are from the back edge. Typically the first column of holes is at 37 mm.

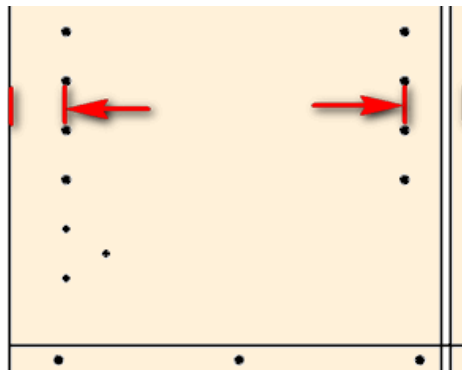


11 Backs Wider Than

Set this to a large number if you do not want shelf supports in the middle of backs.

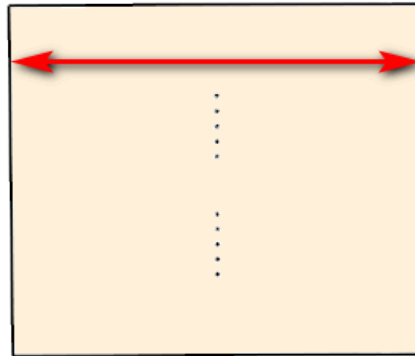


12 Blind Panel Wider Than

Set this to have shelf supports on wide blind panels.

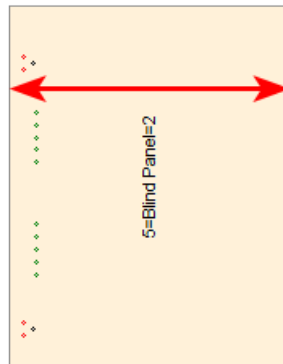


13 Cluster Size

In this example the Cluster Size is 5 and the bottom face of the adjustable shelf controls the position of the middle support hole. You can use an even number. Then the extra hole is placed below the shelf.

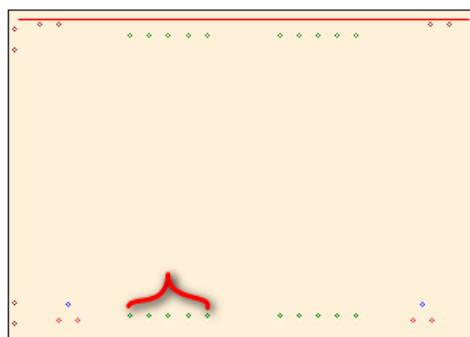


14 Shelves Control Supports

Adjustable shelf information comes across with Sides, Middle partitions, Corner braces etc. and is used to determine if there needs to be shelf supports or not.

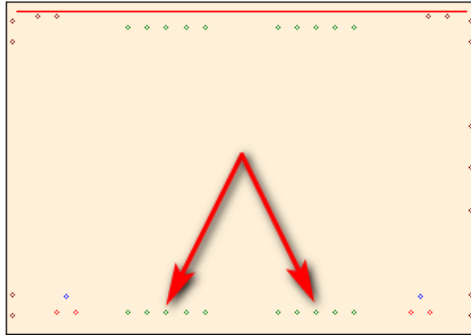

15 Balance Shotgun


Adjust shelf supports to be centered to ensure a balanced panel.

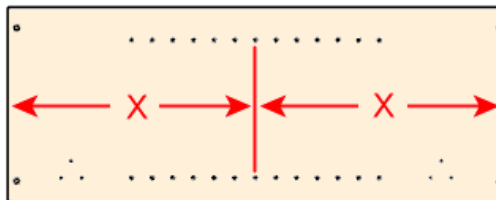

2) Side, Top and Bottom Pilot Holes


1 Depth

This is the depth of the pilot holes. Set this value to 0 if you do not want Pilot Holes.

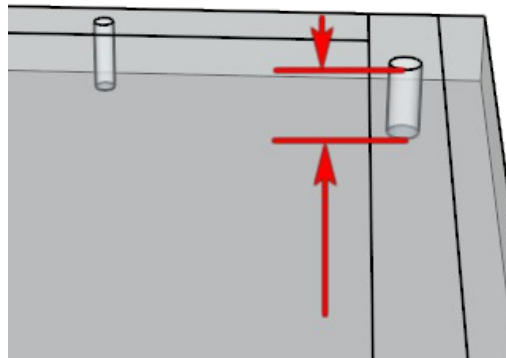


2 Auto Depth Adjustment

Set this parameter to -1 if you do not want to use it. If you provide it with a value then the Depth setting is ignored and the Depth will be determined by the thickness of the Sides.

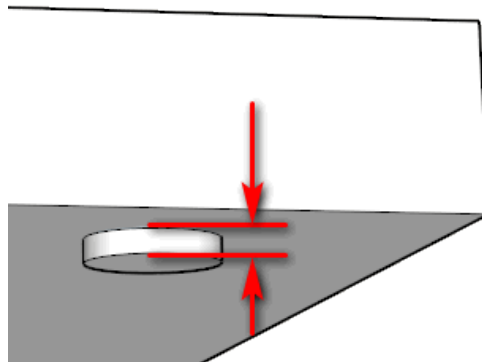


3 Hole Diameter

This is the diameter of the pilot holes.

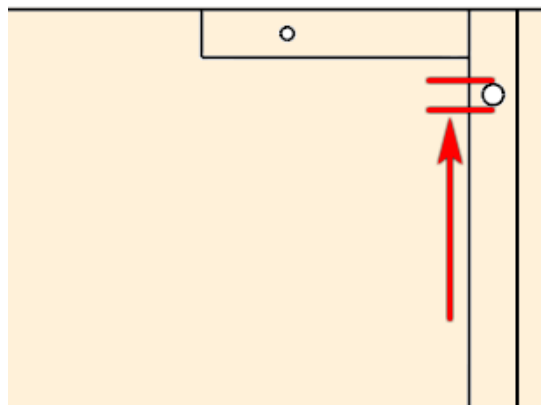


4 Pilot for Back

Turn on / off Pilot holes going through the Side, Top and Bottom to connect to the Back.

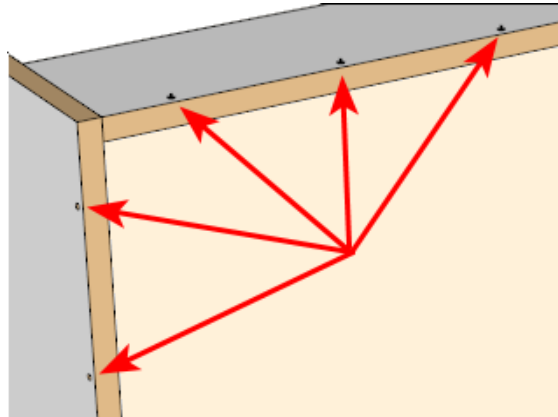


5 Pilot for Hangers

Turn on / off Pilot holes going through Top and or Bottom to connect to Hangers.

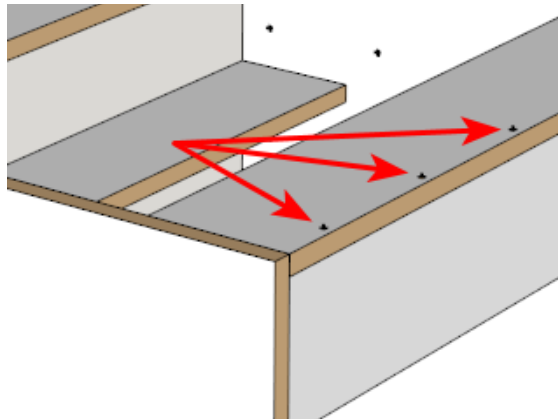


6 Horizontal Offset

Set this to 0 if you don not want Pilot Holes close to the edge. Otherwise the pilot hole center will be this distance from both horizontal edges

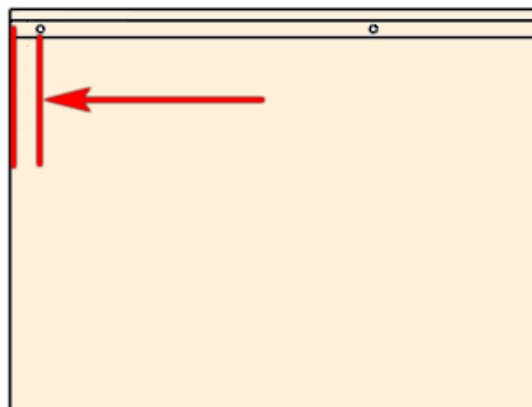


7 Vertical Offset

Set this to 0 if you do not want Pilot Holes close to the edge. Otherwise the pilot hole center will be this distance from both vertical edges.

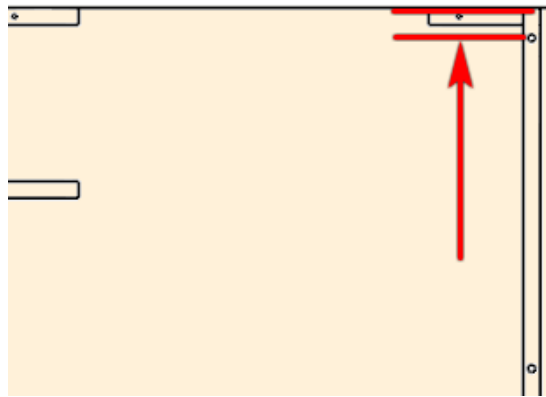


8 Maximum Hole Spacing

This is the maximum allowable distance between pilot holes. This could be from the edge of the panel or from the center of the hole at the offset.

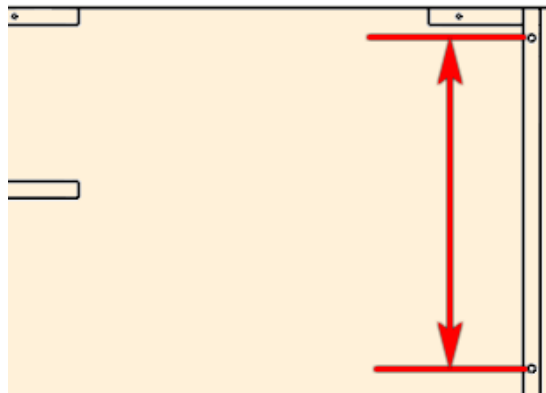

9 Spacing List Full

Overlay Construction has optional pilot holes for Full Tops and Bottoms.

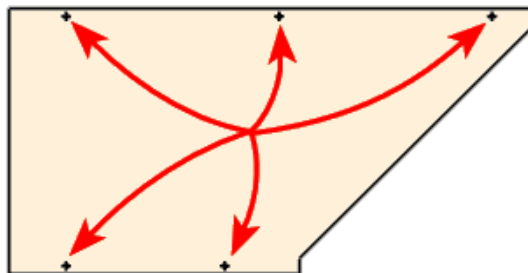

10 Spacing List Split


Overlay Construction has optional pilot holes for Split Tops.



3) Construction Holes


1 Depth

This is the depth of the construction hole. Set this value to 0 if you do not want Construction Holes.

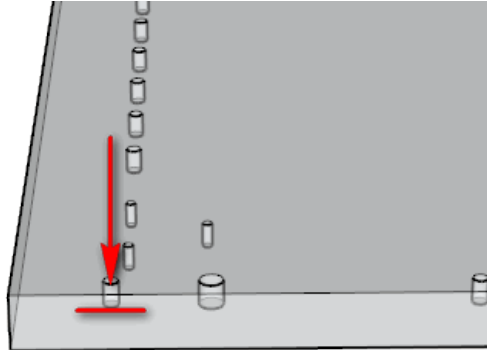


2 Auto Depth Adjustment

Set this parameter to -1 if you do not want to use it. If you provide it with a value then the Depth setting is ignored and the Depth will be determined by the thickness of the Sides.

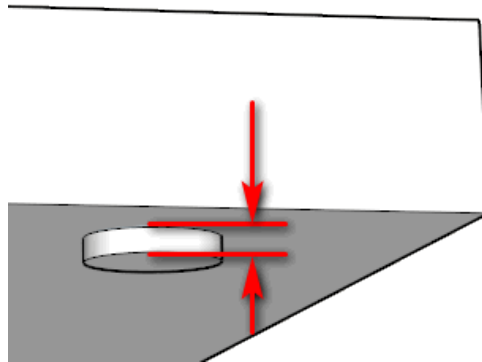


3 Hole Diameter

This is the diameter of Construction holes.

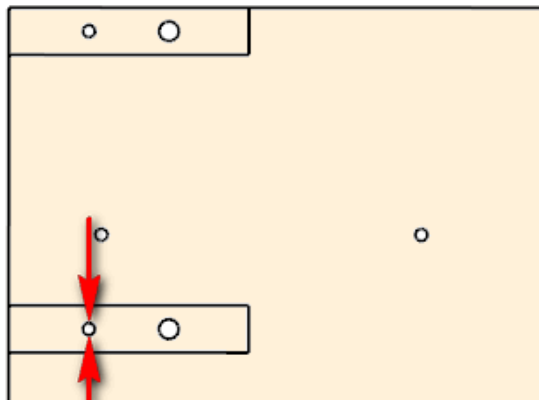


4 Pocket Length

Provides support for Festool Domino and Lamello.

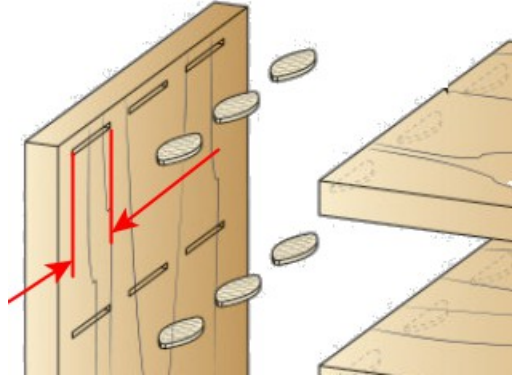


5 Offset Uppers List

For Upper cabinet tops, fixed shelves and bottom construction holes, enter the offset for each part separated by a comma. Please note that the first value is for tops, the second value is for stretchers and fixed shelves and the third value is for bottoms.

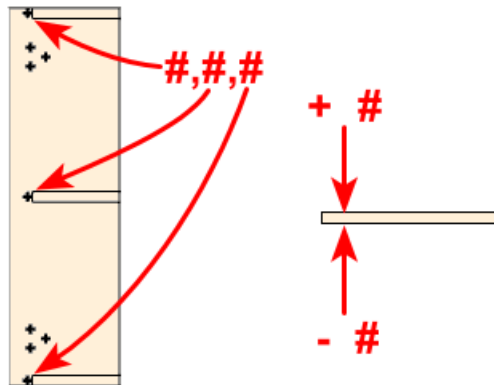


6 Offset Base List

For Base cabinet tops, fixed shelves and bottom construction holes, enter the offset for each part separated by a comma. Please note that the first value is for tops, the second value is for stretchers and fixed shelves and the third value is for bottoms.

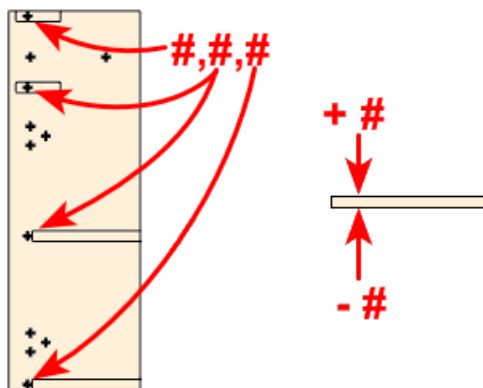


7 Horizontal Depth

This is intended to handle edge drilling for the length of the dowels. It is only supported for 3D Dxf files where there is one part per dxf.

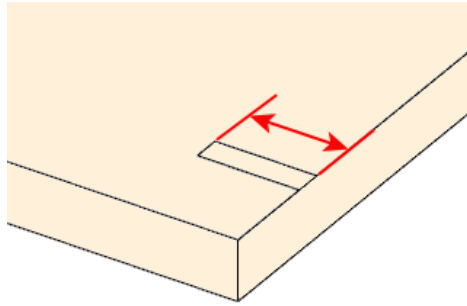


8 Pilot Diameter

Not yet supported. This is intended to handle edge drilling for the pilot holes for confirmats.

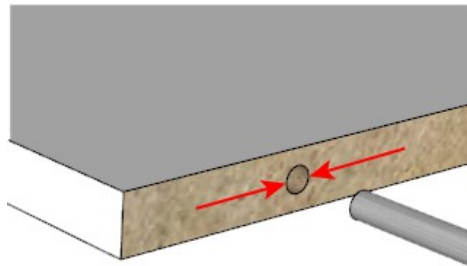


9 Spacing List Uppers

This is a list of distances to the center of the holes from the front edge and from the back edge of the side panel for upper cabinets. The list is separated by commas. Values that are positive are from the front edge and values that are negative are from the back edge. Additionally you can provide one of two formula parameters "c1" and "c2" as the final item in the list. So "32,-40,c1" means 32 mm from the front edge, 40 mm from the back edge and calculate where to put the a hole in between the other two.

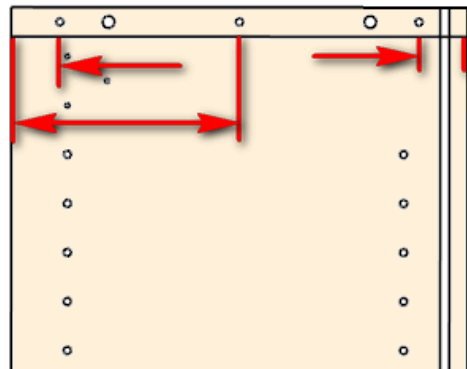


10 Spacing List Base

This is a list of distances to the center of the holes from the front edge and from the back edge of the side panel for base cabinets. The list is separated by commas. Values that are positive are from the front edge and values that are negative are from the back edge. Additionally you can provide one of two formula parameters "c1" and "c2" as the final item in the list. So "32,-40,c1" means 32 mm from the front edge, 40 mm from the back edge and calculate where to put the a hole in between the other two.

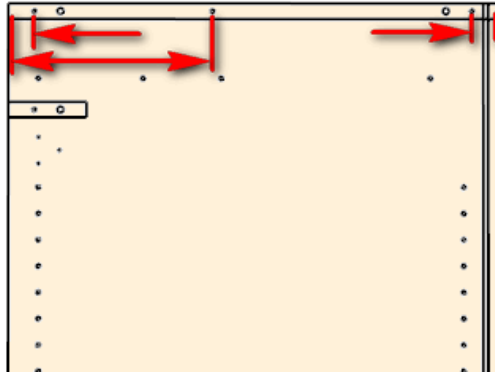


11 Spacing List Split

This is a list of distances to the center of the holes from the front edge and from the back edge of the side panel for base cabinets where they have Split Tops. The list is separated by commas. Values that are positive are from the front edge and values that are negative are from the back edge. "c1" and "c2" are supported here.

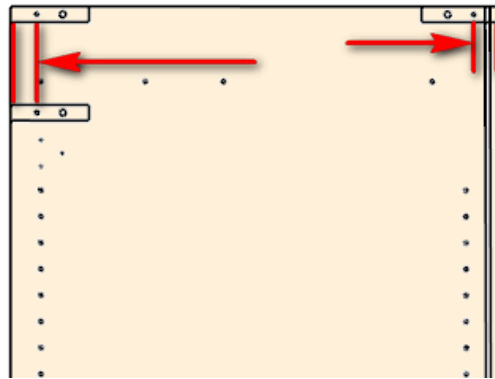


12 Spacing List Tall

This is a list of distances to the center of the holes from the front edge and from the back edge of the side panel. The list is separated by commas. Values that are positive are from the front edge and values that are negative are from the back edge. This extra list allows you to have additional connectors for tall cabinets. "c1" and "c2" are supported here.

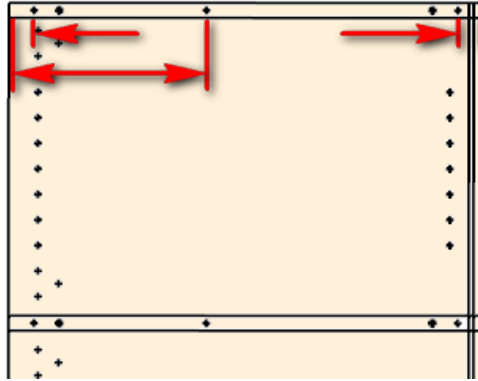


13 Sink Stretcher List

The Sink Stretcher is a special case and is usually required when the sink cabinet does not have a top. Panel

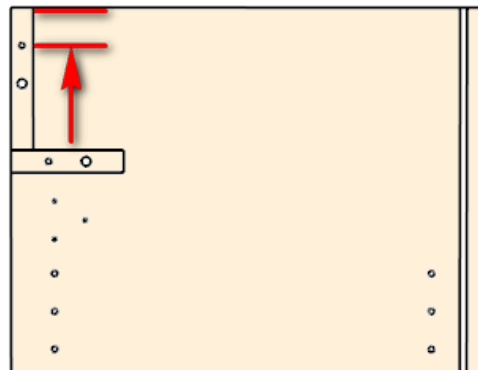


14 Kick List

Used by Side Panels for Base cabinets with integrated kicks. Currently only supporting kicks that are between the Side Panels.

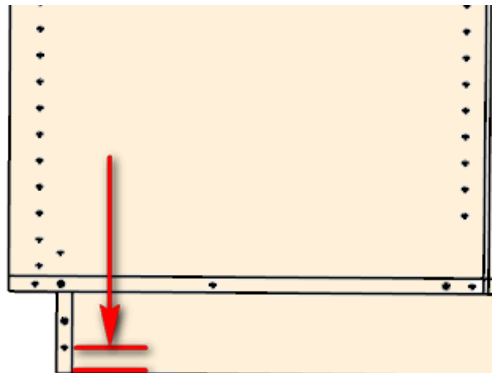


15 Top Hanger List

Used by Side Panels for drilling of the Top Hangers.

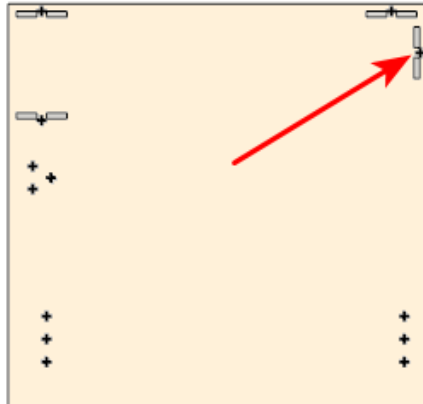

16 Bottom Hanger List


Used by Side Panels for drilling of the Bottom Hangers.

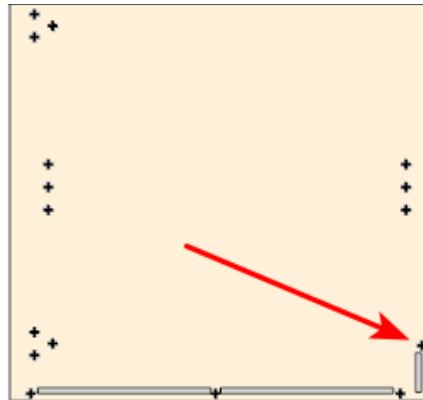

4) Closet Holes


1 Depth

This is the Depth for the Closet Holes. You can have 1 or 2 holes.

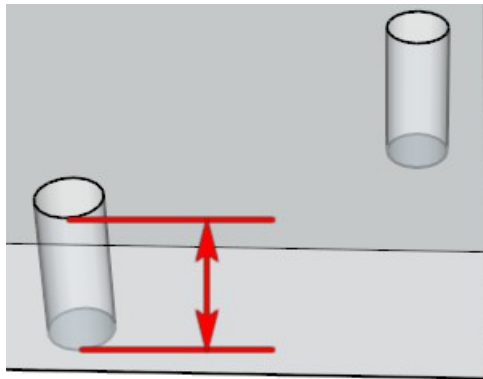


2 Hole Diameter 1

This is the diameter of the first closet hole. One hole may be for the closet rod or for a fixing screw. The second hole may be used for a fixing screw.

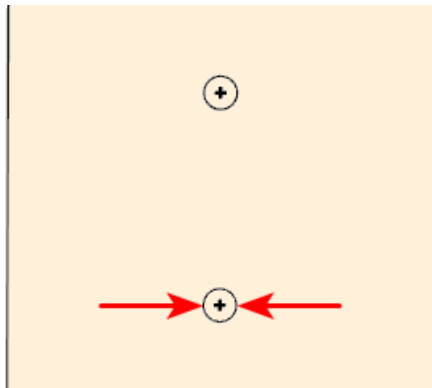


3 Hole Offset 1

This is the Vertical Offset from the center of the Closet Rod. The offset can be a positive or negative value.

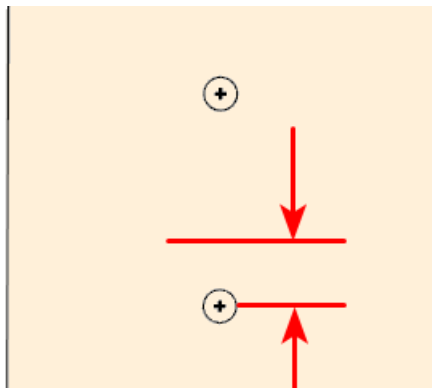


4 Hole Diameter 2

This is the diameter of the first closet hole. One hole may be for the closet rod or for a fixing screw. The second hole may be used for a fixing screw.

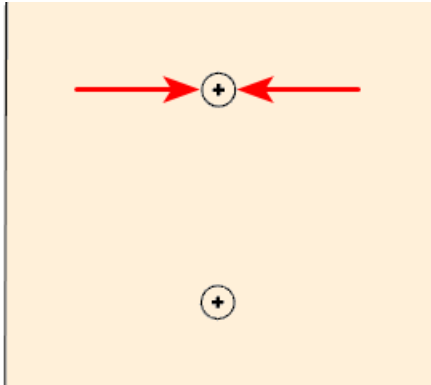

5 Hole Offset 2

This is the Vertical Offset from the center of the Closet Rod. The offset can be a positive or negative value.

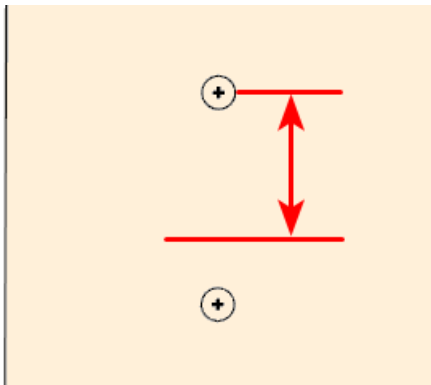

5) Divider Joinery

1 Slot Thickness

This is the depth for the hole to attach the leg.


2 Bit Diameter

This is the diameter of the Divider Bit

6) Dowel Holes


1 Depth

This is the depth of the dowel holes. Set this value to 0 if you do not want Dowel Holes.

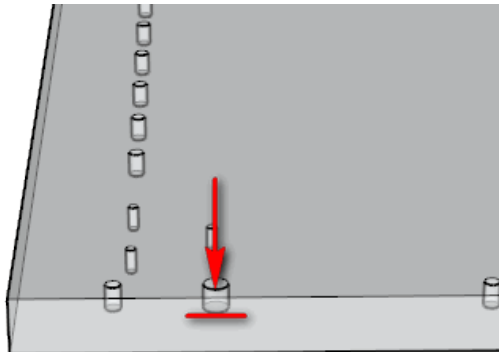


2 Hole Diameter

This is the diameter of the Dowel Hole.

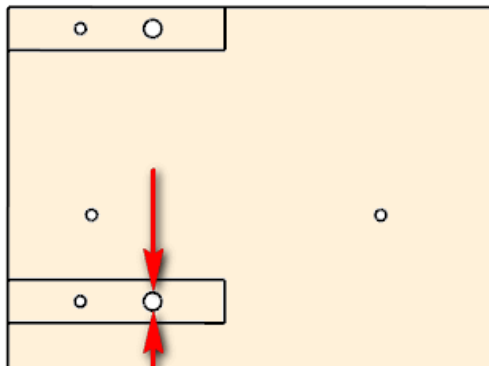


3 Offset Uppers List

For Upper cabinet tops, fixed shelves and bottom dowel holes, enter the offset for each part separated by a comma. Please note that the first value is for tops, the second value is for stretchers and fixed shelves and the third value is for bottoms.

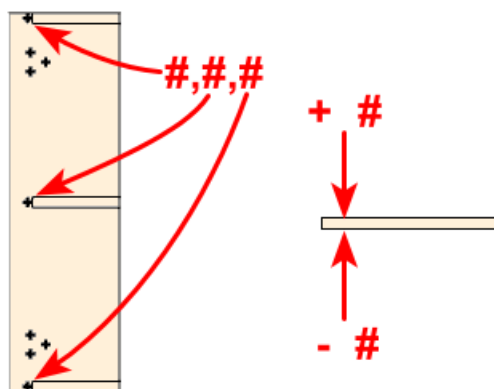


4 Offset Base List

For Base cabinet tops, fixed shelves and bottom dowel holes, enter the offset for each part separated by a comma. Please note that the first value is for tops, the second value is for stretchers and fixed shelves and the third value is for bottoms.

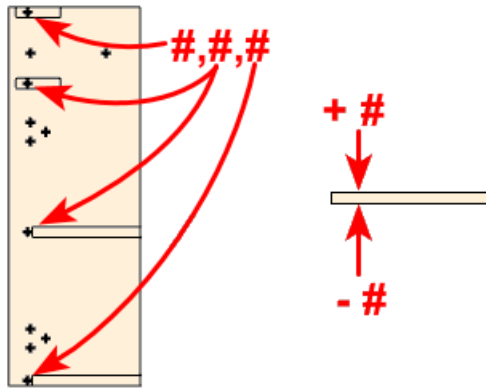


5 Horizontal Depth

This is intended to handle edge drilling for the length of the construction holes. It is only supported for 3D Dxf files where there is one part per dxf. This feature is not currently supported.

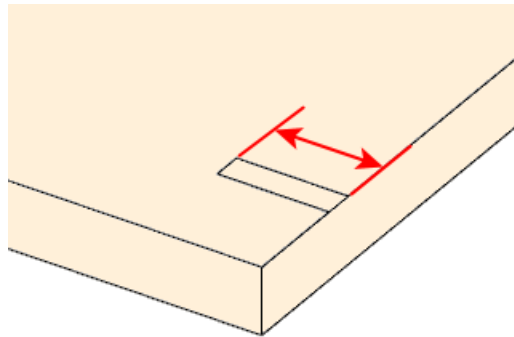


6 Spacing List Uppers

This is a list of distances to the center of the holes from the front edge and from the back edge of the side panel for upper cabinets. The list is separated by commas. Positive values are from the front edge and negative values are from the back edge. "c1" and "c2" are supported here.

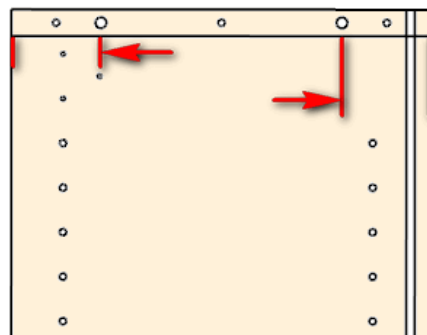


7 Spacing List Base

This is a list of distances to the center of the holes from the front edge and from the back edge of the side panel for base cabinets. The list is separated by commas. Positive values are from the front edge and negative values are from the back edge. "c1" and "c2" are supported here.

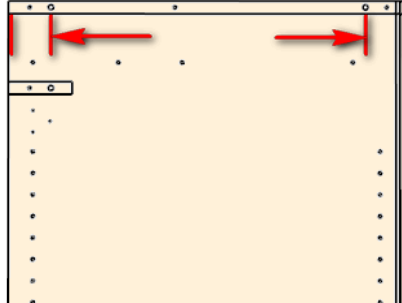


8 Spacing List Split

This is a list of distances to the center of the holes from the front edge and from the back edge of base cabinet side panels with Split Tops. The list is separated by commas. Positive values are from the front edge and negative values are from the back edge. "c1" and "c2" are supported here.

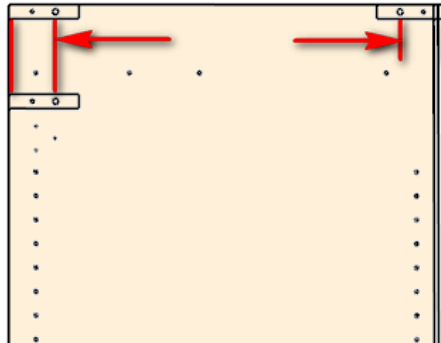


9 Spacing List Tall

This is a list of distances to the center of the holes from the front edge and from the back edge of the side panel. The list is separated by commas. Positive values are from the front edge and negative values are from the back edge. This extra list allows you to have additional connectors for tall cabinets. "c1" and "c2" are supported here.

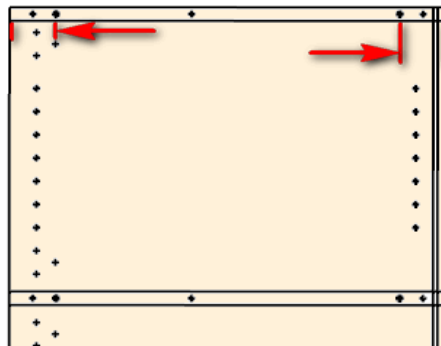


10 Sink Stretcher List

The Sink Stretcher is a special case and is usually required when the sink cabinet does not have a top. Panel

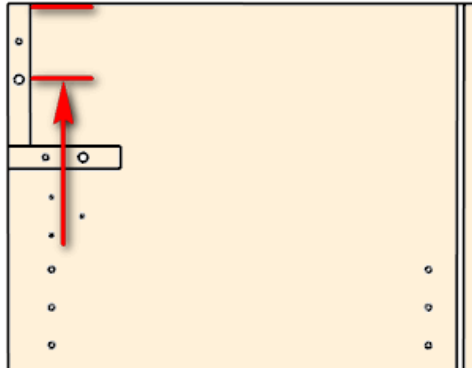


11 Kick List

Used by Side Panels for Base cabinets with integrated kicks. Currently only supporting kicks that are between the Side Panels.

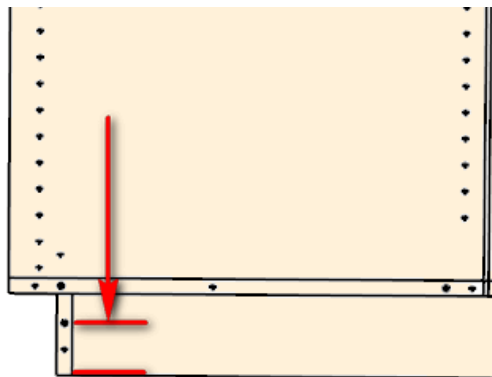


12 Top Hanger List

Used by Side Panels for drilling of the Top Hangers.

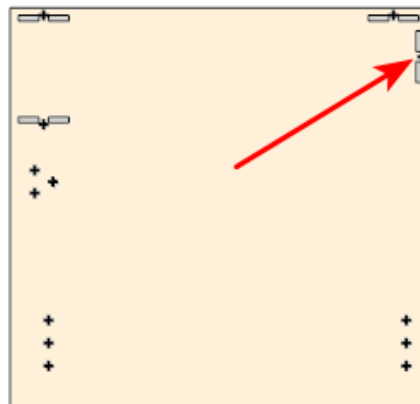

13 Bottom Hanger List


Used by Side Panels for drilling of the Bottom Hangers.

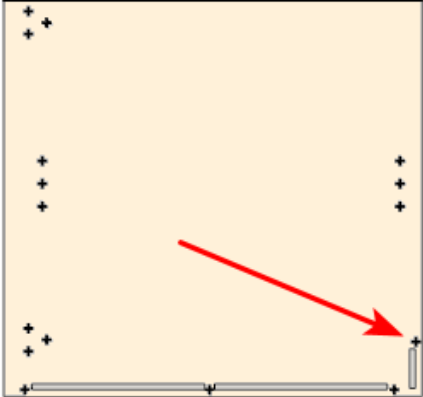

7) Plant on Back Pilot Holes


1 Depth

This is the depth of the pilot holes. Set this value to 0 if you do not want Pilot Holes.

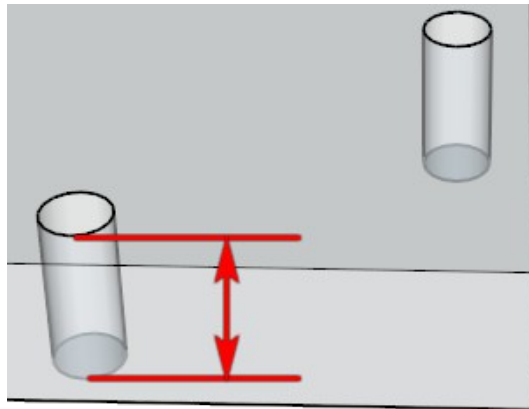


2 Auto Depth Adjustment

Set this parameter to -1 if you do not want to use it. If you provide it with a value then the Depth setting is ignored and the Depth will be determined by the thickness of the Sides.

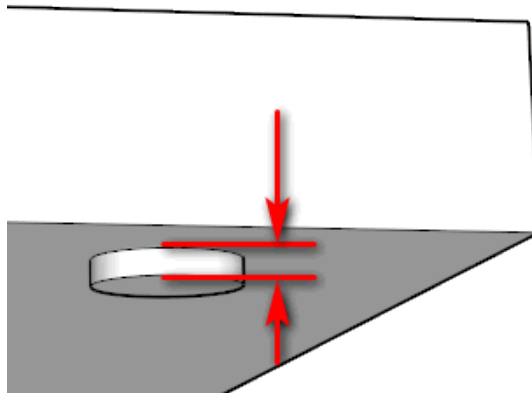


3 Hole Diameter

This is the diameter of the pilot holes.

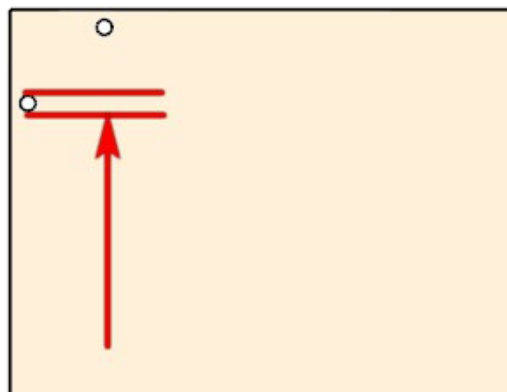


4 Horizontal Offset

Set this to 0 if you don not want Pilot Holes close to the edge. Otherwise the pilot hole center will be this distance from both horizontal edges

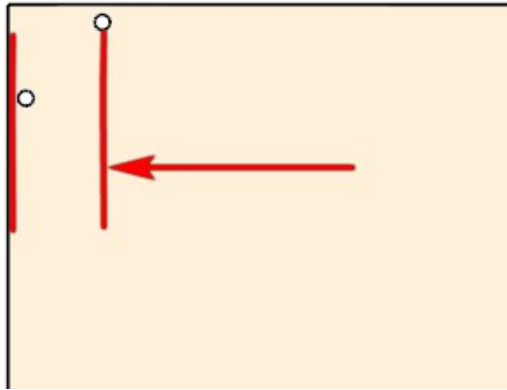

5 Vertical Offset

Set this to 0 if you don not want Pilot Holes close to the edge. Otherwise the pilot hole center will be this distance from both vertical edges.

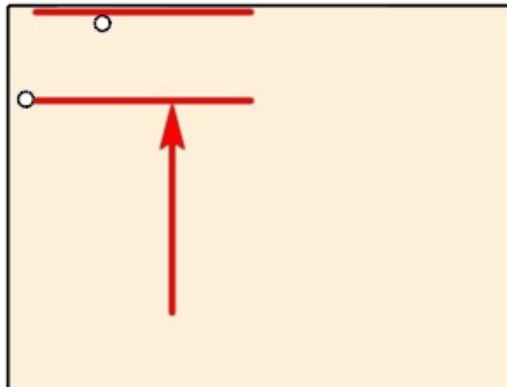

6 Maximum Hole Spacing

This is the maximum allowable distance between pilot holes. This could be from the edge of the panel or from the center of the hole at the offset.



7 Skip Top Holes

8 Skip Bottom Holes

Doors Tab

Rules

Main Options | CNC Globals | CNC Rules | Drawer Systems | Part Rotation

Rule Set: **default** | Save Rules | Clone Set | Delete Set | Close

Note: _____

General | Holes | **Doors** | Connectors

1) Hinge Mounting Plates

Hole Depth	8	<input checked="" type="checkbox"/>
Hole Diameter	3.2	
Hole Spacing	32	
From Front Edge	37	
From Back Edge	-37	
Bottom Hinge Start Uppers	48	
Top Hinge End Uppers	48	
Bottom Hinge Start Base	48	
Top Hinge End Base	48	

2) 3rd Hole

Hole Depth	8	<input checked="" type="checkbox"/>
Hole Diameter	3.2	
Hole Offset	26	

3) Cup Hinge

Cup Depth	13	<input checked="" type="checkbox"/>
Cup Diameter	35	
Hole Center	21	
Length 3rd Hinge	1000	

4) Door Mounting

Hole Depth	13	<input checked="" type="checkbox"/>
Hole Diameter	8	
Hole Spacing	45	
Offset	9.5	

1) Hinge Mounting Plates


1 Hole Depth

This is the Depth of the holes used for Hing mouting plates. Set this value to 0 if you do not want Hinge mounting plate holes.




2 Hole Diameter

This is the Diameter of the mounting plate holes.

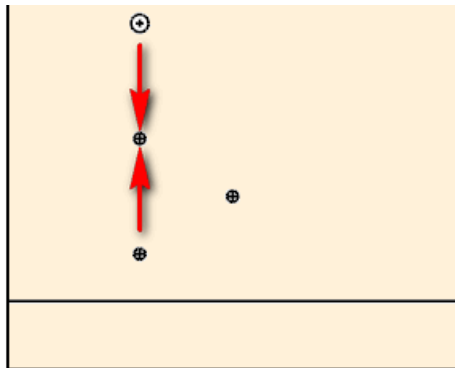


3 Hole Spacing

This is the Spacing of the holes for the mounting plates. For winged plates this value is often 32mm. For simple plates that aren't winged set this value to 0.

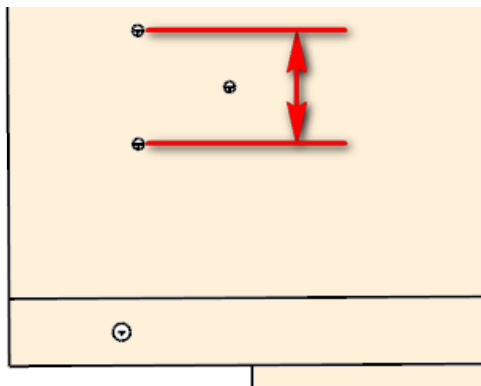


4 From Front Edge

Typically there are holes for the mounting plate at 37mm.

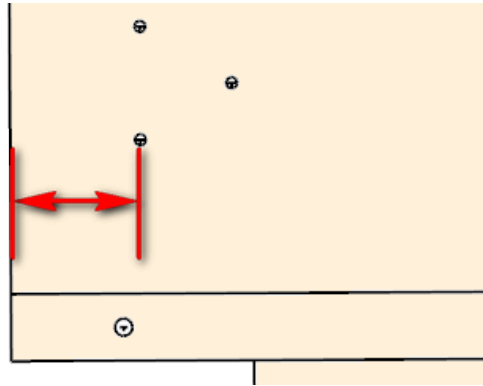


5 From Back Edge

If you have doors instead of a back you may have holes near the rear edge.

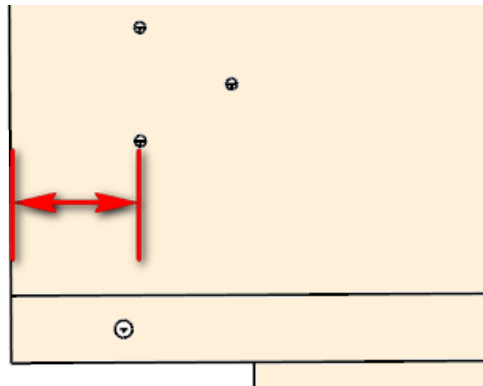


6 Bottom Hinge Start Uppers

The Bottom Hinge Start is the distance from the bottom of the door to the center of the bottom mounting plate for Upper cabinets.

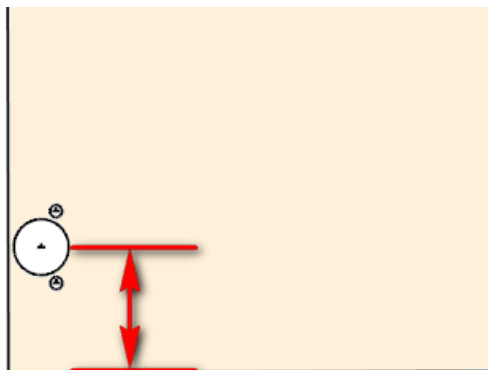


7 Top Hinge End Uppers

The Top Hinge End is the distance from the top of the door to the center of the top mounting plate for Upper cabinets.

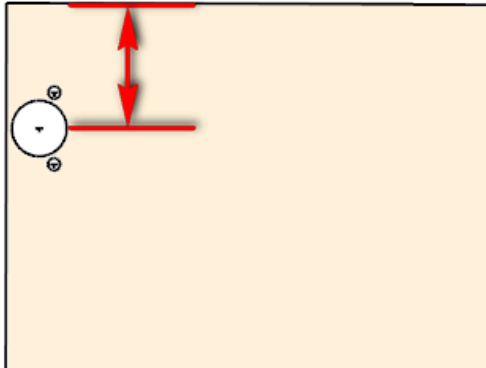


8 Bottom Hinge Start Base

The Bottom Hinge Start is the distance from the bottom of the door to the center of the bottom mounting plate for Base cabinets.

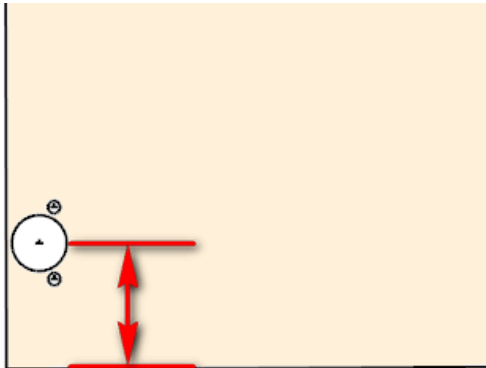

9 Top Hinge End Base


The Top Hinge End is the distance from the top of the door to the center of the top mounting plate for Base cabinets.

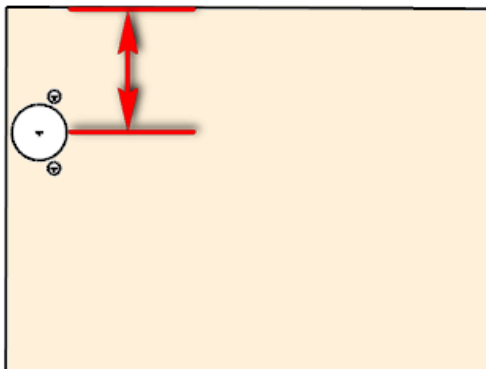

2) 3rd Hole


1 Hole Depth

Some mounting plates have a 3rd hole. Simple mounting plates use this for the back hole. Set this to 0 if you do not require the 3rd hold.

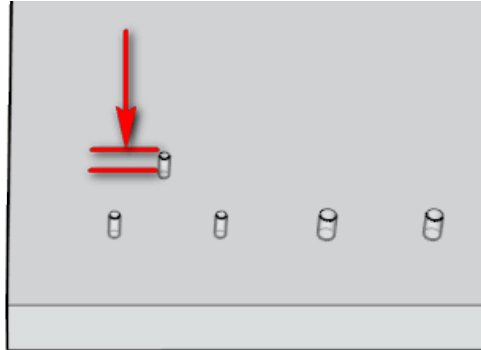


2 Hole Diameter

This is the diameter of the 3rd hole. Often it is 5mm when using euro screws. Set this value to drill the appropriate pilot hole that you require.

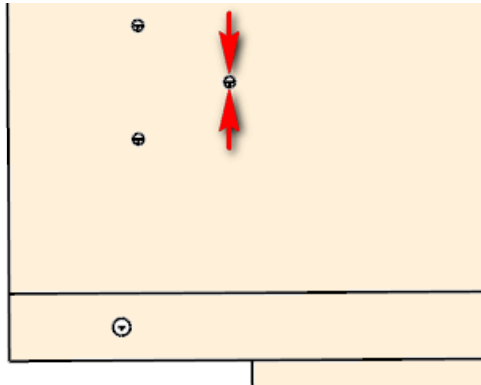

3 Third Offset


This is the distance at the vertical plane between front and back mounting holes.

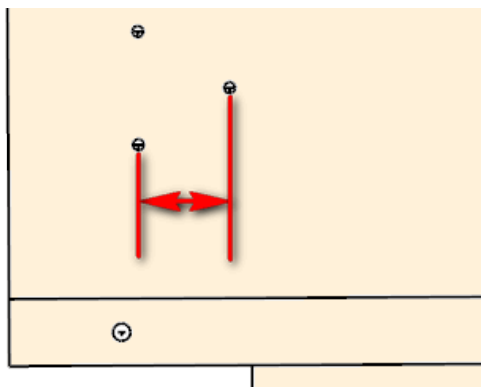

3) Cup Hinge


1 Cup Depth

The Cup Depth is the depth of the main hole. Set this to 0 if you do not want these holes. Only Slab doors and Embossed doors get Hinge holes.

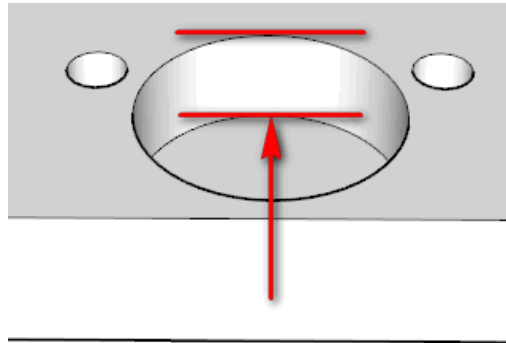


2 Cup Diameter

The Cup Diameter is usually 35mm. There are other sizes such as 26mm for mini hinges.

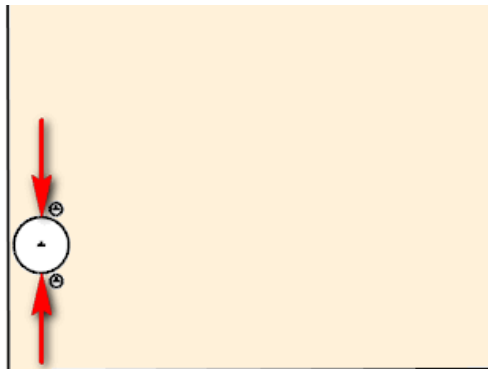


3 Hole Center

The Hole Center is from the Edge of the door to the center of the hole.

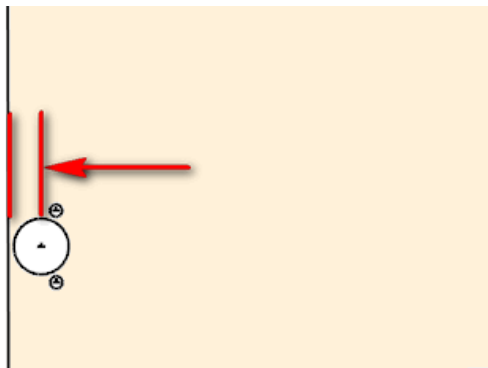

4 Length 3rd Hinge


Often you will want a 3rd hinge for very tall doors. If a door exceeds this value then a 3rd hinge will be centered between the other 2 hinges.



4) Door Mounting


1 Hole Depth

Set Hole Depth to 0 if you do not require hinge mounting holes in the doors. There are various options for fixing hinges to the doors.

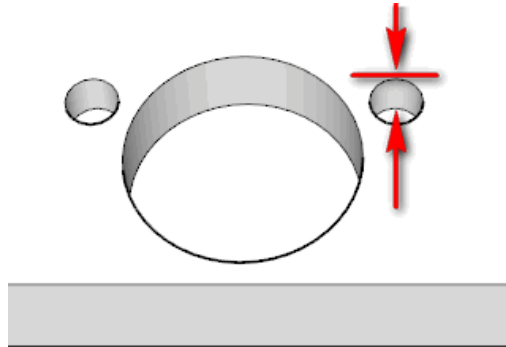


2 Hole Diameter

The Hole Diameter for the mounting system is set here.

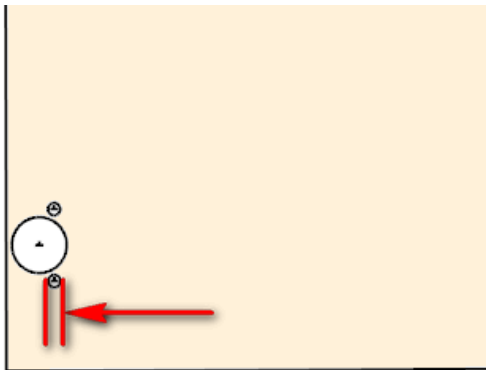


3 Hole Spacing

Hole Spacing is center to center for the two holes used for fastening the hinges to the doors.

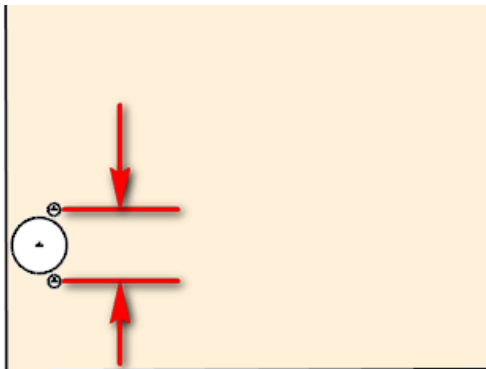

4 Offset

This is the distance at the vertical plane between the centers of the mounting holes and the Center of the main Cup hole. Since this is relative you can change the vertical position of the hinge or the offset of the hinge without having to change any of these other values.

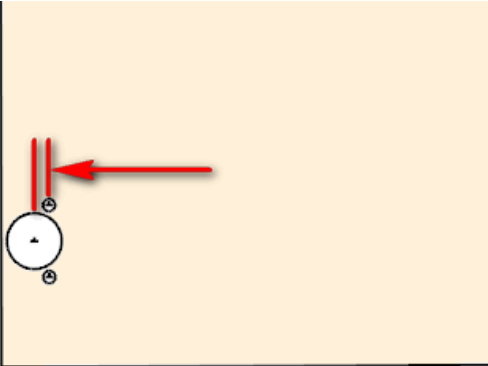

Connectors Tab

Currently we support Rafix, Cam Lock and Minifix Panel Connectors. Confirmats, Domino and Lamello are also supported. Rafix can be modified for Cabineo.

Rules

Main Options | CNC Globals | CNC Rules | Drawer Systems | Part Rotation

Rule Set: **default** | Save Rules | Clone Set | Delete Set | Close

Note

General | Holes | Doors | **Connectors**

1) Rafix or Cabineo (Fittings)

Rafix Depth: 8

Rafix Diameter: 20

From Edge: 3,6,14,8,26

Rafix Offset: 0

Rafix Offset Hangers: 0

Spacing List: 32,-32

Spacing List Split: 32

Spacing List Tall: 32,-32

Sink Stretcher List: 32,-32

Kick List: 0

Hanger List Top: 32,-32

Hanger List Bottom: 32,-32

2) Hanging Brackets

Depth: 8

Hole Diameter: 10

From Top: 42,5

Spacing List: -46,-78

Notch Height: 48

Notch Width: 25

Chord Height: 12

Chord Start: 20

Chord Length: 60

3) Rafix for Backs

Rafix Bolt Depth: 8

Bolt Hole Pilot Diameter: 5

Rafix Bolt Offset: 8

Use Rafix:

1 Rafix Back Taller than: 300

2 Rafix Back Taller than: 600

3 Rafix Back Taller than: 1200

Mortise Thickness: 18

Mortise Depth: 8

Mortise Thickness Adj: 0,5

Depth Adjustment: 0

Bit Diameter: 6

Back Offset Adjust: 1,5

Top Notch: 20

Bottom Notch: 20

Gap in Tenon: 26

4) Rafix Dowel

Dowel Depth: 0

Dowel Diameter: 10

Dowel Offset: 32

5) Minifix or Cam Lock

Depth: 0

Diameter: 15

From Edge: 24

Spacing List: 48,-48

Spacing List Split: 48

Spacing List Tall: 48,-48

Sink Stretcher List: 32,-32

Kick List: 32,-32

Hanger List Top: 32,-32

Hanger List Bottom: 32,-32

6) Pocket Screws for Backs

Depth: 0

Hole Diameter: 10

Pocket Length: 40

Vertical Offset: 20

Horizontal Offset: 75

Minimum Width: 200

Maximum Spacing: 300

7) Leg Levelers

Depth: 0


Hole Diameter: 15

Center to Center: 1

1) Rafix or Cabineo (Fittings)


1 Rafix Depth

This is the depth of the main hole for the Rafix connector. Set this value to 0 if you do not use Rafix connectors. If you use Rafix connectors then this value is typically 12.7mm. Check your specific Rafix connector's drilling information.

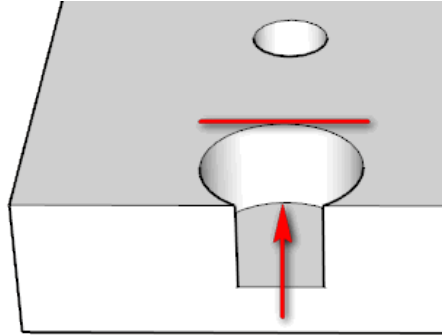


2 Rafix Diameter

This is the diameter of the main hole for the Rafix connector. If you use Rafix connectors then this value is typically 24mm. There are other Rafix connectors that use a 20mm diameter.

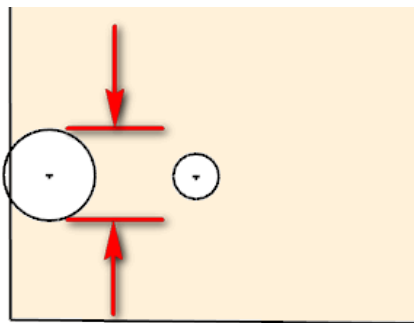


3 From Edge

This is the center of the the main hole to the edge of the Panel. The 24mm diameter connector typically requires the center of the hole to be 8.8mm from edge. 20Mm diameter connectors often need the hole's center to be 9.5mm from the edge.

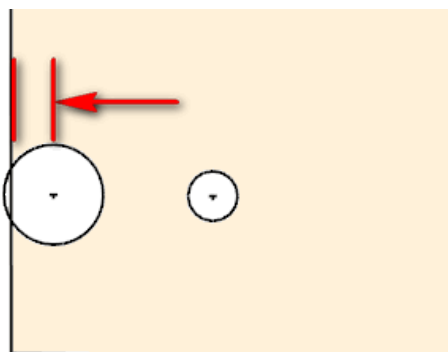


4 Rafix Offset

This is the adjustment for the positioning of the Rafix fitting. In this example it would be set to the same value as the Tenon Length.

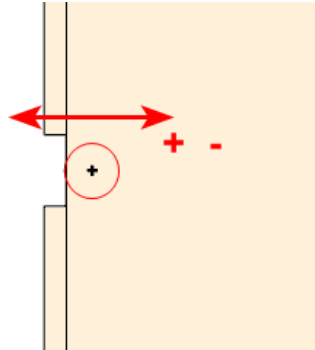

5 Rafix Offset Hangers

This is the adjustment for the positioning of the Rafix fitting. In this example it would be set to the same value as the Tenon Length. This is a separate parameter since Hangers can be of a different thickness.

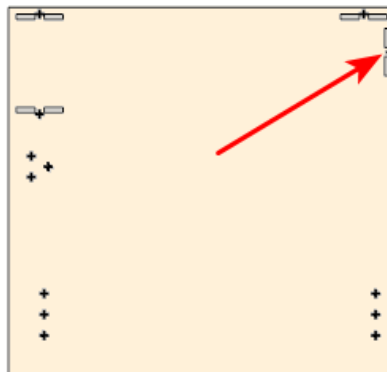


6 Spacing List

This is a list of distances to the center of the holes from the front edge and from the back edge of the side panel for base and upper cabinets. The list is separated by commas. Values that are positive are from the front edge and values that are negative are from the back edge. "c1" and "c2" are supported here.




7 Spacing List Split

This is a list of distances to the center of the holes from the front edge and from the back edge of the side panel for base cabinets where they have Split Tops. The list is separated by commas. Values that are positive are from the front edge and values that are negative are from the back edge.

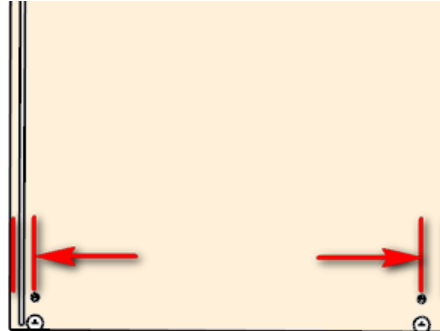


8 Spacing List Tall

This is a list of distances to the center of the holes from the front edge and from the back edge of the side panel. The list is separated by commas. Values that are positive are from the front edge and values that are negative are from the back edge. This extra list allows you to have additional connectors for tall cabinets. "c1" and "c2" are supported here.

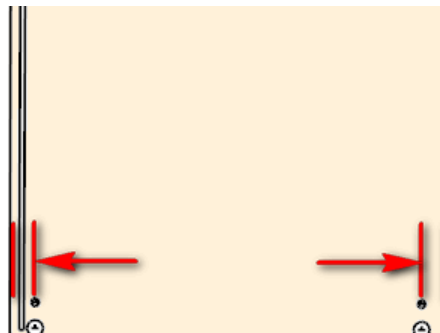


9 Sink Stretcher List

You can provide 0, 1 or more locations for the Rafx Fitting. The Rafx Bolt would be drilled on the Side Panel.

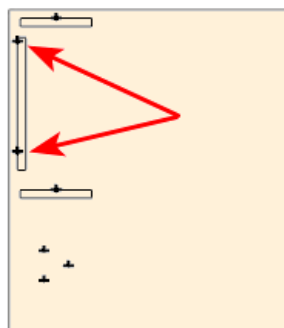


10 Kick List

You can provide 0, 1 or more locations for the Rafx Fitting. The Rafx Bolt would be drilled on the Side Panel.

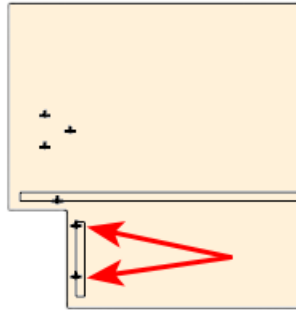


11 Hanger List Top

You can provide 0, 1 or more locations for the Rafx Fitting. The Rafx Bolt would be drilled on the Side Panel.

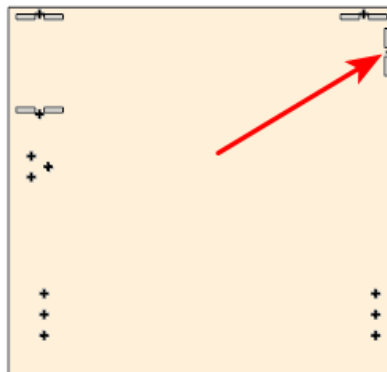

12 Hanger List Bottom


You can provide 0, 1 or more locations for the Rafx Fitting. The Rafx Bolt would be drilled on the Side Panel.

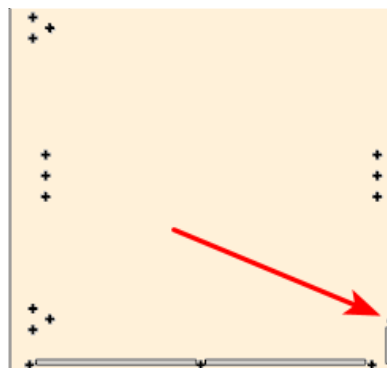

2) Hanging Brackets


1 Depth

If you use Hanging Brackets when installing Upper cabinets then set the Depth for the fastening dowels here. Make sure that you check the specifications as these holes must be sufficiently deep and have precise diameter. Set this value to 0 if you do not use Hanging Brackets.

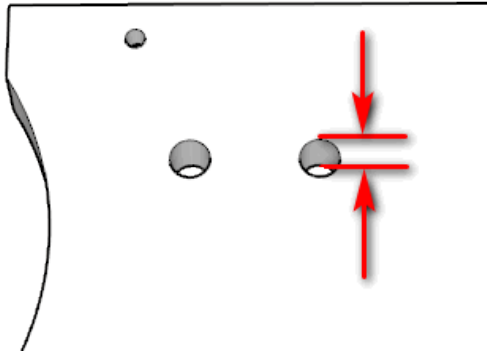


2 Hole Diameter

Set the Diameter for fastening dowels here. Make sure that you check the specifications.

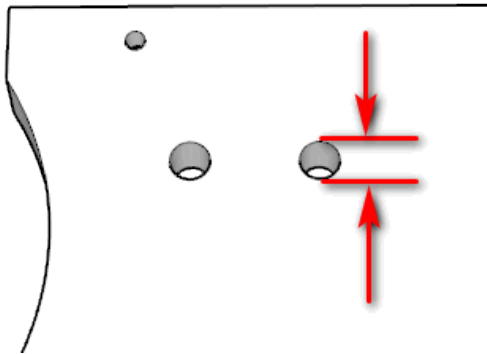


3 From Top

This is the distance from the top edge of the side panel to the center of the dowel hole.

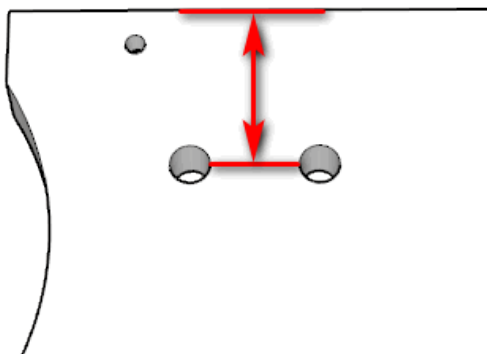


4 Spacing List

This is a list of distances to the center of the holes from the back edge of the side panel for upper cabinets. The list is separated by commas. Just use negative values.

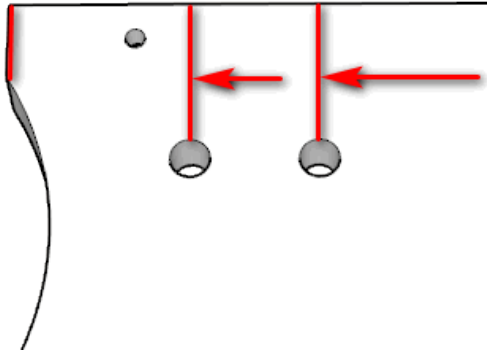


5 Notch Height

When using Back panels you need to notch the top corners in order to provide clearance for the Hanging bracket.

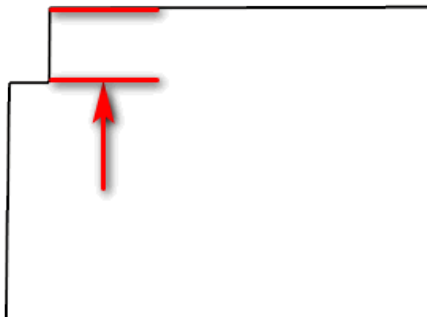


6 Notch Width

When using Back panels you need to notch the top corners in order to provide clearance for the Hanging bracket.

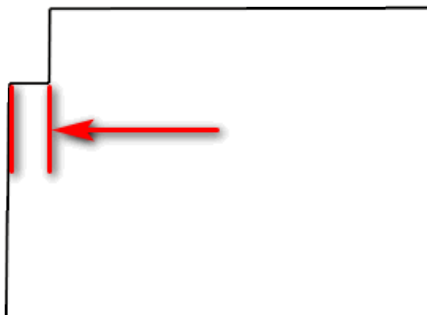


7 Chord Height

We use the arc cut away as it is the easiest on CNC and the fastest. If you don't want the arc then set the Chord Height to 0.

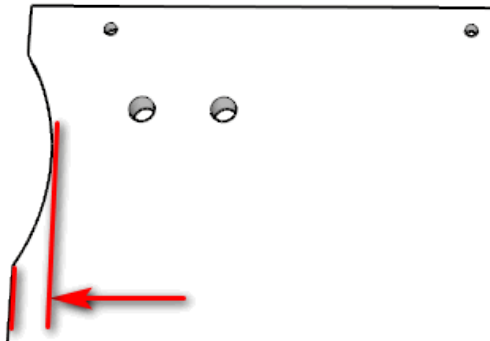


8 Chord Start

This is the distance from the top edge of the side panels to the beginning of the arc.

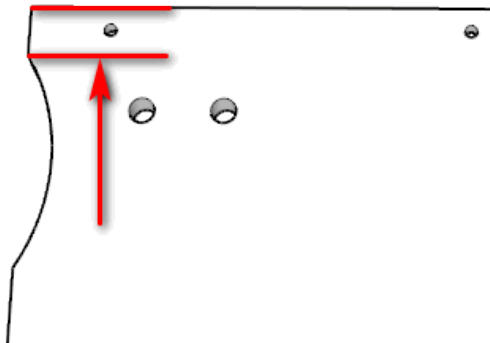

9 Chord Length


This is the overall length of the arc.

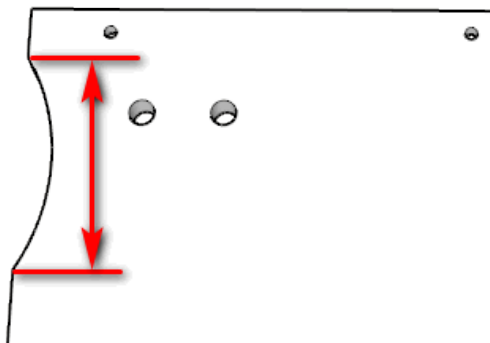

3) Rafx for Backs


1 Rafx Bolt Depth

Enter the depth for the Rafx Bolt.

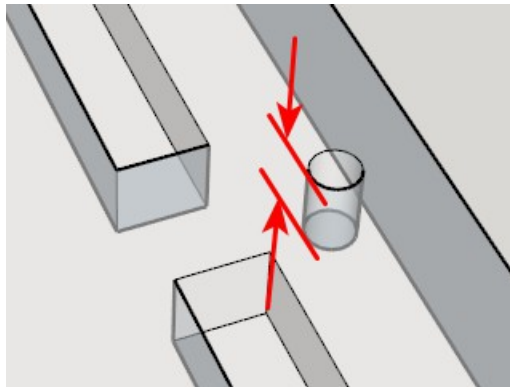


2 Bolt Hole Pilot Diameter

This is the Diameter of the pilot hole for the Rafx Bolt.

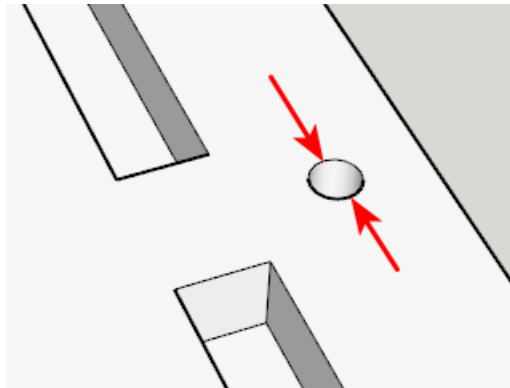


3 Rafx Bolt Offset

The Rafx Bolt hole can be finely tuned to provide a cleaner joint. This can be accomplished by setting the offset by aprox. 0.5 mm .

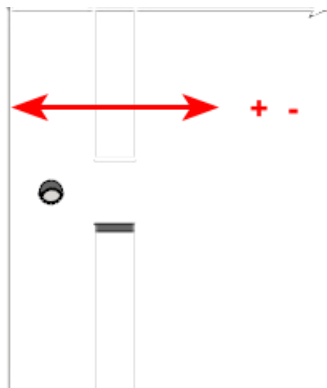


4 Use Rafix

Uncheck this option if you want mortise and tenon's for the back but you don't want to use Rafix Fittings.

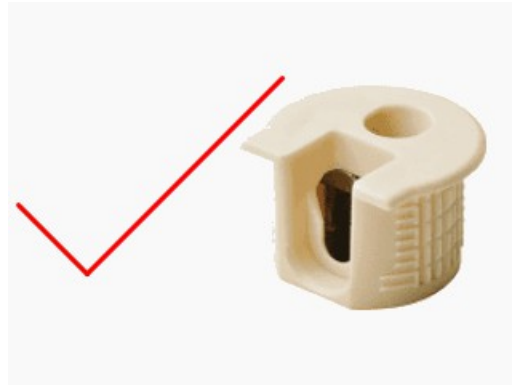


5 1 Rafix Back Taller than

Set this to the shortest back height to have at least 1 Rafix Fitting.

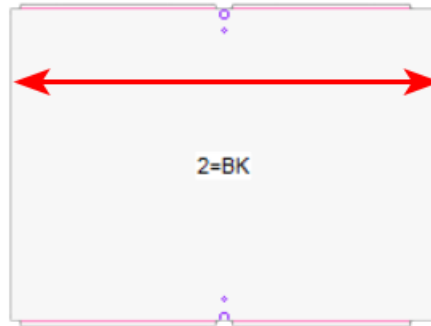


6 2 Rafix Back Taller than

Set this to the shortest back height to have at least 2 Rafix Fittings.

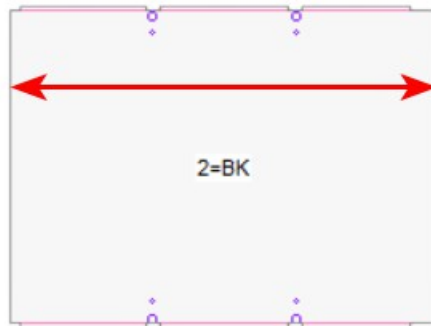


7 3 Rafix Back Taller than

Set this to the shortest back height to have at least 3 Rafix Fitting.

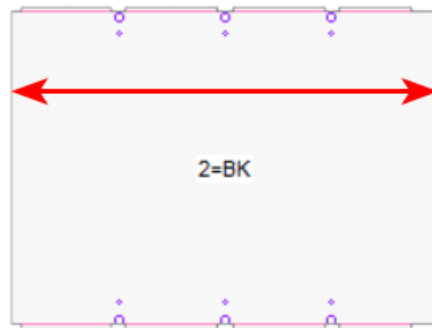


8 Mortise Thickness

This is the width of the Mortise. You can adjust this width for a single pass even after sharpening router bits .

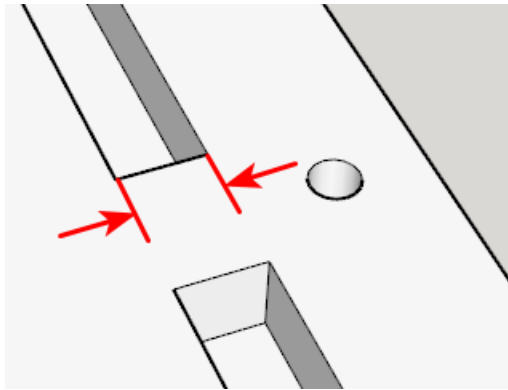


9 Mortise Depth

The Mortise depth should be at least the same as the Tenon Length. Usually you want the Mortise to be slightly deeper than the Tenon is long

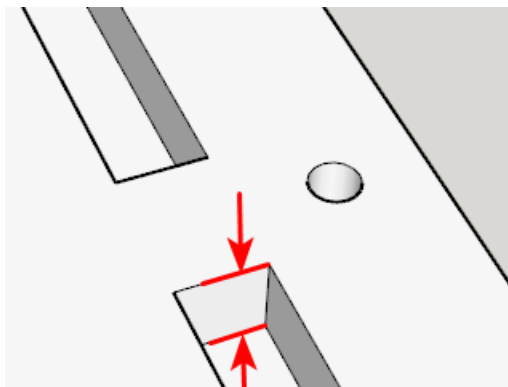


10 Mortise Thickness Adj

This is the micro adjust for the tenon thickness.

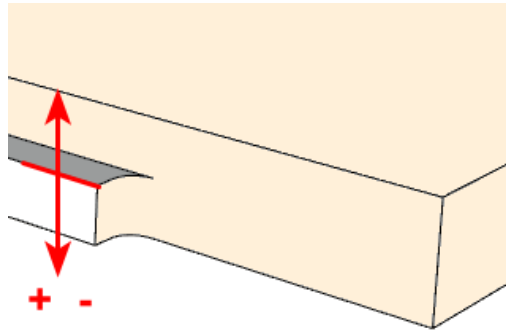


11 Depth Adjustment

The Mortise Depth adjustment allows you to have a bit more room to handle the length of the Tenon

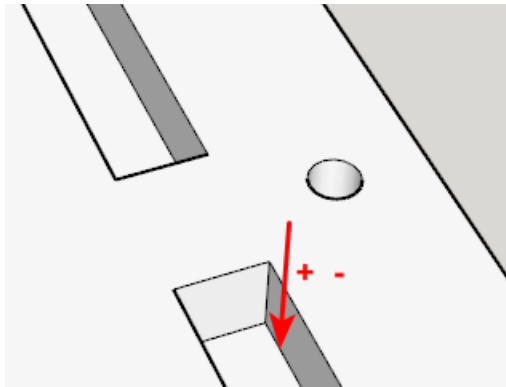


12 Bit Diameter

The bit Diameter is used to determine the Mortise Overruns. Single pass adds 1 bit Diameter to the overall length of the mortise and Pocket cuts adds 2 * bit diameter overrun.

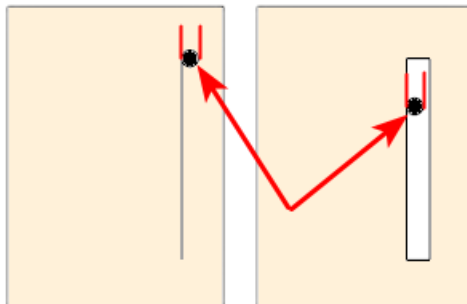

13 Back Offset Adjust

You can move the Back in or out based on the Back Offset Adjust.

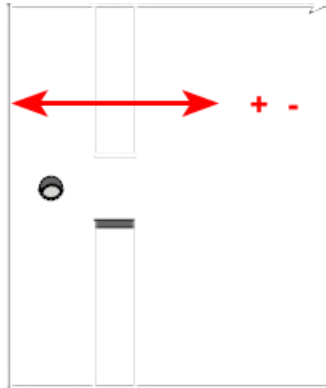

14 Top Notch

This is the optional Top Notch value. This allows the mortise to be blind which in turn allows the edgebander to band the top and or bottom of the sides without having the mortise / dado to go through the side.




15 Bottom Notch

This is the optional Bottom Notch value. This allows the mortise to be blind which in turn allows the edgebander to band the top and or bottom of the sides without having the mortise / dado to go through the side.



16 Gap in Tenon


The Gap in Tenon provides more meat for the Rafix bolt.

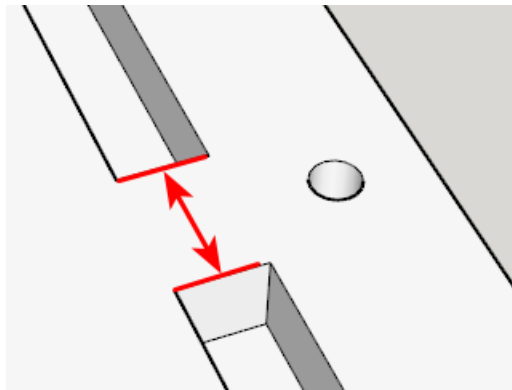

4) Rafix Dowel


1 Dowel Depth

This is the depth of the optional dowel hole for the Rafix connector. Set this value to 0 if you do not have a Rafix Dowel. A typical value for the depth of the dowel is 10mm. Check your specific Rafix connector's drilling information.

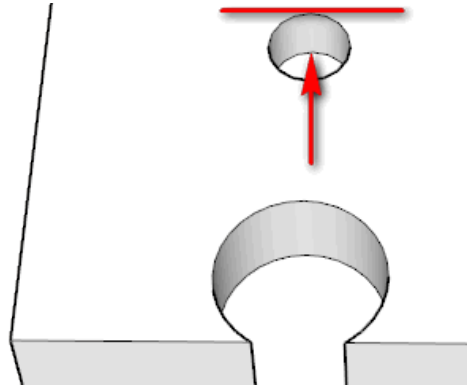


2 Dowel Diameter

This is the diameter of the Rafix dowel. It is typically 8mm. Check your specific Rafix connector's drilling information.

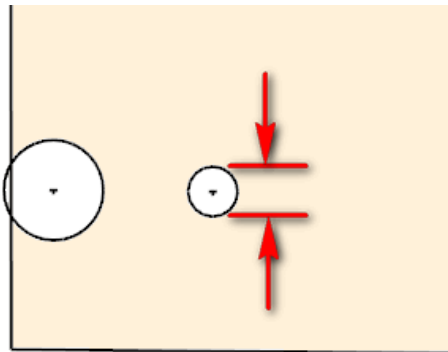

3 Dowel Offset


The Hole Offset value for the Rafix Dowel is the center to center distance on plane between the main Rafix Hole and the Rafix Dowel. Typically it is 32mm.

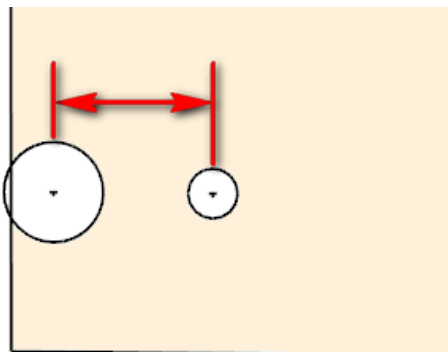

5) Minifix or Cam Lock


1 Depth

This is the depth of the main hole for the Minifix connector. Set this value to 0 if you do not use Minifix connectors. If you use Minifix connectors then this value is dependent on the thickness of your case material. Check your specific Minifix connector's drilling information.

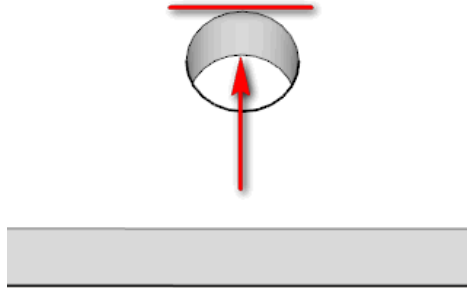


2 Diameter

This is the diameter of the main hole for the Minifix connector. If you use Minifix connectors then this value is typically 15mm although there are Minifix connectors that use a 12mm diameter.

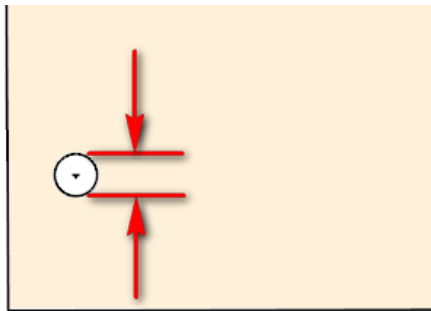


3 From Edge

This is the center of the the main hole to the edge of the Panel. The 15mm diameter connector come in different styles and the From Edge value could be 24mm or 34mm.

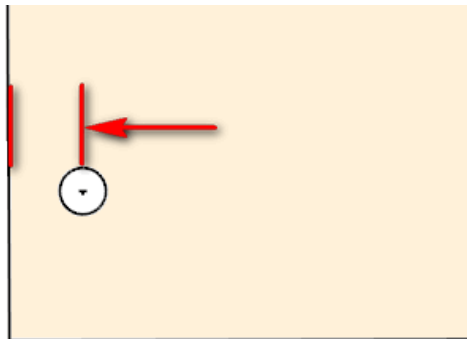


4 Spacing List

This is a list of distances to the center of the holes from the front or back edge of the side panel for base and upper cabinets. The list is separated by commas. Positive values are from the front edge and negative values are from the back edge. "c1" and "c2" are supported here.

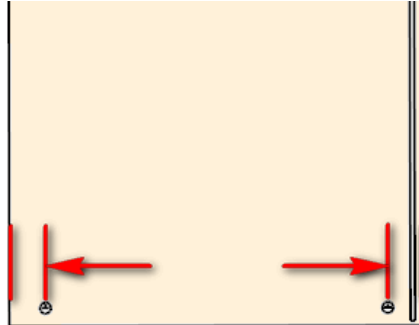


5 Spacing List Split

This is a list of distances to the center of the holes from the front or back edge of the side panel for base cabinets where they have Split Tops. The list is separated by commas. Positive values are from the front edge and negative values are from the back edge.

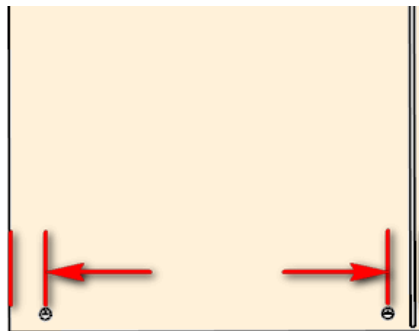


6 Spacing List Tall

This is a list of distances to the center of the holes from the front or back edge of the side panel. The list is separated by commas. Positive values are from the front edge and negative values are from the back edge. This extra list allows you to have additional connectors for tall cabinets. "c1" and "c2" are supported here.

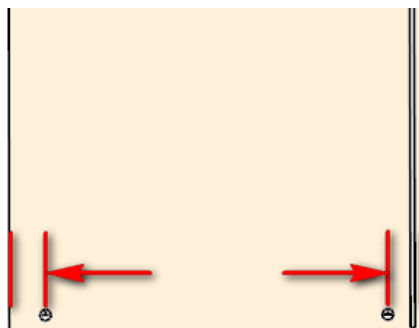


7 Sink Stretcher List

You can provide 0, 1 or more locations for the Fitting. The Bolt would be drilled on the Side Panel.

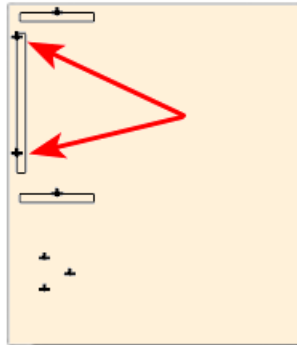


8 Kick List

You can provide 0, 1 or more locations for the Fitting. The Bolt would be drilled on the Side Panel.

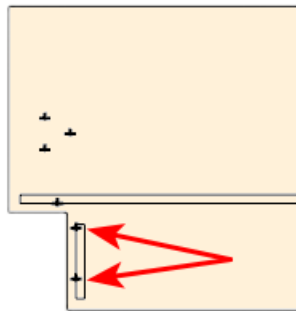


9 Hanger List Top

You can provide 0, 1 or more locations for the Fitting. The Bolt would be drilled on the Side Panel.

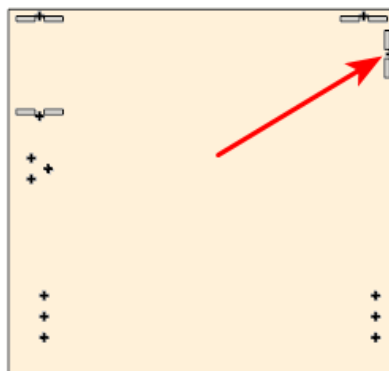

10 Hanger List Bottom


You can provide 0, 1 or more locations for the Fitting. The Bolt would be drilled on the Side Panel.

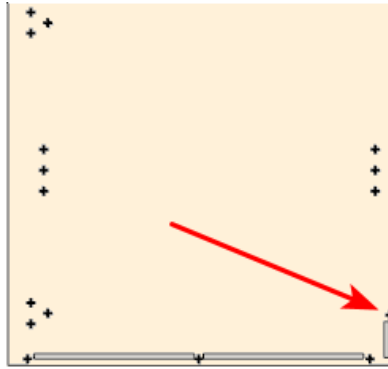

6) Pocket Screws for Backs


1 Depth

This is the depth of the pocket for the Pocket Screws.

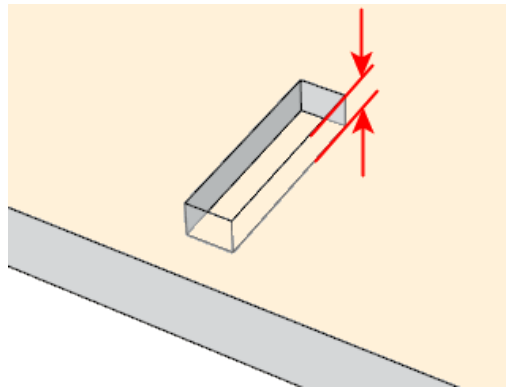


2 Hole Diameter

This is the Width of the Pocket which is created with a single pass as opposed to a pocket.

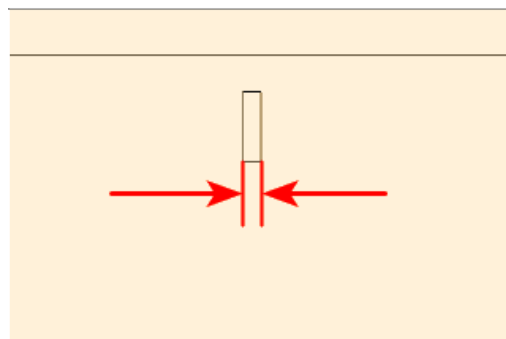


3 Pocket Length

Enter the length of your pocket in this parameter.

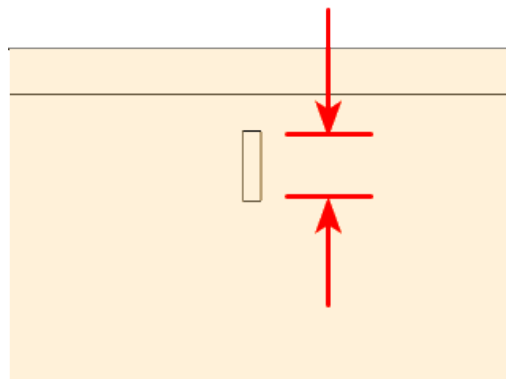


4 Vertical Offset

Enter the Vertical Offset in the next parameter.

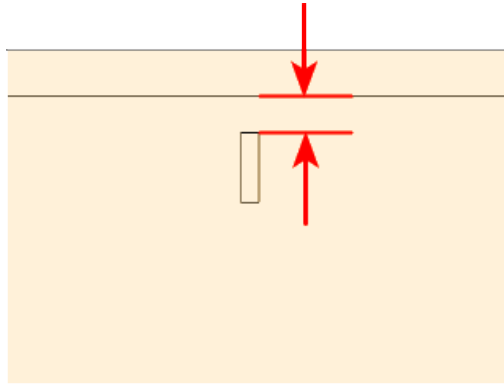


5 Horizontal Offset

The Horizontal Offset allows you to specify how close to the edge of the back panel that you want your pockets (on both sides).

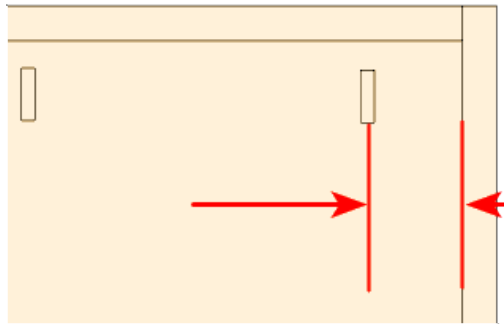


6 Minimum Width

The back panel must be at least this wide otherwise there will be no pockets.

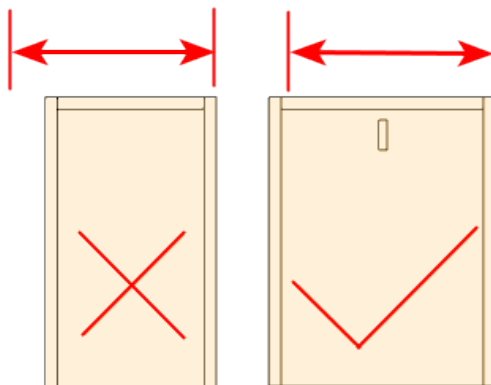

7 Maximum Spacing


This parameter is used to guarantee that your pockets won't exceed this spacing.

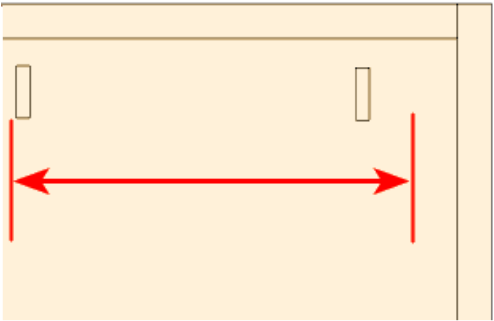

7) Leg Levelers


1 Depth

This is the depth for the main leg hole. Set this value to 0 if you do not use Leg Levelers.

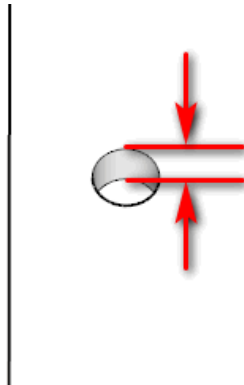


2 Hole Diameter

This is the diameter for the main leg hole.

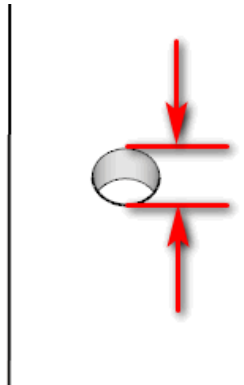

3 Center to Center

Set to 0 if leg requires a single hole otherwise set center to center value for 4 holes.

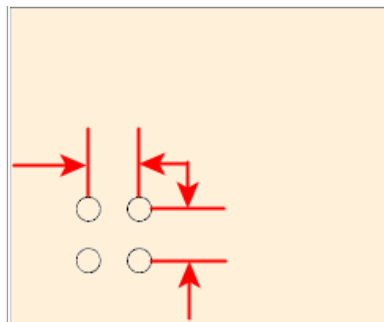

Drawer Systems Tab

A Cabinet can have different Drawer hardware and Pullout hardware. There are a lot of settings when it comes to these systems.

Sides Tab

Drawer Systems with side mount drawer slides use this section to specify mounting holes.

The screenshot shows the 'Options' dialog box with the 'Sides' tab selected. The 'Drawer Systems' sub-tab is active. The 'Detail Set' is 'BLUM_16'. The 'Note' field is empty. The 'Sides' sub-tab is selected, and the 'Show More' checkbox is checked. The settings are organized into five numbered sections:

- 1) Drawer Side Pilot Construction Holes:**
 - PILOT
 - could_be_layer_name_for_horizontal_holes
 - Pilot holes drw sides to sub-front and rear end
 - Through Drill Value: 0
 - Use Side Thickness for Depth: -1
 - Hole Diameter: 3
 - Horizontal Depth: 0
 - Spacing List: 32,192
 - Front Edge: 9
 - Back Edge: 9
- 2) Drawer Side Bottom Groove:**
 - DrwSidBotGroov
 - Groove on drw sides to receive drw bottom
 - Groove Depth: 9
 - Groove Width: 0
 - Pocket Overrun: 14
 - Inset Bottom: 31
 - Front and Back Groove Depth: 0
 - Front Back Sides
- 3) Drawer Side Bottom Edge Rabbet:**
 - PkDrwRabDwn
 - Drw side rabbet bot edge of side for 16mm hardware
 - Cut Depth: 2.5
 - Groove Width: 13
 - Pocket Overrun: -4
 - Inset Bottom: 0
 - Front and Back Groove Depth: 0
 - Front Back Sides
- 4) Drawer Side Bottom Groove:**
 - 2nd copy of Drawer Bottom Dado on Sides
 - Groove Depth: 9
 - Groove Width: 0
 - Pocket Overrun: -2
 - To Top Edge Drw Side Dado: 31
 - Front and Back Groove Depth: 0
 - Front Back Sides
- 5) Drawer Side Edge Rabbet To 16:**
 - Drw side rabbet bot edge of side for 16mm hardware
 - Cut Depth: 2.5
 - Groove Width: 13
 - Pocket Overrun: -4
 - Inset Bottom: 0
 - Front and Back Groove Depth: 0
 - Front Back Sides

1) Drawer Side Pilot Construction Holes

Pilot holes Drawer Sides to sub-front and rear end.

1 Layer Name


This is the Layer Name for Drawer Side Hardware Holes.

2 Comment / Purpose

This is the Comment for Drawer Side Hardware Holes.


3 Through Drill Value

This is the depth for Drawer Construction Holes. Set this value to 0 if you do not want Drawer Construction Holes.

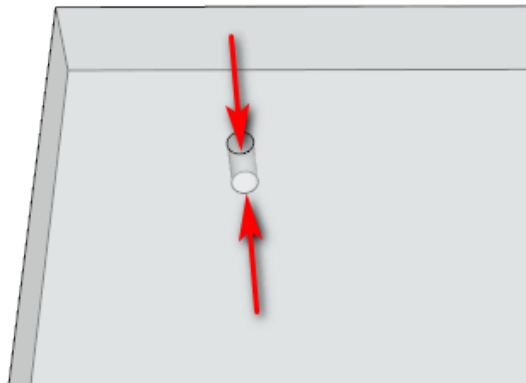

4 Use Side Thickness for Depth

Set this parameter to -1 if you do not want to use it. If you provide it with a value then the Depth will be determined by the thickness of the Sides plus the value of the Auto Depth. The Depth setting must be greater than 0 to turn on the drilling, however it's value is otherwise ignored.

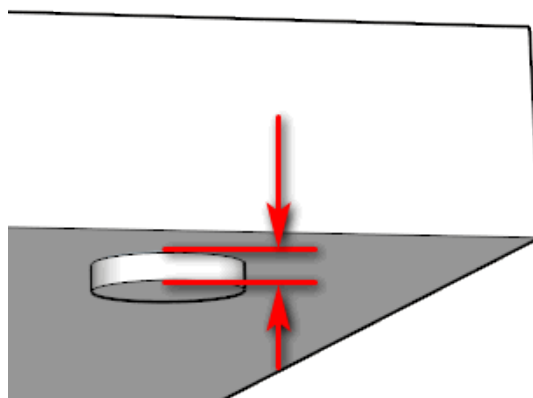


5 Hole Diameter

This is the diameter of the dowels for the Construction Holes.



6 Horizontal Depth

This is for end drilling the Drawer Box Backs and Fronts. Currently supported for Wood Hog. You can set the depth.

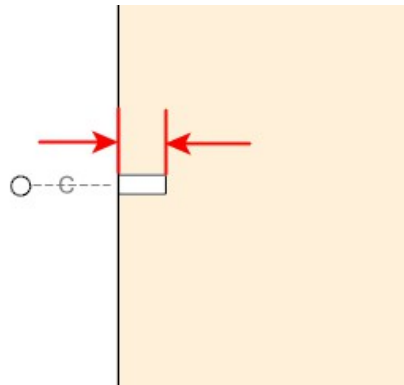


7 Spacing List

This is a list of distances to the center of the holes from the top or bottom edge of the drawer side. The list is separated by commas. Positive values are from the top edge and negative values are from the bottom edge. "c1" and "c2" are supported here.




8 Front Edge

This is the distance from the end of the drawer side to the center of the Construction Holes.

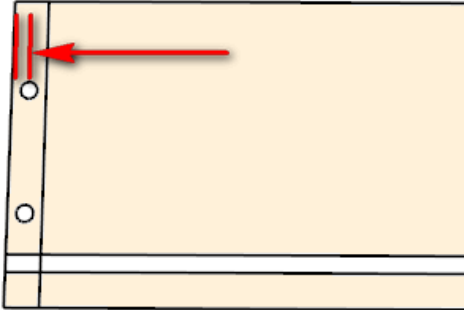

9 Back Edge

This is the distance from the top of the drawer side to the center of the first Construction Hole.

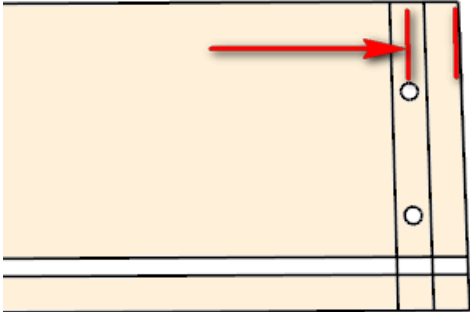

2) Drawer Side for Bottom Groove

This is the width of the dado used by Drawer boxes for sides, backs and fronts.

1 Layer Name


This is the Layer Name for Drawer Side Bottom Groove.

2 Comment / Purpose

This is the Comment for Drawer Side Bottom Groove.


3 Groove Depth

Dado on drawer parts that receives drawer bottom.

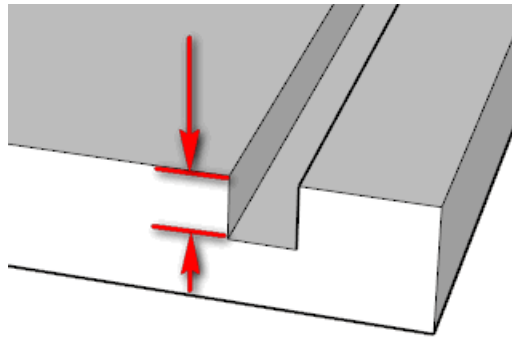


4 Groove Width

This is the width of the dado used by drawer boxes for sides, backs and fronts.

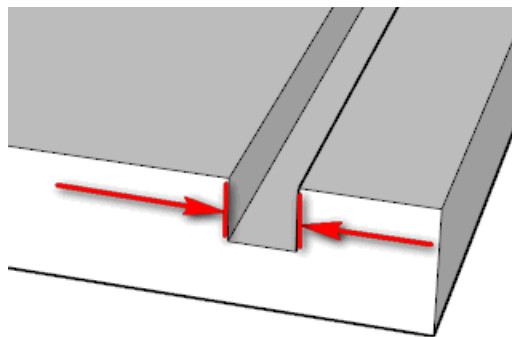


5 Pocket Overrun

This is how much you want the router to run past the part.

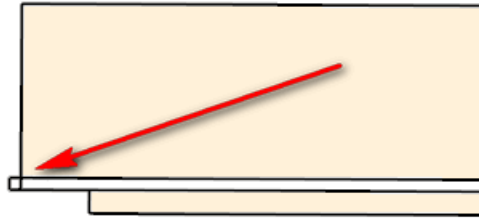


6 Inset Bottom

This is the amount you want the dado offset used by drawer parts for sides, backs and fronts.

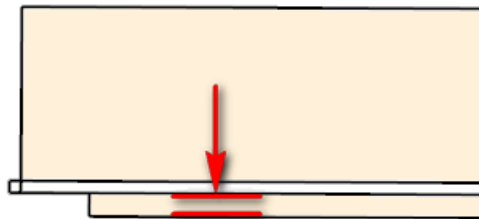


7 Front And Back Groove Depth

Dado on drawer parts that receives drawer bottom.

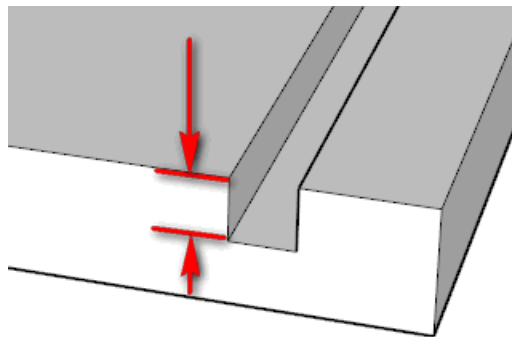


8 Front

Dado on drawer parts that receives drawer bottom.

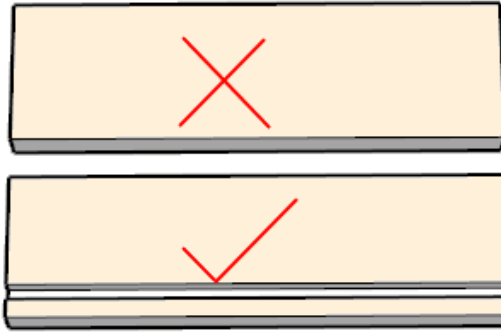


9 Back

Dado on drawer parts that receives drawer bottom.

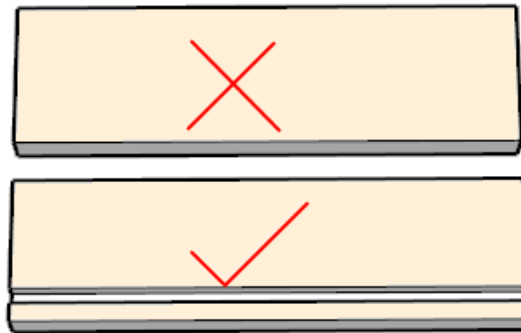

10 Sides

Dado on drawer parts that receives drawer bottom.

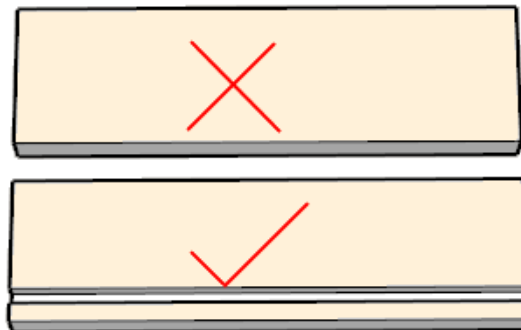

3) Drawer Side Bottom Edge Rabbet

Drawer Side rabbet bottom edge of side for 16mm hardware.

1 Layer Name


This is the Layer Name for Drawer Side Bottom Groove.

2 Comment / Purpose

This is the Comment for Drawer Side Bottom Groove.


3 Cut Depth

Rabbet at bottom of plywood drawer sides to allow use of hardware designed for 16mm sides.

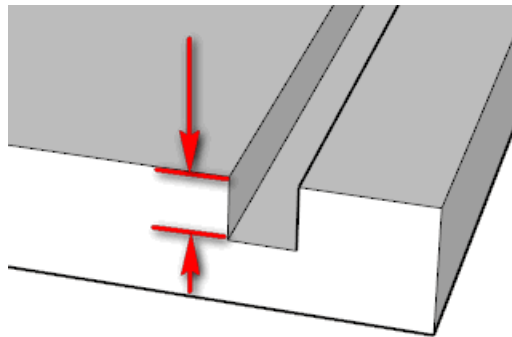


4 Groove Width

This is the width of the dado used by drawer boxes for sides, backs and fronts.

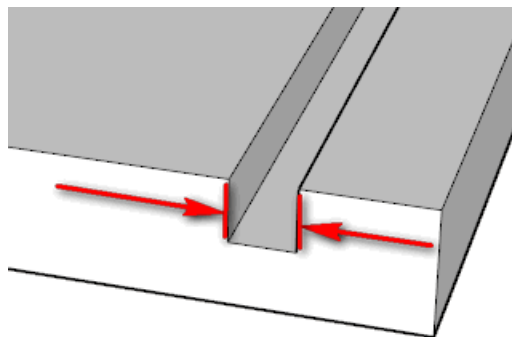


5 Pocket Overrun

This is how much you want the router to run past the part.

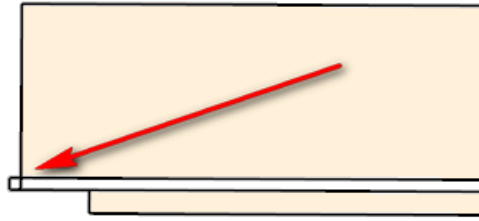


6 Inset Bottom

This is the amount you want the dado offset used by drawer parts for sides, backs and fronts.

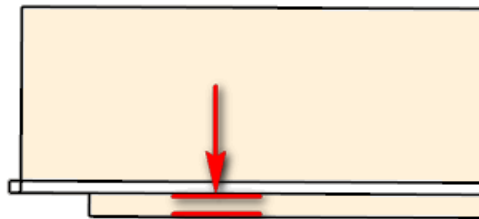


7 Front And Back Groove Depth

Rabbit at bottom of plywood drawer sides to allow use of hardware designed for 16mm sides.

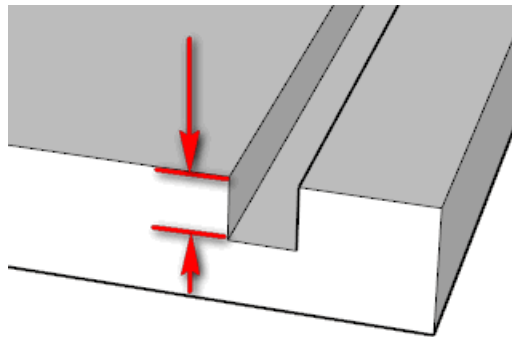


8 Front

Rabbet at bottom of plywood drawer sides to allow use of hardware designed for 16mm sides.

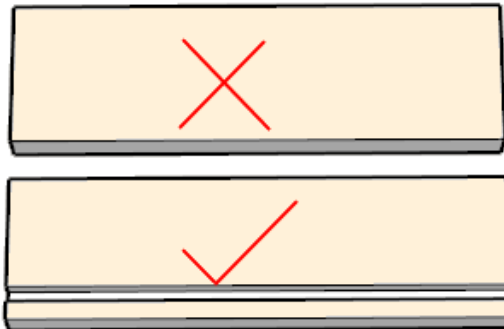


9 Back

Rabbet at bottom of plywood drawer sides to allow use of hardware designed for 16mm sides.

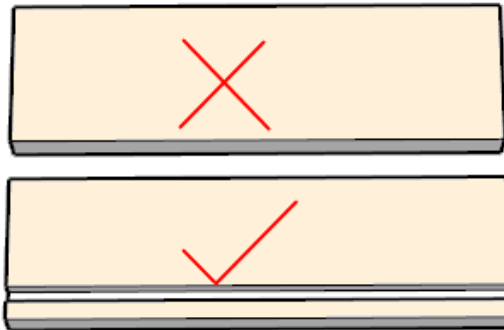

10 Sides

Rabbet at bottom of plywood drawer sides to allow use of hardware designed for 16mm sides.

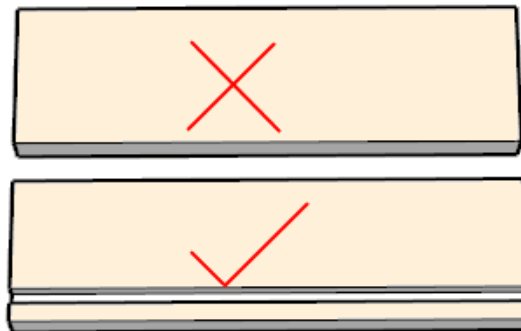

4) Drawer Side Bottom Edge Rabbet

2nd copy of Drawer Bottom Dado on Sides.

1 Layer Name


This is the Layer Name for Drawer Side Bottom Groove.

2 Comment / Purpose

This is the Comment for Drawer Side Bottom Groove.


3 Groove Depth

Dado on drawer parts that receives drawer bottom.

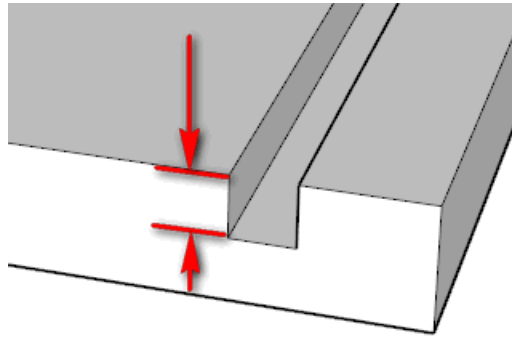


4 Groove Width

This is the width of the dado used by drawer boxes for sides, backs and fronts.

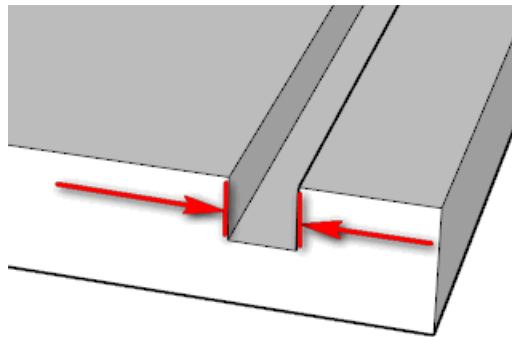


5 Pocket Overrun

This is how much you want the router to run past the part.

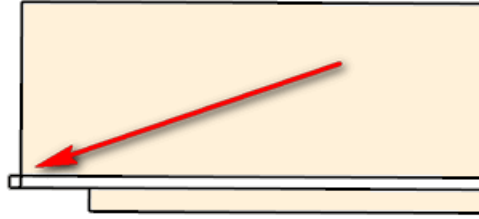


6 To Top Edge Drw Side Dado

This is the amount you want the dado offset used by drawer parts for sides, backs and fronts.

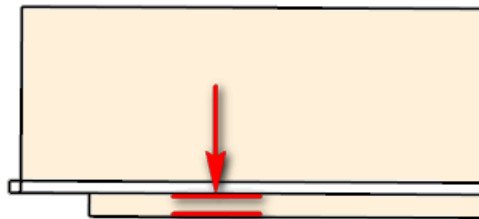


7 Front And Back Groove Depth

Dado on drawer parts that receives drawer bottom.

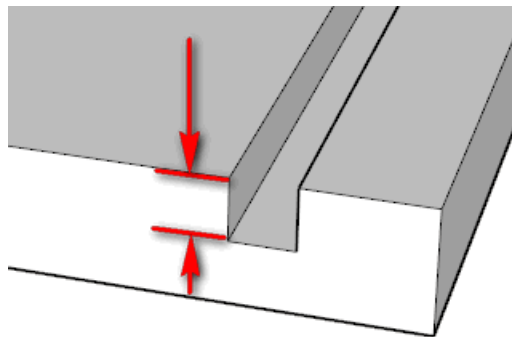


8 Front

Rabbet at bottom of plywood drawer sides to allow use of hardware designed for 16mm sides.

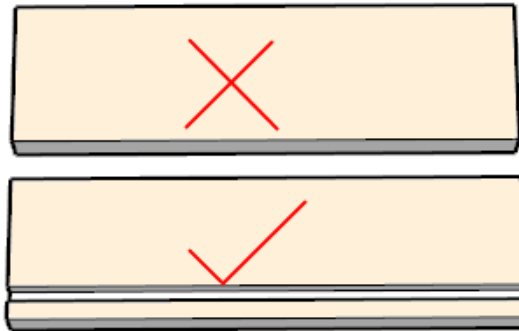


9 Back

Rabbet at bottom of plywood drawer sides to allow use of hardware designed for 16mm sides.

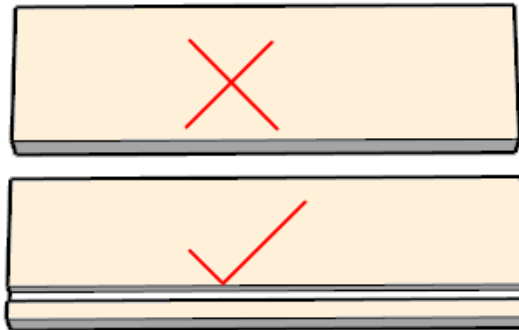

10 Sides

Rabbet at bottom of plywood drawer sides to allow use of hardware designed for 16mm sides.

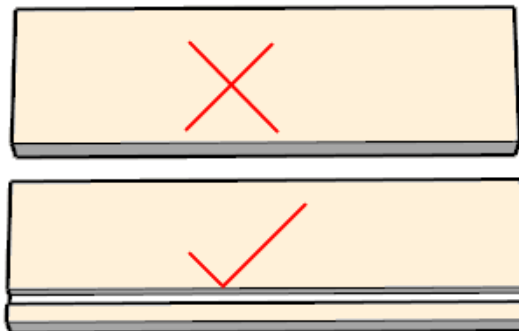

5) Optional Side Dado

Another copy of Drawer Bottom Dado on Sides.

1 Layer Name


This is the Layer Name for Drawer Side Bottom Groove.

2 Comment / Purpose

This is the Comment for Drawer Side Bottom Groove.


3 Cut Depth

Rabbet at bottom of plywood drawer sides to allow use of hardware designed for 16mm sides.

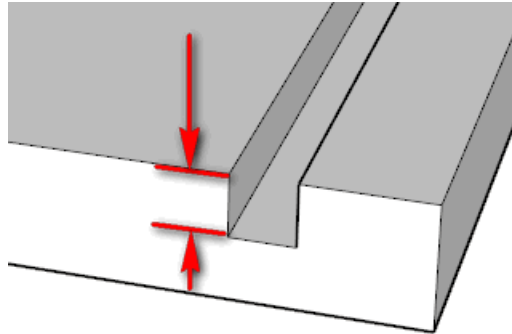


4 Groove Width

This is the width of the dado used by drawer boxes for sides, backs and fronts.

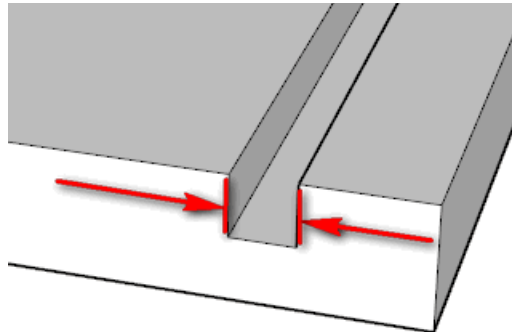


5 Pocket Overrun

This is how much you want the router to run past the part.

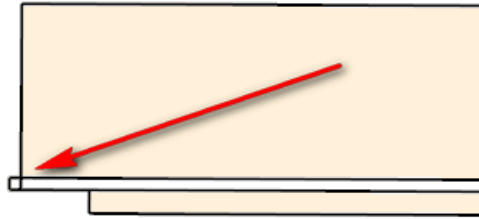


6 Inset Bottom

This is the amount you want the dado offset used by drawer parts for sides, backs and fronts.

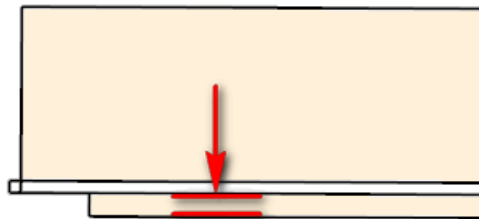


7 Front And Back Groove Depth

Rabbit at bottom of plywood drawer sides to allow use of hardware designed for 16mm sides.

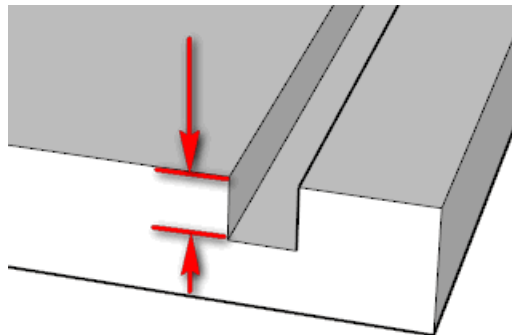


8 Front

Rabbet at bottom of plywood drawer sides to allow use of hardware designed for 16mm sides.

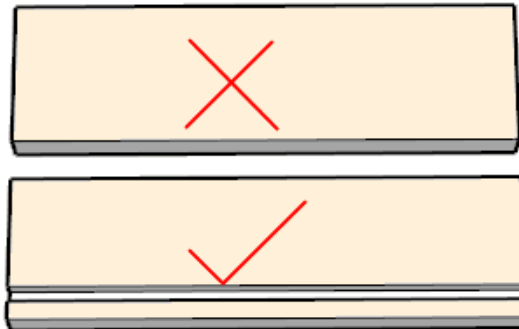


9 Back

Rabbet at bottom of plywood drawer sides to allow use of hardware designed for 16mm sides.

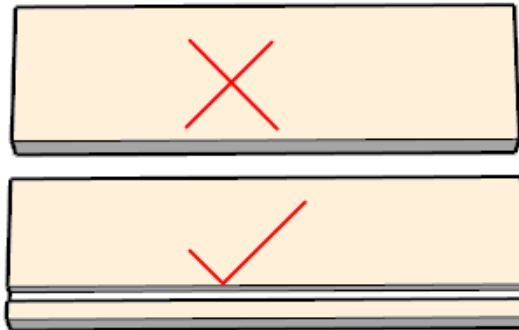

10 Sides

Rabbet at bottom of plywood drawer sides to allow use of hardware designed for 16mm sides.

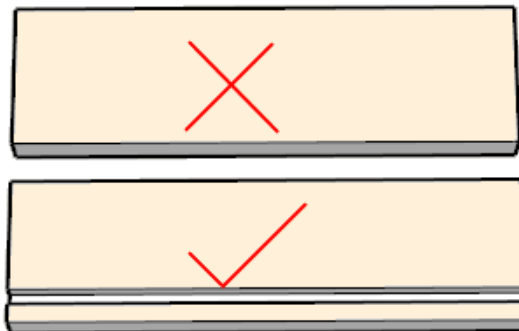

Fronts Tab

This tab contains the machining information for the back side of Drawer Fronts.

1) Drawer Front Handle Holes

Holes for drawer front handles or knobs.

1 Layer Name


This is the Layer Name for Drawer Front Handle Holes.

2 Comment / Purpose

This is the Comment for Drawer Front Handle Holes


3 Through Drill Value

Set to 0 to turn off this section.

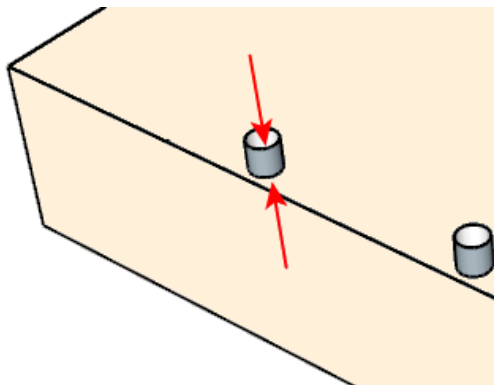

4 Drw Front Thickness for Depth

Set to -1 to ignore the auto adjustment.

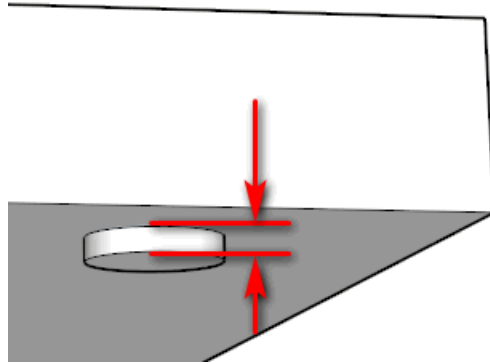


5 Diameter

This is the diameter of the pullout finished front dowel holes.




6 Top Offset

This is the distance from the top edge to the center of the holes

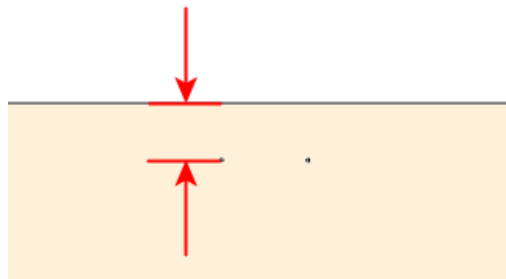

7 Center to Center

Handles have 2 holes. This is the center to center distance. Set to 0 if using a knob with a single centered hole.

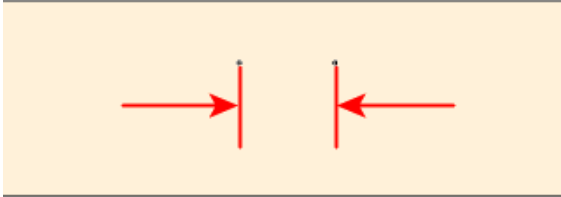

2) Drawer Front Holes (for connection to sides)

Only needed for 3-sided pullout box.

1 Layer Name


This is the Layer Name for Pullout Front Holes.

2 Comment / Purpose

This is the Comment for Pullout Front Holes.

3 Through Drill Value

Set to 0 to turn off this section.

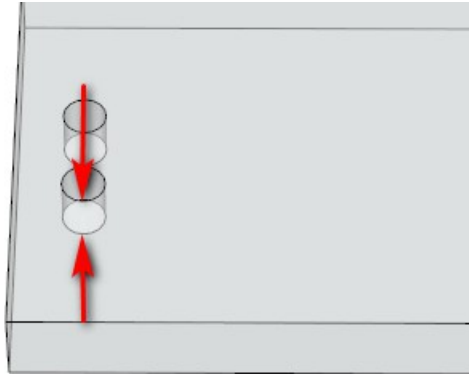

4 Diameter

If your drawer slide requires notched front panels then set it here.




5 Horizontal Offset

This is the distance from each end of the pullout finished front (not including side overhang) to the center of the dowel hole.



6 Vertical Spacing List

This is the distance from the top or bottom (negative) of the pullout finished front to the center of the dowel hole (not including bottom overhang).

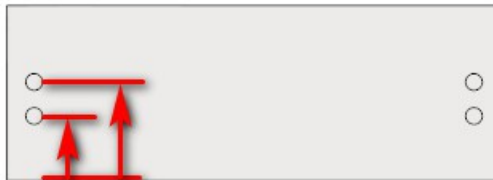

7 Reference From Drawer Box

Currently not used.

3) Drawer Box Front Pilot Holes

Pilot in sub-front for connecting to bottom.

1 Layer Name


This is the Layer Name for Sub-Front Pilot Holes.

2 Comment / Purpose

This is the Comment for Sub-Front Pilot Holes.


3 Through Drill Value

Set to 0 to turn off this section.

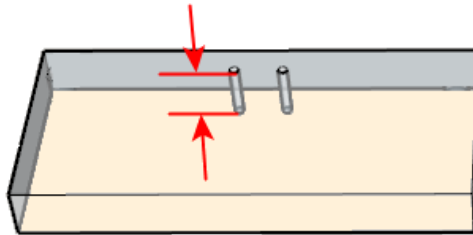


4 Diameter

This is the diameter of the holes for this Hole Set

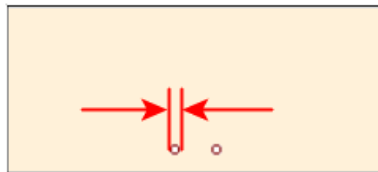


5 Horizontal Offset

This is the distance from each end of the front to center of the hole for this Hole Set.

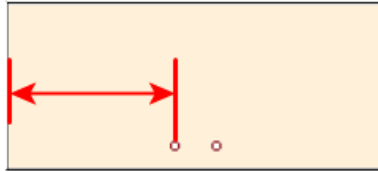

6 Vertical Spacing List

For multiple columns of holes, enter the offset for each column separated by a comma.

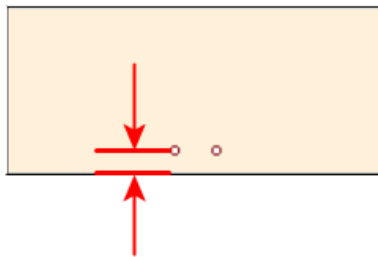

4) Drawer Box Front (mid pilot holes)

Pilot Sub-Front into 3/4 Drawer bottom (mid)

1 Layer Name


This is the Layer Name for Sub-Front Mid Pilot Holes.

2 Comment / Purpose

This is the Comment for Sub-Front Mid Pilot Holes.


3 Through Drill Value

Set to 0 to turn off this section.

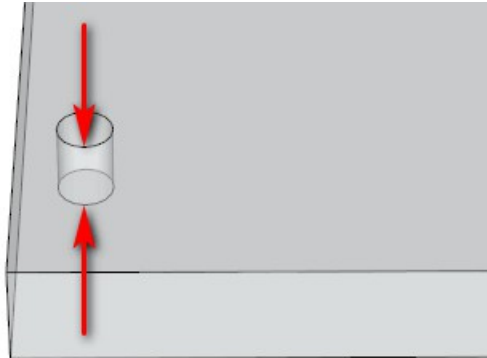


4 Use Part Thickness for Depth

Set to -1 to ignore the auto adjustment.

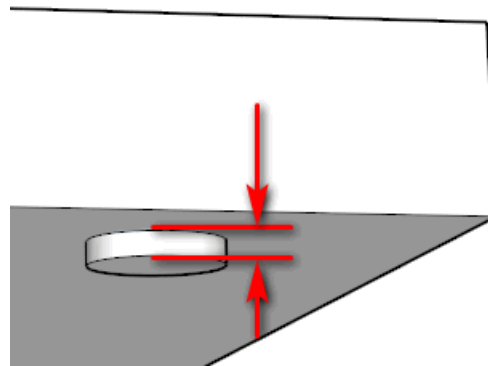


5 Diameter

This is the diameter of the pilot holes.

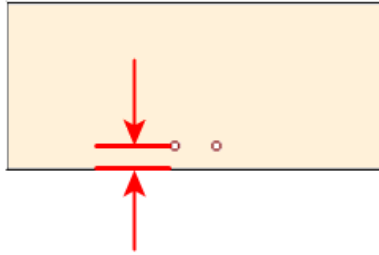


6 Bottom Offset

This is the diameter of the pilot holes.

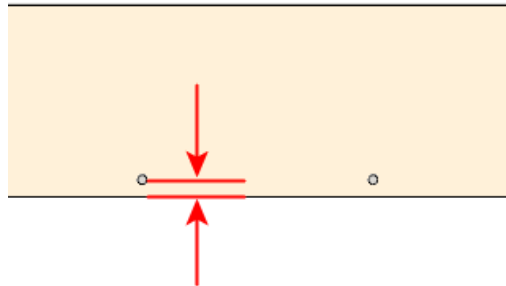


7 1 hole bottom wider than

If bottom panels are this wide or wider then add a centered panel hole.

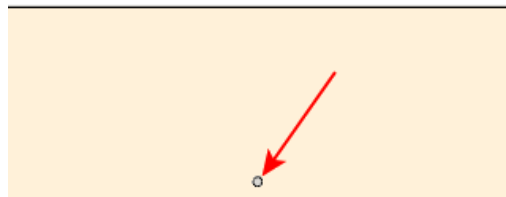

8 2 holes bottom wider than

If bottom panels are this wide or wider then add a 2 centered panel holes. If panel is at least this wide then the previous parameter is ignored.

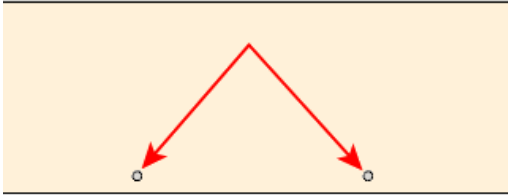

5) Drawer Box Front Pilot Holes

Alternate - to pilot in sub-front for connecting to bottom.

1 Layer Name


This is the Layer Name for Sub-Front Pilot Holes.

2 Comment / Purpose

This is the Comment for Sub-Front Pilot Holes.


3 Through Drill Value

Set to 0 to turn off this section.

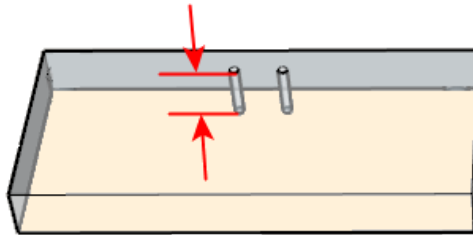


4 Diameter

This is the diameter of the holes for this Hole Set

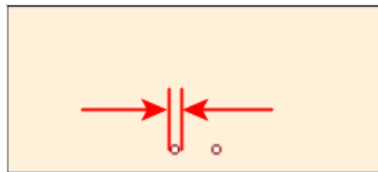


5 Horizontal Offset

This is the distance from each end of the front to center of the hole for this Hole Set.

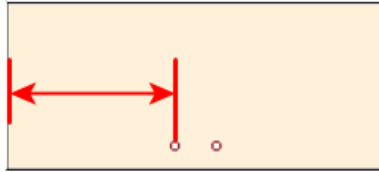

6 Vertical Spacing List

For multiple columns of holes, enter the offset for each column separated by a comma.

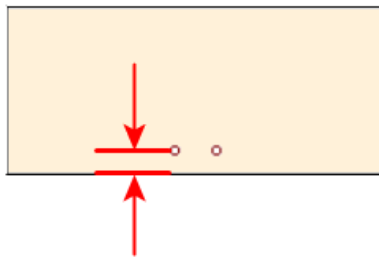

6) Pullout Front Holes (for connection to sides)

Needs attention for metal system and actual drawer front.

1 Layer Name


This is the Layer Name for Sub-Front Pilot Holes.

2 Comment / Purpose

This is the Comment for Sub-Front Pilot Holes.


3 Depth

Set to 0 to turn off this section.

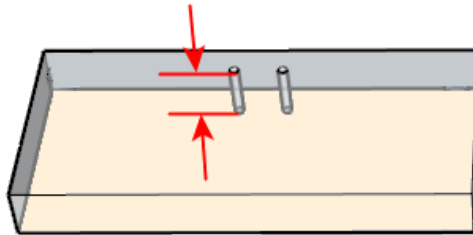


4 Diameter

This is the diameter of the holes for this Hole Set

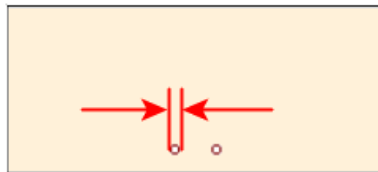


5 Horizontal Offset

This is the distance from each end of the front to center of the hole for this Hole Set.

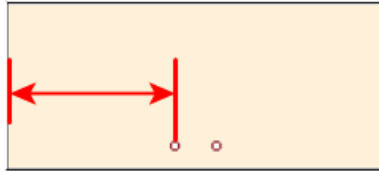

6 Spacing List

For multiple columns of holes, enter the offset for each column separated by a comma.

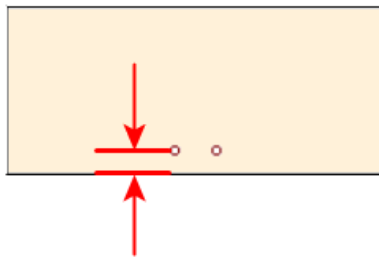

7 Reference From Drawer Box


Not Currently Used

7) Under Mount Front Notch

Drawer part notching for under mount drawer slides


1 Front Notch Width

If your drawer slide requires notched front panels then set it here.

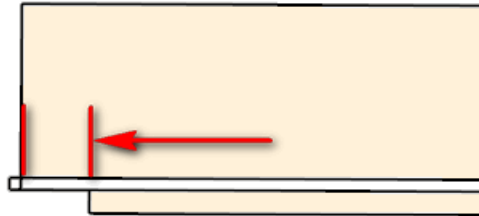

2 Front Notch Depth

This is the Depth of the Front Notch for Undermount Slides.

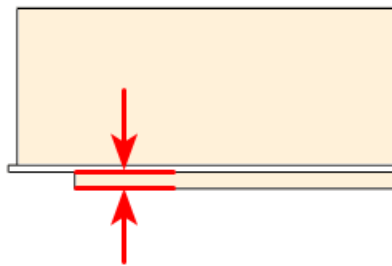

Backs Tab

This tab contains the machining information for the back side of Drawer Box Rear End.

Options

Main Options CNC Globals CNC Rules Drawer Systems Part Rotation

Detail Set: BLUM_16 Save Details Clone Set Delete Set Close

Note

Sides Fronts Backs Bottoms Joinery Slide Details Drawer Layers

Show More

1) Hook Holes
HookHole
Undermount Hardware Hook Holes
Hook Hole Depth: 11
Diameter: 8
Horizontal Offset: 13
Spacing List: -11

2) Under Mount Back Notching
Back Notch: 0
Back Notch Depth: 0
Drawer Back Height Adj: 0

3) Drawer Back to Bottom Holes
Pilot holes rear ends to drawer bottoms (ends)
Through Drill Value: 19
Diameter: 3
Horizontal Offset: 80
Vertical Spacing List: 9

4) Drawer Back Mid Pilot Holes
PILOT
Pilot rear end into 3/4 Drawer bot (mid)
Through Drill Value: 0
Use Part Thickness for Depth: -1
Diameter: 3
Bottom Offset: 9
1 hole bottom wider than: 394
2 holes bottom wider than: 699

5) Drawer Back Hole Set
Used if back length is drw box width
Through Drill Value: 19
Diameter: 3
Horizontal Offset: 25
Vertical Spacing List: 9,-9

6) Drawer Back Hole Set 2
Metal drw system to connect sides to back
Through Drill Value: 10
Diameter: 10
Horizontal Offset: 9
Vertical Spacing List: 32,32

1) Hook Holes

Drill for under mount hardware hook hole that attaches hardware to drawer box at back.

1 Layer Name


This is the Layer Name for Drawer Box Rear End Hook Holes.

2 Comment / Purpose

This is the Layer Name for Drawer Box Rear End Hook Holes.


3 Hook Hole Depth

Set to 0 to turn off this section.

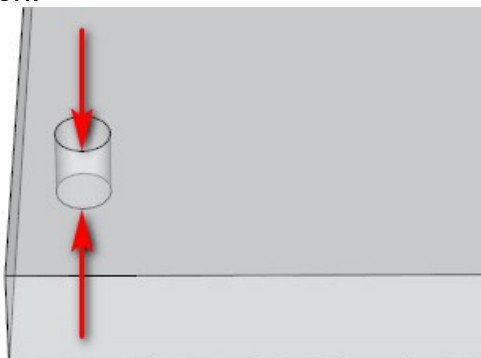

4 Diameter

This is the diameter of the drawer hook hole on the drawer box rear end.

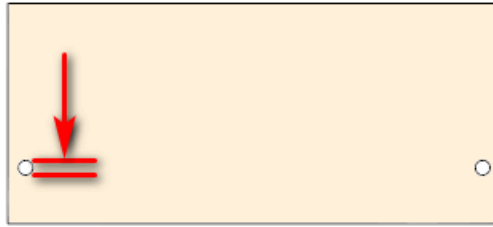

5 Horizontal Offset

This is the distance from each end of the drawer box rear end to the center of the Hook hole.



6 Spacing List


This is the distance from the top or bottom (negative) of the drawer box back to the center of the Hook hole.



2) Under Mount Back Notching


1 Back Notch

The Back Notch is used with undermount drawer slides that require a small notch on the Back Panel of the drawer box. There are two notches on either side of the Back Panel. The depth of the Notch is determined by where the drawer bottom groove is on the Back Panel.

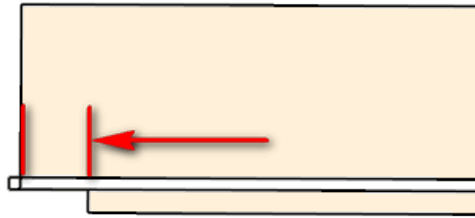

2 Back Notch Depth

Drawer part notching for under mount drawer hardware.

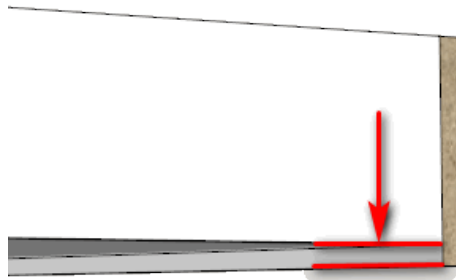

3 Drawer Back Height Adj

3) Drawer Back to Bottom Holes

Pilot holes in drawer back for connecting drawer back to back edge of drawer bottom. Both ends only.

1 Layer Name


This is the Layer Name for Drawer Back to Bottom Holes.

2 Comment / Purpose

This is the Layer Name for Drawer Back to Bottom Holes.


3 Through Drill Value

Set to 0 to turn off this section.

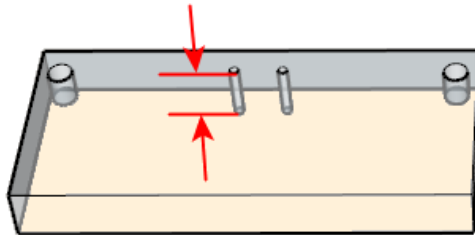


4 Diameter

This is the diameter of the holes for this Hole Set.

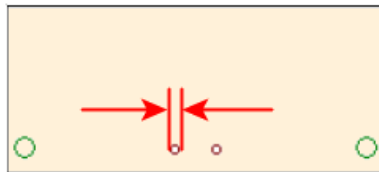


5 Horizontal Offset

This is the distance from each end of the Front to center of the hole for this Hole Set.

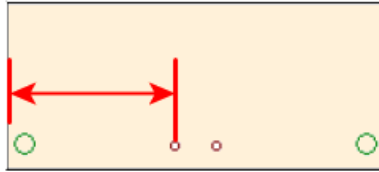

6 Vertical Spacing List

For multiple columns of holes, enter the offset for each column separated by a comma.

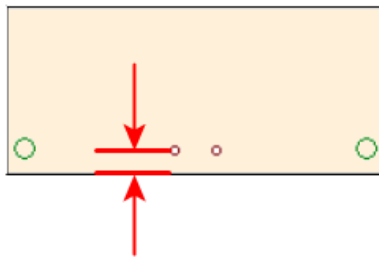

4) Drawer Back Mid Pilot Holes

Pilot holes in drawer back for connecting drawer back to edge of drawer bottom. Mid holes only.

1 Layer Name


This is the Layer Name for Drawer Back Mid Pilot Holes.

2 Comment / Purpose

This is the Layer Name for Drawer Back Mid Pilot Holes.


3 Through Drill Value

Set to 0 to turn off this section.

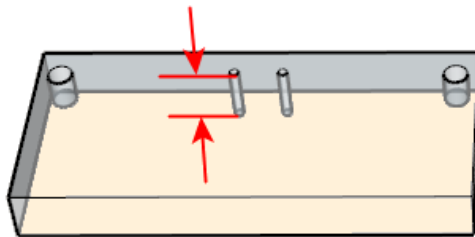


4 Use Part Thickness for Depth

Set to -1 to ignore the auto adjustment

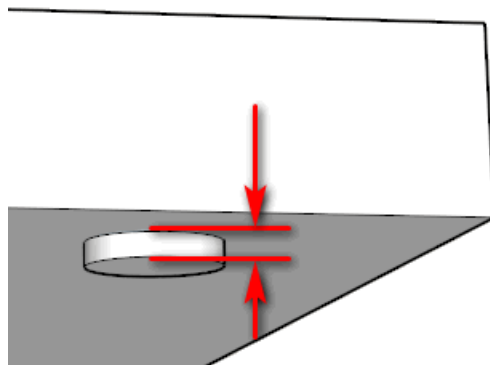


5 Diameter

This is the diameter of the pilot holes.

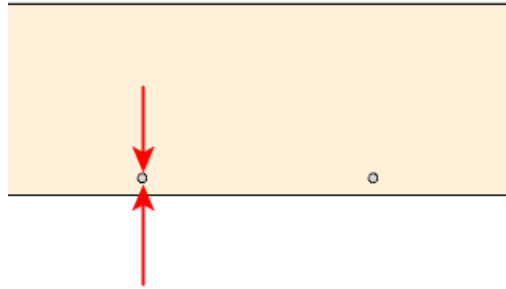


6 Bottom Offset

If bottom panels are this wide or wider then add a centered panel hole.

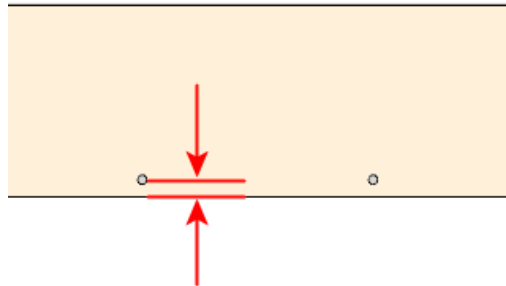


7 1 hole bottom wider than

If bottom panels are this wide or wider then add a centered panel hole.

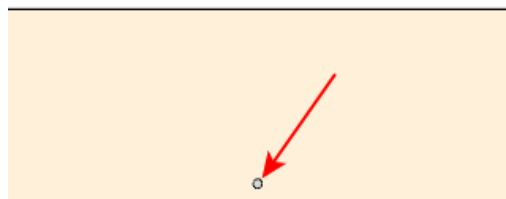

8 2 holes bottom wider than

If bottom panels are this wide or wider then add a 2 centered panel holes. If panel is at least this wide then the previous parameter is ignored.

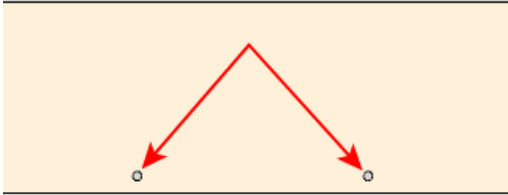

5) Drawer Back Hole Set

Used if back length is drawer box width.

1 Layer Name


This is the Layer Name for Drawer Back Hole Set.

2 Comment / Purpose

This is the Layer Name for Drawer Back Hole Set.


3 Through Drill Value

Set to 0 to turn off this section.

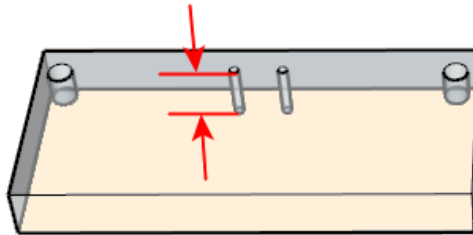


4 Diameter

This is the diameter of the holes for this Hole Set.

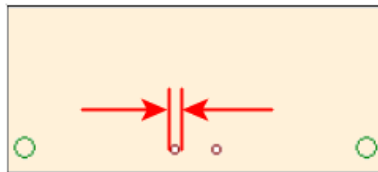


5 Horizontal Offset

This is the distance from each end of the Front to center of the hole for this Hole Set.

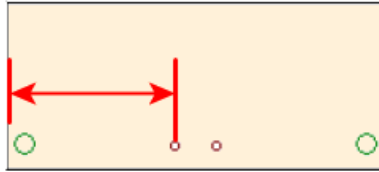

6 Vertical Spacing List

For multiple columns of holes, enter the offset for each column separated by a comma.

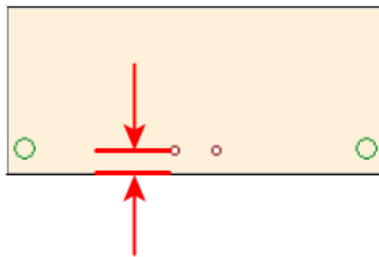

6) Drawer Back Hole Set 2

Metal drawer system to connect sides to back.

1 Layer Name


This is the Layer Name for Drawer Back to Bottom Holes.

2 Comment / Purpose

This is the Layer Name for Drawer Back to Bottom Holes.


3 Through Drill Value

Set to 0 to turn off this section.

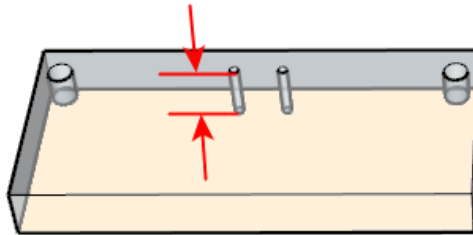


4 Diameter

This is the diameter of the holes for this Hole Set.

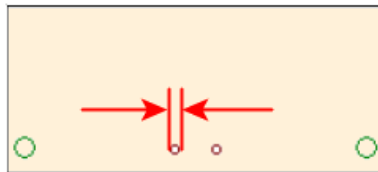


5 Horizontal Offset

This is the distance from each end of the Front to center of the hole for this Hole Set.

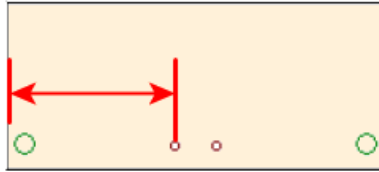

6 Vertical Spacing List

For multiple columns of holes, enter the offset for each column separated by a comma.

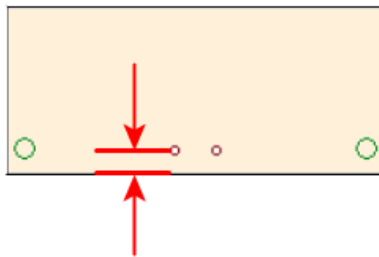

Bottoms Tab

This tab contains the machining information for the back side of Drawer Box Rear End.

The screenshot shows the 'Options' dialog box with the 'Bottoms' tab selected. The 'Detail Set' is 'BLUM_16'. The 'Bottoms' tab is selected, showing options for Drawer Bottom Front Clip Locator, Drawer Bottom to Front Connection, Drawer Bottom to Side Connection, Drawer Bottom to Side Tenon Cut, Metal Drawer Quick Build, and Drawer Bottom Pocket Cut. Each option has a list of parameters like Depth, Diameter, Pocket Length, Side Edge Offset List, and Front Edge Spacing List.

1) Drawer Bottom Front Clip Locator

Pilot holes to locate under mount hardware front clips on drawer bottom.

1 Layer Name


This is the Layer Name for Drawer Bottom Front Clip Locator.

2 Comment / Purpose

This is the Layer Name for Drawer Bottom Front Clip Locator.


3 Depth

Pilot holes to locate under mount hardware front clips on drawer bottom.

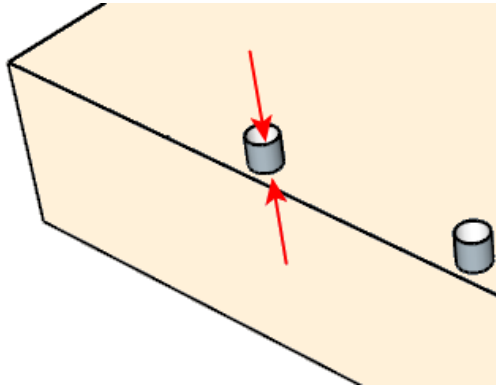


4 Diameter

This is the diameter of the holes for this Hole Set.

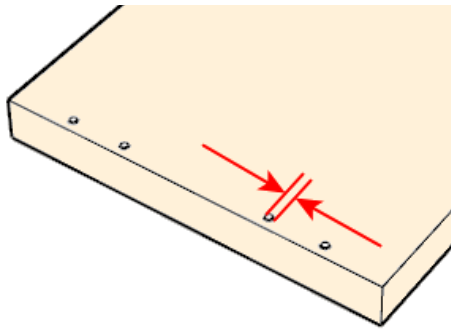


5 Pocket Length

Pilot holes to locate under mount hardware front clips on drawer bottom.

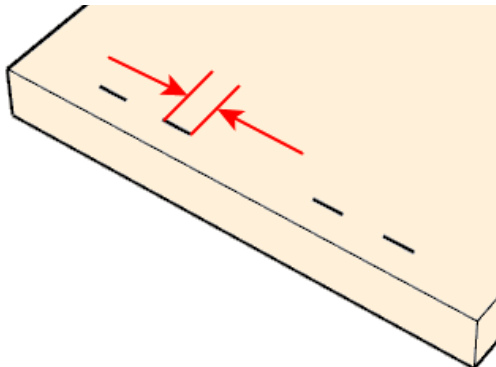


6 Side Edge Offset List

This is the distance from each end of the Back to the center of the hole for this Hole Set.

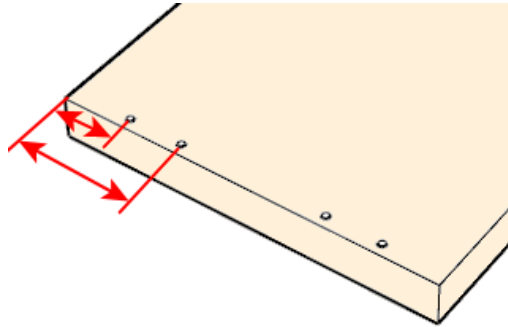

7 Front Edge Spacing List

For multiple columns of holes, enter the offset for each column separated by a comma.

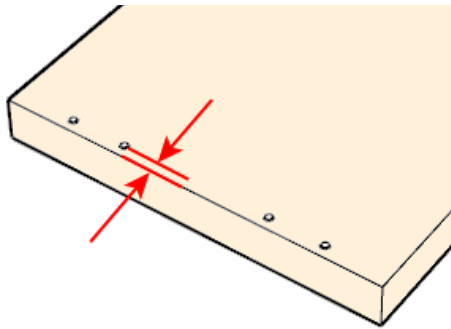

2) Drawer Bottom to Front Connection

Pilot holes from drawer bottom to subfront.

1 Layer Name


This is the Layer Name for Drawer Bottom to Front Connection.

2 Comment / Purpose

This is the Layer Name for Drawer Bottom to Front Connection.


3 Through Drill Value

Set to 0 to turn off this section

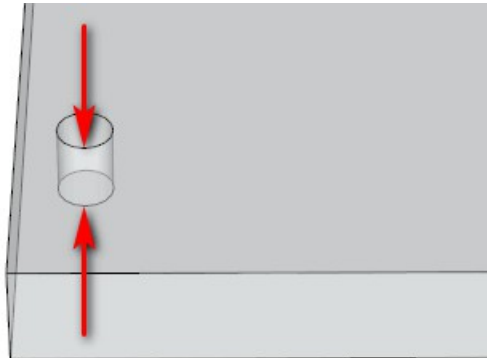


4 Use Part Thickness for Depth

Set to -1 to ignore the auto adjustment

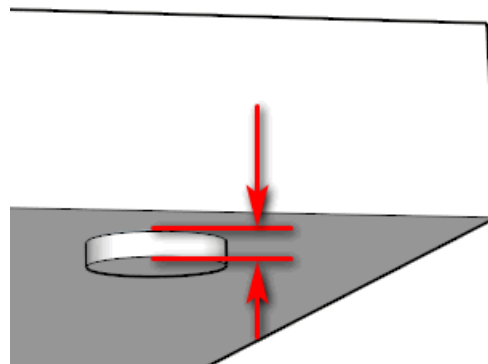


5 Diameter

This is the diameter of the pilot holes.

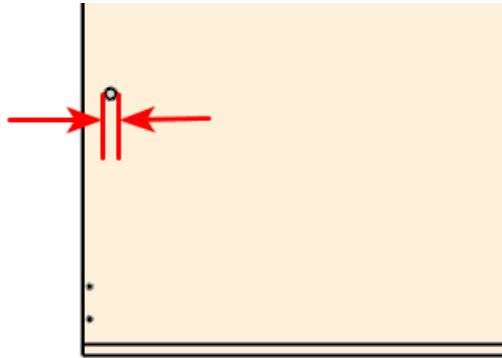


6 Pocket Length

Pilot holes from drawer bottom up into drawer sub-front. Also can do pocket cut for connecting 3-sided drawer to drawer front.

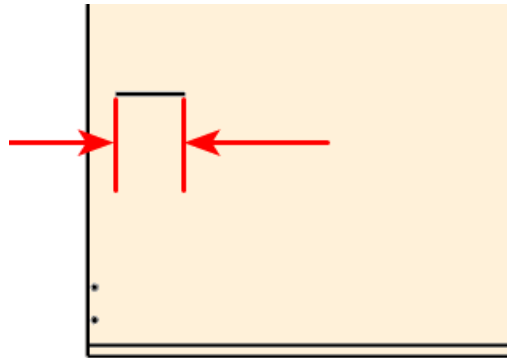


7 Front Edge Offset

This is the distance from each end of the panel to the center of the hole(s)

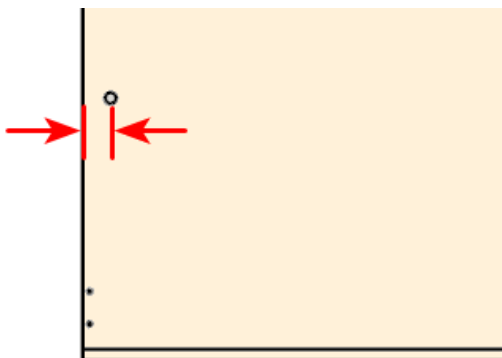


8 1 hole bottom wider than

If bottom panels are this wide or wider then add a centered panel hole

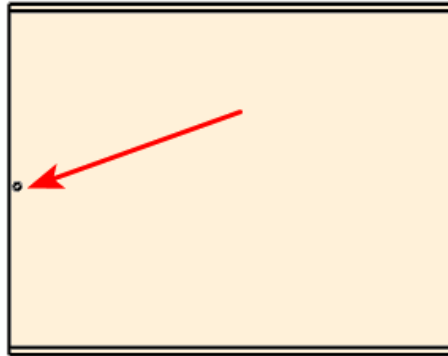

9 2 holes bottom wider than

If bottom panels are this wide or wider then add a 2 centered panel holes. If panel is at least this wide then the previous parameter is ignored.

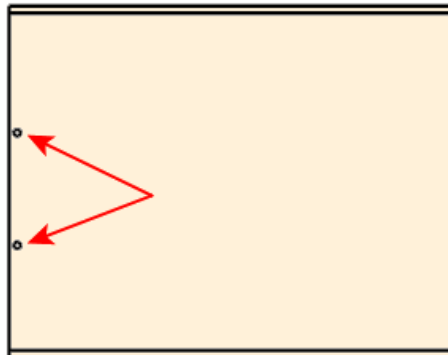

3) Drawer Bottom To Side Tenon Cut

Drawer bottom rabbet along side edges 10.5 or 11.5.

1 Layer Name


This is the Layer Name for Drawer Bottom To Side Tenon Cut.

2 Comment / Purpose

This is the Layer Name for Drawer Bottom To Side Tenon Cut.


3 Depth

Set to 0 to turn off this section

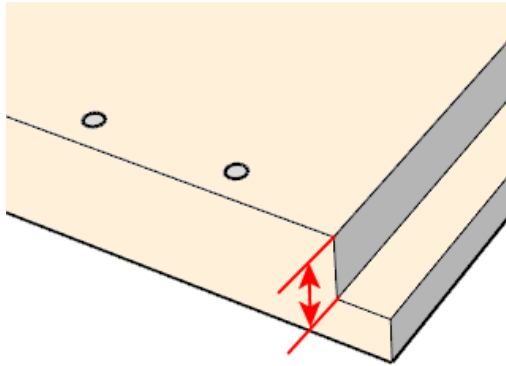


4 Width

This is the horizontal offset from the edge of the bottom to the start of the groove.

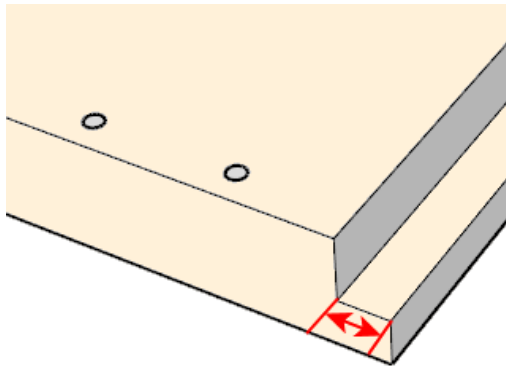


5 Side Edge Offset

This is the horizontal offset from the edge of the bottom to the start of the groove.

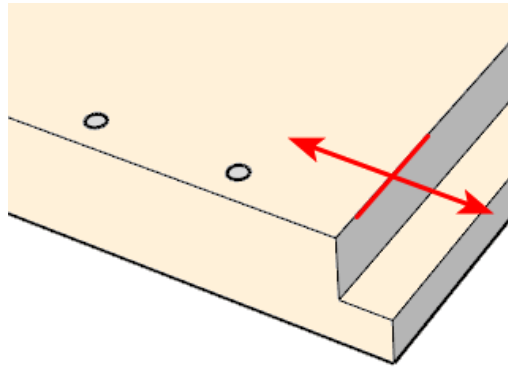


6 Front Overrun

This is the Groove overrun at the front of the back.

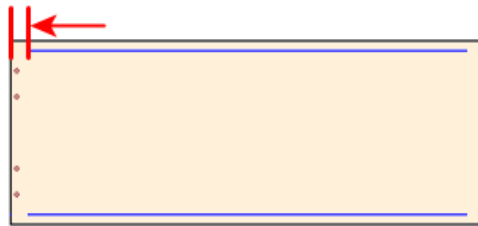


7 Back Overrun / Length

This is the back overrun at the back of the back.

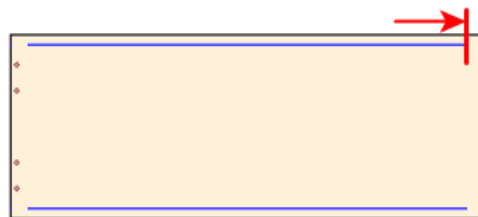

8 Back Overrun as Length

Cut a rabbet along bottom side edges that allows drawer bottom to connect into groove on drawer sides.

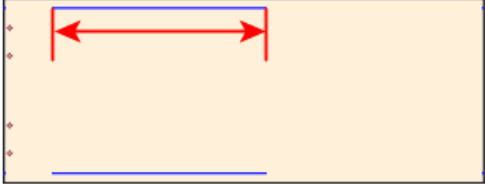

4) Drawer Bottom to Side Connection

Pilot holes to locate under mount hardware front clips on drawer bottom.

1 Layer Name


This is the Layer Name for Drawer Bottom Front Clip Locator.

2 Comment / Purpose

This is the Layer Name for Drawer Bottom Front Clip Locator.


3 Depth

Pilot holes to locate under mount hardware front clips on drawer bottom.

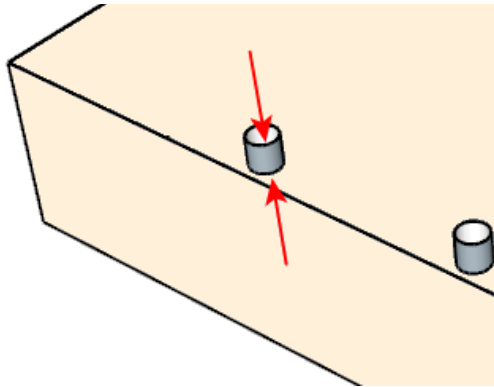


4 Diameter

This is the diameter of the holes for this Hole Set.

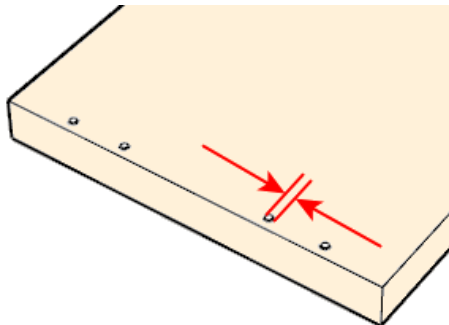


5 Pocket Length

Pilot holes to locate under mount hardware front clips on drawer bottom.

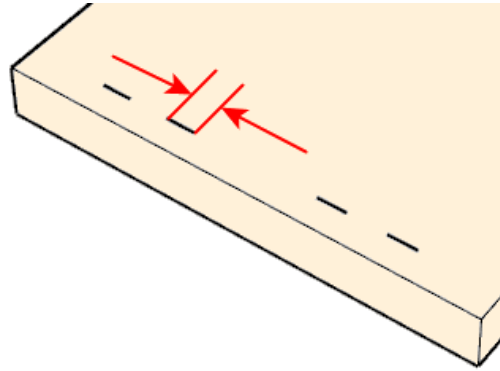


6 Side Edge Offset List

This is the distance from each end of the Back to the center of the hole for this Hole Set.

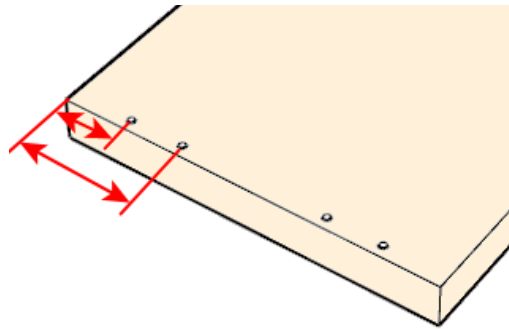

7 Front Edge Spacing List

For multiple columns of holes, enter the offset for each column separated by a comma.

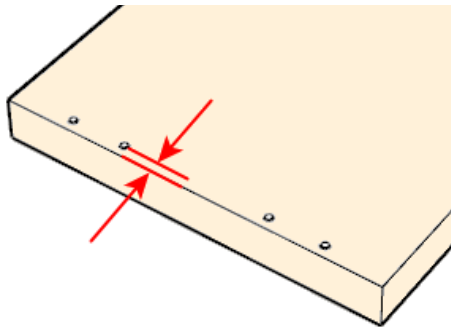

5) Drawer Bottom to Front Connection

Center drawer bottom at front pockets or pilots.

1 Layer Name


This is the Layer Name for Drawer Bottom to Front Connection.

2 Comment / Purpose

This is the Layer Name for Drawer Bottom to Front Connection.


3 Through Drill Value

Set to 0 to turn off this section

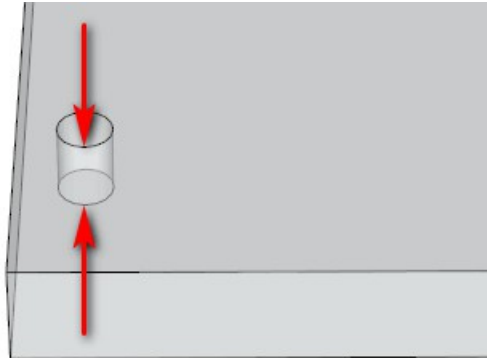


4 Use Part Thickness for Depth

Set to -1 to ignore the auto adjustment

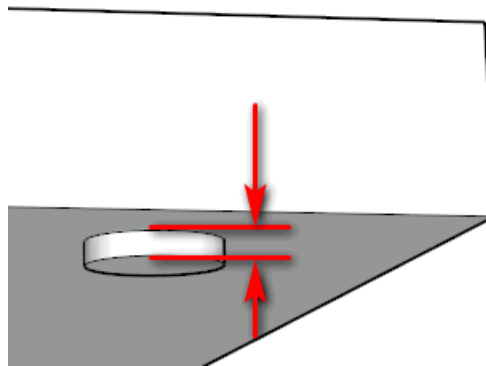


5 Diameter

This is the diameter of the pilot holes.

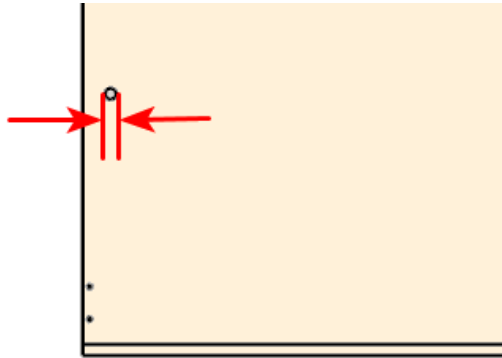


6 Pocket Length

Pilot holes from drawer bottom up into drawer sub-front. Also can do pocket cut for connecting 3-sided drawer to drawer front.

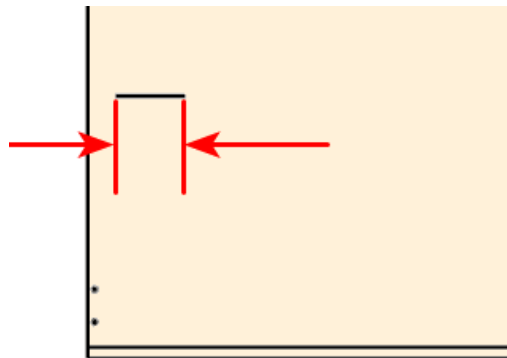


7 Front Edge Offset

This is the distance from each end of the panel to the center of the hole(s)

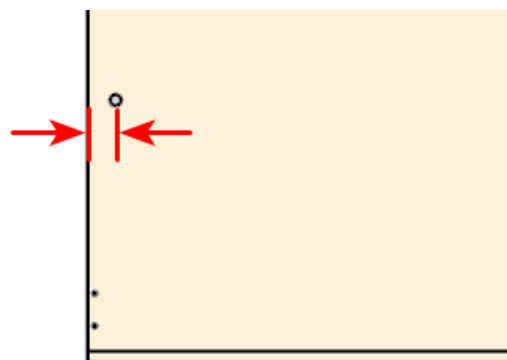


8 1 hole bottom wider than

If bottom panels are this wide or wider then add a centered panel hole

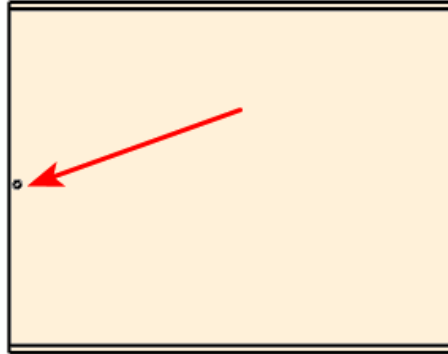

9 2 holes bottom wider than

If bottom panels are this wide or wider then add a 2 centered panel holes. If panel is at least this wide then the previous parameter is ignored.

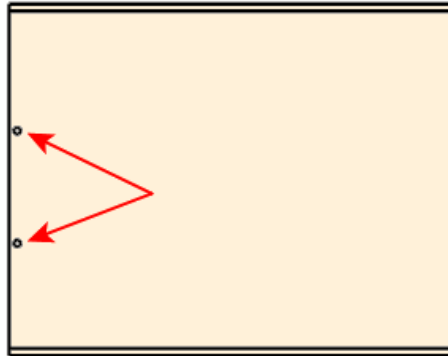

6) Metal Drawer Quick Build

Zargen Quick Build Machining or Pocket Front.

1 Layer Name


This is the Layer Name for Drawer Bottom To Side Tenon Cut.

2 Comment / Purpose

This is the Layer Name for Drawer Bottom To Side Tenon Cut.


3 Depth

Set to 0 to turn off this section

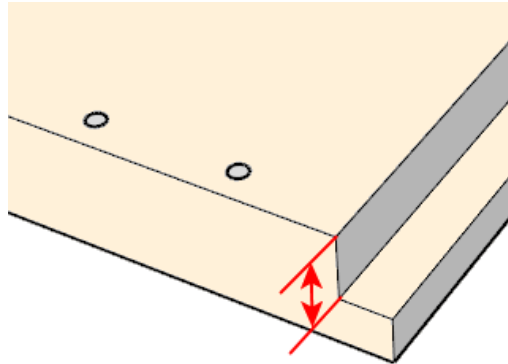


4 Width

This is the horizontal offset from the edge of the bottom to the start of the groove.

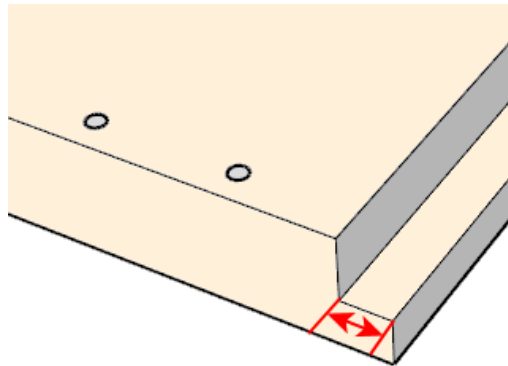


5 Side Edge Offset

This is the horizontal offset from the edge of the bottom to the start of the groove.

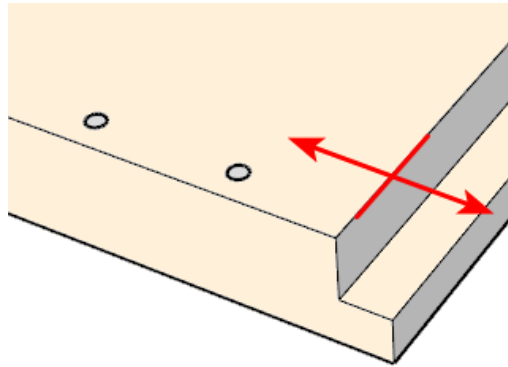


6 Front Overrun

This is the Groove overrun at the front of the back.

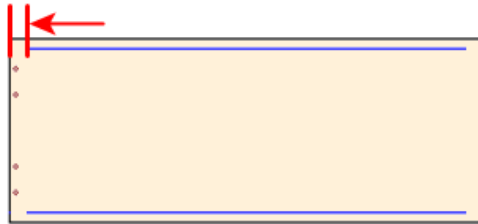


7 Back Overrun / Length

This is the back overrun at the back of the back.

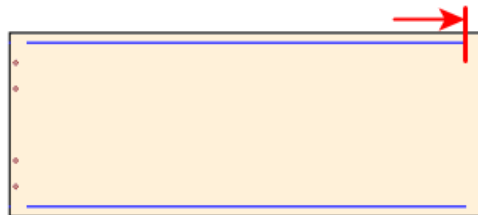

8 Back Overrun as Length

Use to run a groove along side edges of drawer bottom as required by Grass Zargen Quick Build feature. Also can cut pockets for attaching drawer bottom to drawer front.

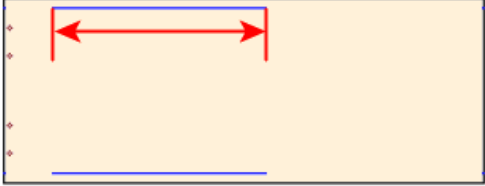

7) Drawer Bottom Pocket

Pocket Bottom to Front (Mid).

1 Layer Name


This is the Layer Name for Pocket Bottom to Front (Mid).

2 Comment / Purpose

This is the Layer Name for Pocket Bottom to Front (Mid).


3 Pocket Depth

Set to 0 to turn off this section.

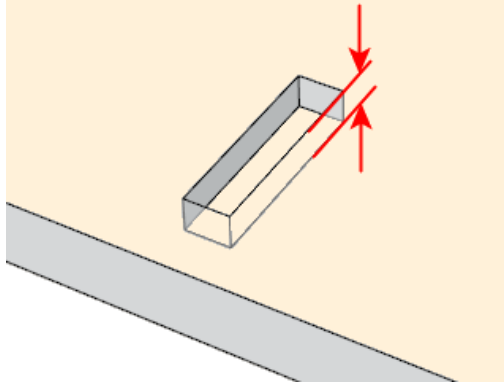


4 Width

This is the diameter of the pilot holes.

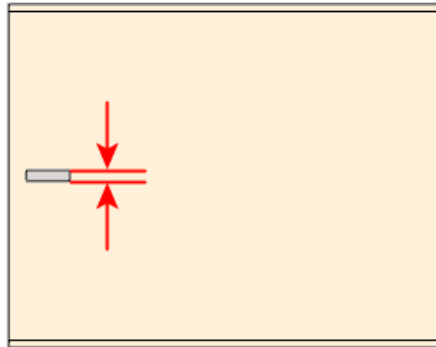


5 Pocket Offset

This is the distance from each end of the panel to the edge of the Pocket.

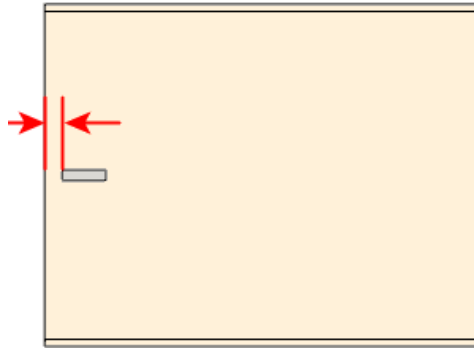


6 Pocket Length

This is the Length of the Pocket.

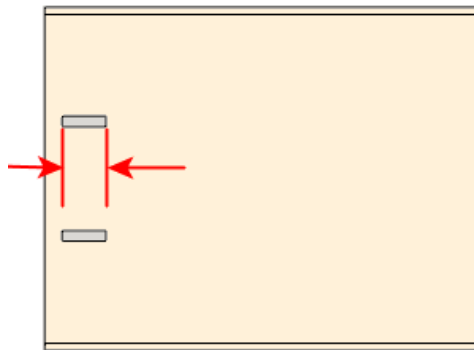


7 1 Pocket bottom wider than

If bottom panels are this wide or wider then add a centered Groove.

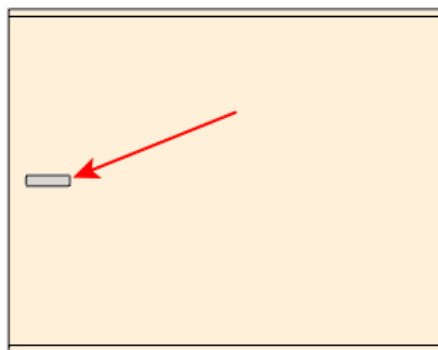


8 2 Pockets bottom wider than

If bottom panels are this wide or wider then add 2 centered Grooves. If panel is at least this wide then the previous parameter is ignored.

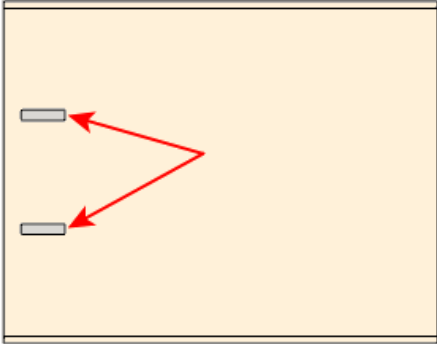

Joinery Tab

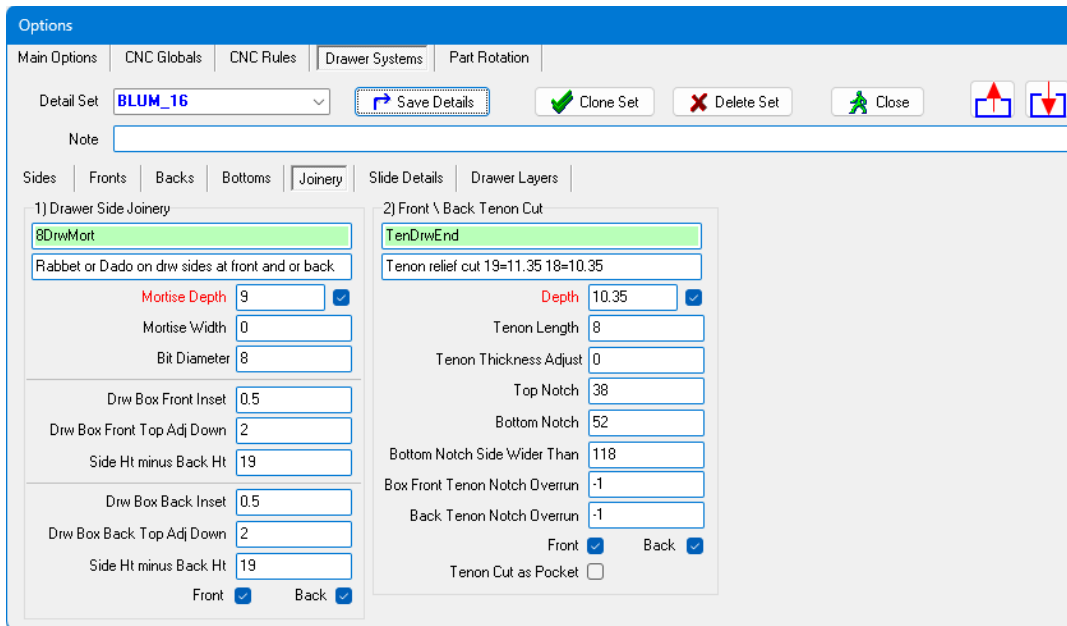

1) Drawer Side Joinery

Rabbet or Dado on Drawer Sides at front and or back.

1 Layer Name


This is the Layer Name for Drawer Side Joinery.

2 Comment / Purpose

This is the Comment for Drawer Side Joinery.


3 Mortise Depth

This is the Width of the dado or rabbet. Set this value to the width of your drawer fronts and backs if you want a rabbet. Set this value to 1/2 the width if you want a blind dado.

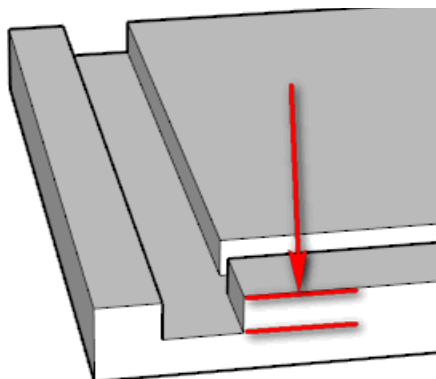


4 Mortise Width

This is for the mortise width. Set this to 0 if you use a single line pass or to the width if you use pockets.

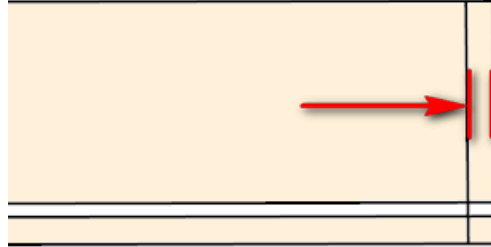


5 Bit Diameter

This is the bit diameter of the router bit that you are using to make the mortise. Bit overruns are calculated using this value.

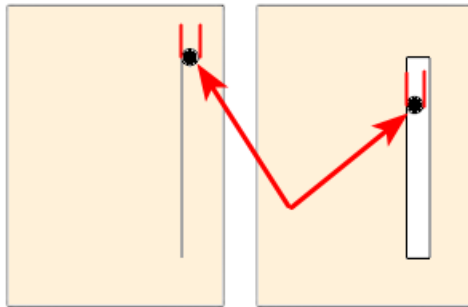


6 Drw Box Front Inset

Use negative values to keep the routing within the part.

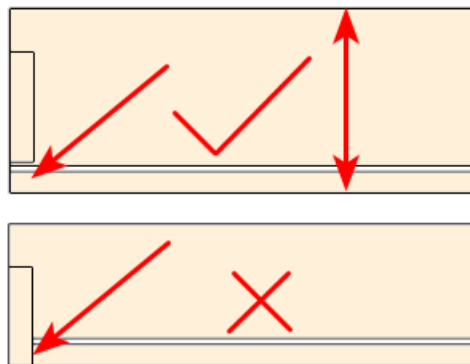


7 Drw Box Front Top Adj Down

This is the micro adjust for the mortise.

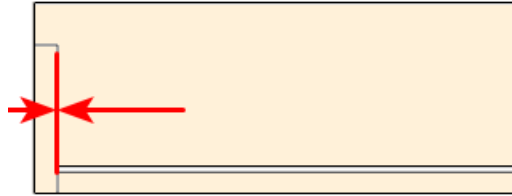


8 Side Ht minus Back Ht

The Notch Size is used on the ends of the drawer fronts and backs when you want blind dado's. Set this value to 0 for straight rabbets.

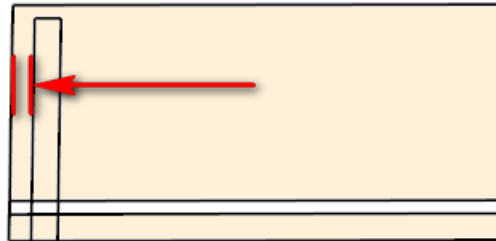

9 Front

Check this if you want a mortise for fronts on the Side Panel.

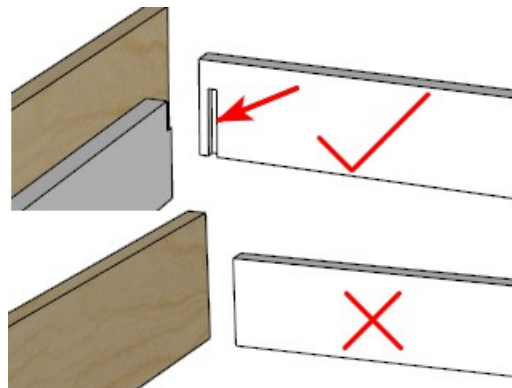

10 Back

Check this if you want a mortise for backs on the Side Panel.



Front / Back Tenon Cut

This is for having Tenons on the Front and or Back Drawer parts. This tenon will fit into the mortise on the Drawer Sides..

1 Layer Name


This is the Layer Name for Front / Back Tenon Cut.

2 Comment / Purpose

This is the Comment for Front / Back Tenon Cut.


3 Depth

This is the Width of the dado or rabbet. Set this value to the width of your drawer fronts and backs if you want a rabbet. Set this value to 1/2 the width if you want a blind dado.

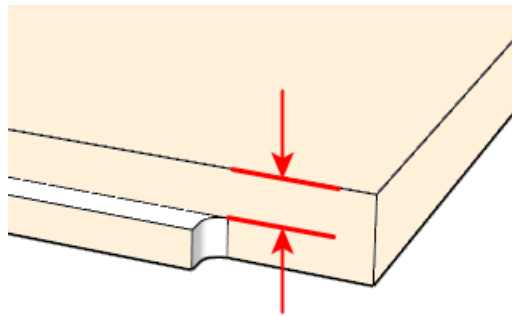


4 Tenon Length

This is the setting for how much the Tenon sits in the mortise.

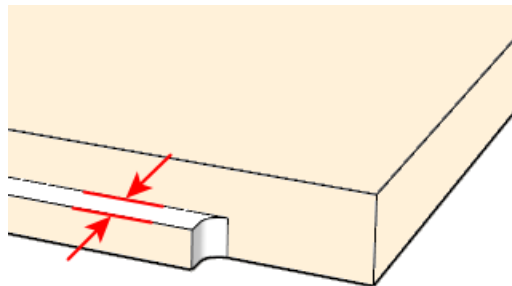


5 Tenon Thickness Adjust

This is the micro adjust for the Tenon Thickness.

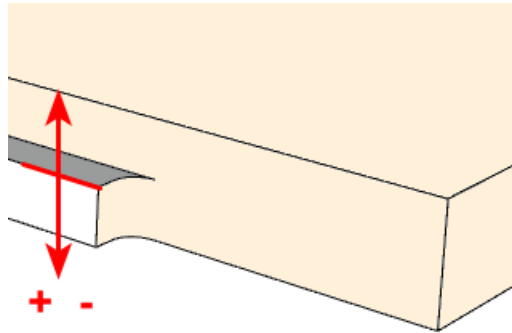


6 Top Notch

Make the top Notch large enough so you don't have edge banding issues.

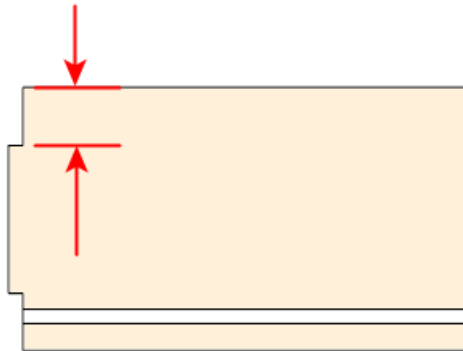


7 Bottom Notch Side Wider Than

You can skip the Bottom Notch for narrow Fronts / Backs. Only allow a Bottom Notch if the Front / Back is at least this Height.

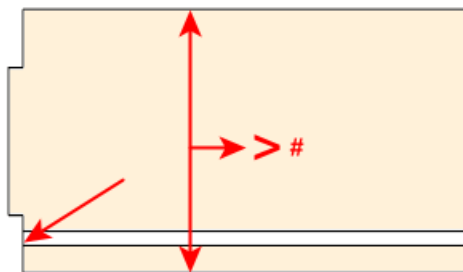


8 Box Front Tenon Notch Overrun

This is the micro adjust for the Tenon Sizing Cut.

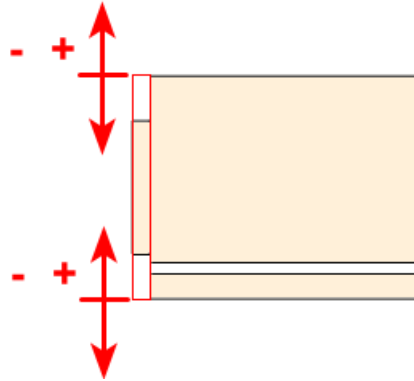


9 Back Tenon Notch Overrun

This is the micro adjust for the Tenon Sizing Cut.

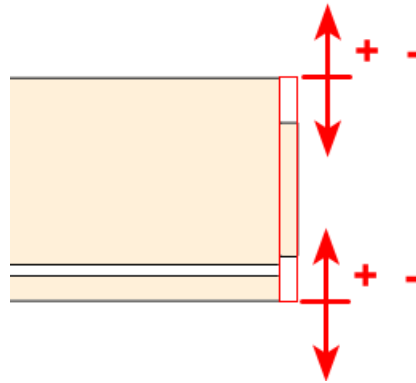


10 Front

Check this if you want to use Mortise and Tenon for Drawer Sub Fronts.

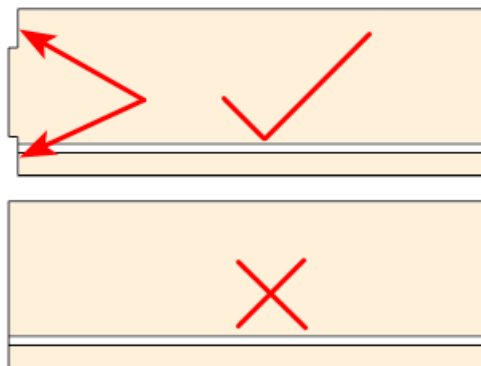


11 Back

Check this if you want to use Mortise and Tenon for Drawer Backs.

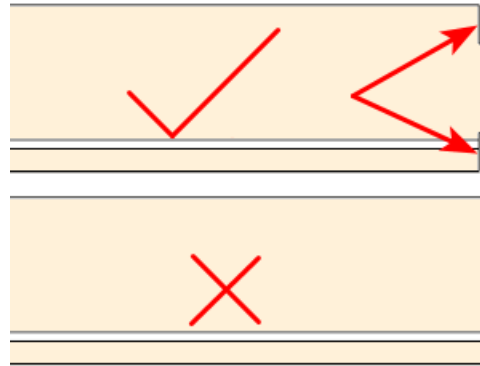

12 Tenon Cut as Pocket

Check this if you want the Tenon Sizing cut to be a pocket. Otherwise it is a single pass Cut.

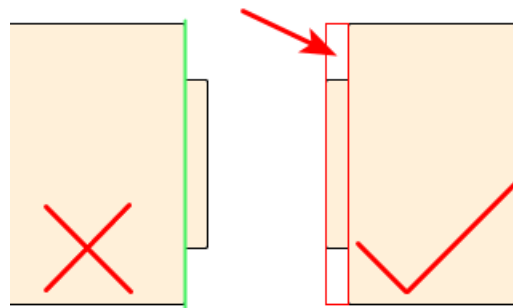

Slide Details Tab

This is where you store drilling for the various slide lengths and Drilling information for Cabinet sides for Drawers and Pullouts.

The screenshot shows the 'Options' software interface with the 'Slide Details' tab selected. The 'Detail Set' is 'BLUM_16'. The table below shows the following data:

1) Slide Details	Model	Length	Cabinet Side System Hole Spacing	Drawer Side Hardware Pilot Hole Spacing
1	Blum UM	<input checked="" type="checkbox"/> 229	37,229	
2	Blum UM	<input checked="" type="checkbox"/> 381	37,165,357	190
3	Blum UM	<input checked="" type="checkbox"/> 457	37,261,453	228
4	Blum UM	<input checked="" type="checkbox"/> 533	37,261,517	266
5	Blum UM	<input type="checkbox"/> 762	37,261,517	300
6		<input type="checkbox"/>		
7		<input type="checkbox"/>		
8		<input type="checkbox"/>		
9		<input type="checkbox"/>		
10		<input type="checkbox"/>		
11		<input type="checkbox"/>		
12		<input type="checkbox"/>		

Below the table are two configuration panels:

2b) Cabinet Side Drawer System Holes
 SysHol
 remember to turn on pullout drilling in globals
 Depth: 14
 Through Drill Adjust??: -1
 Diameter: 5
 Drw Sys Hole Vertical Offset: 23.5
 Mfg Horizontal Offset Adj: 0
 Pullout Vertical Offset: 14.5
 Pullout Horizontal Offset: 0
 Index From Top:

3b) Drawer Side Hardware Mounting Holes
 PILOT
 Pilot holes drw sides to drw bottoms
 Through Drill Value: 0
 Use Side Thickness for Depth: -1
 Diameter: 3
 Vertical Offset: 21.5
 Mfg Horizontal Offset Adj: 0

2) Cabinet Side Drawer System Holes

These are 5mm system holes on cabinet sides for drawer and pullout hardware. Turn on in CNC Globals with checkbox for pullout system holes.

1 Layer Name


This is the Layer Name for Pocket Bottom to Front (Mid).

2 Comment / Purpose

This is the Layer Name for Pocket Bottom to Front (Mid).


3 Depth

Set to 0 to turn off this section.

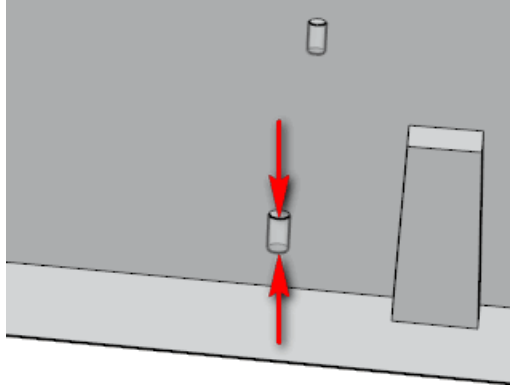


4 Through Drill Adjust ??

Set to -1 to ignore the auto adjustment.

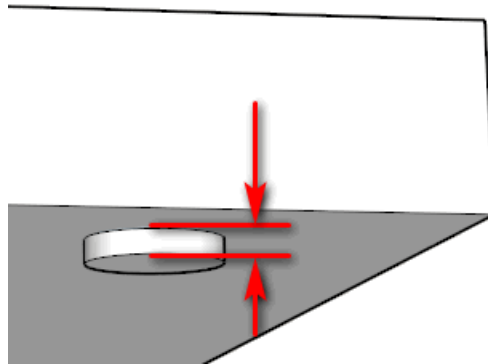


5 Diameter

This is the diameter of the holes in the cabinet sides used to mount the drawer slides.

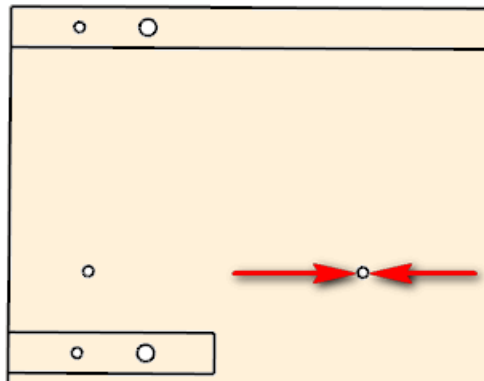


6 Drw Sys Hole Vertical Offset

This is the vertical offset dimension for 5mm system mounting holes on cabinet side panels. This is the most important dimension for properly locating these holes using the 32mm system.

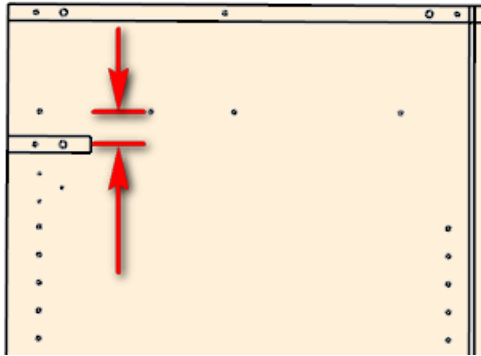


7 Mfg Horizontal Offset Adj

This is the horizontal offset small adjustment to compensate for the difference between the mfg stated system hole setback and 37 system setback dimension.

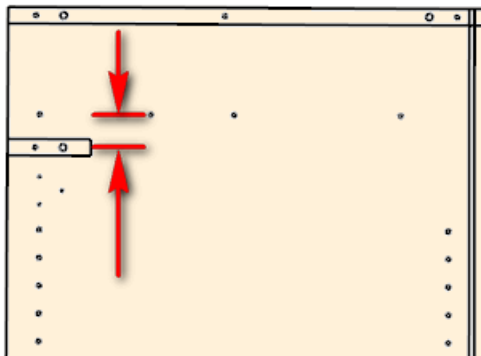


8 Pullout Vertical Offset

This value allows you to move all pullout holes up or down.

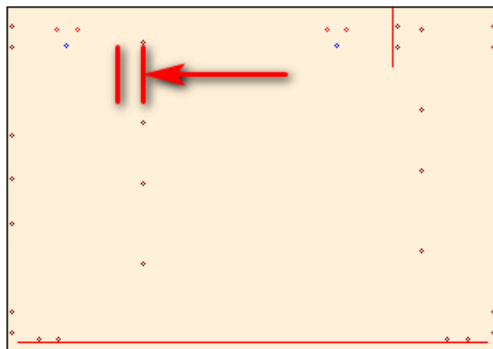


9 Pullout Horizontal Offset

This value allows you to push the pullout further into the cabinet allowing for front and hinge clearance.

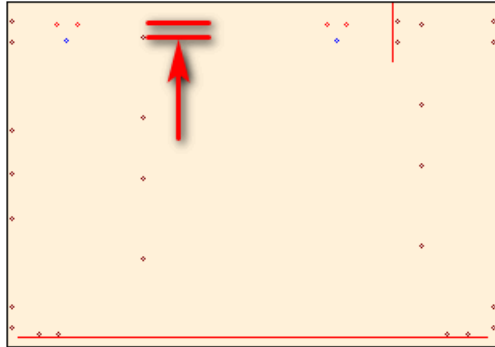

10 Index From Top

These are 5mm system holes on cabinet sides for drawer and pullout hardware. Turn on in CNC Globals with checkbox for pullout system holes.

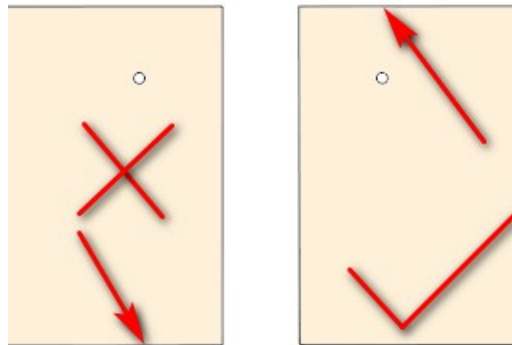

3) Drawer Side Hardware Mounting Holes

Pilot holes drawer sides to drawer bottoms.

1 Layer Name


This is the Layer Name for Pocket Bottom to Front (Mid).

2 Comment / Purpose

This is the Layer Name for Pocket Bottom to Front (Mid).


3 Through Drill Value

Set to 0 to turn off this section.

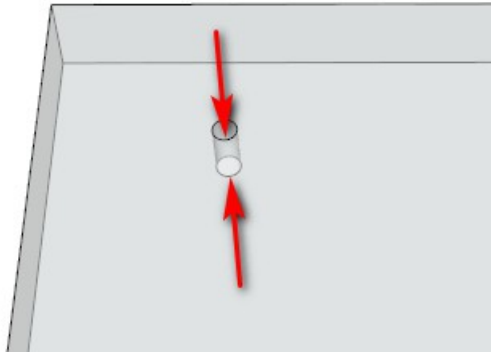

4 Use Side Thickness for Depth

Set to -1 to ignore the auto adjustment.

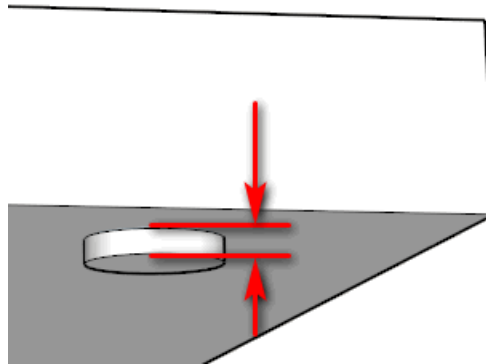


5 Diameter

This is the diameter of the drawer slide holes for the drawer box sides.



6 Vertical Offset


This is the vertical offset for drw member hdw mounting holes on drawer box sides. Also can be used for pilot holes to attach drw sides to 3/4 thick drawer bottoms.

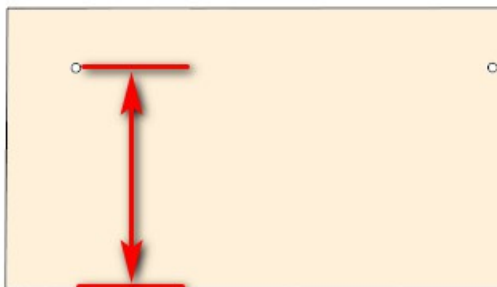


7 Mfg Horizontal Offset Adj

This is the horizontal offset small adjustment to compensate for the difference between the mfg stated drawer slide member hole setback and the dimension to where the hole is drilled on a drw side.

Here is an example of a 300mm X 680mm upper side panel using some of the above construction options on the DXF Options page.

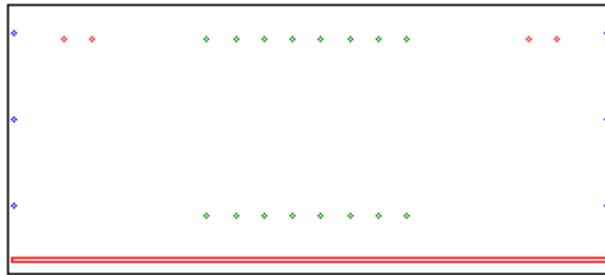

The shelf support holes are in green. The hinge holes are in red. The construction holes are in blue. Here is an example of a 600mm X 768mm lower side panel with a 160mm drawer again using some of the above construction options on the DXF Options page.

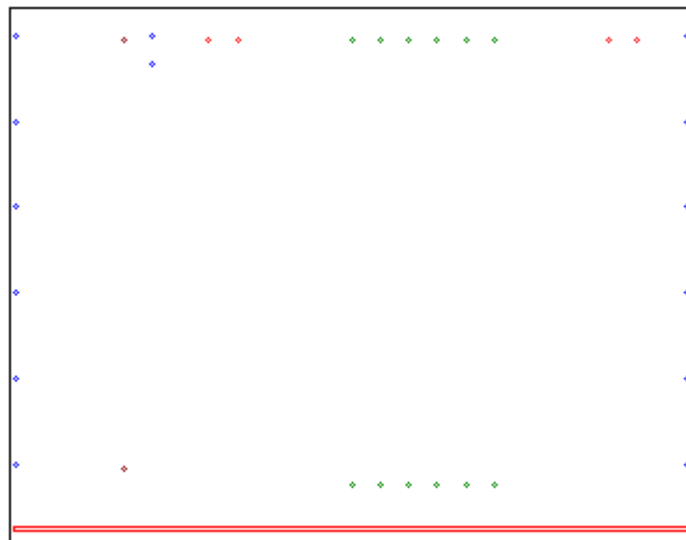

Drawer Layers

The Drawer Layers tab is simply a summary of all the layer names for the current Drawer System.

The screenshot shows the 'Options' window with the 'Drawer Systems' tab selected. The 'Drawer Layers' sub-tab is active, displaying a list of layer names for various components of a drawer system. The interface includes a top navigation bar, a 'Detail Set' dropdown menu, and several control buttons. The main content area is organized into sections for different parts of the drawer: Sides, Fronts, Backs, Bottoms, Joinery, and Slide Details. Each section contains a list of items with their respective layer names in input fields. Some fields are highlighted in green, indicating they are selected or active.

Section	Item	Layer Name
1) Sides	1) Drawer Construction Holes	PILOT
	2) Drawer Side Bottom Groove	DrwSidBotGro
	3) Drawer Box Parts	PkDrwRabDwn
	4) Drawer Bottom Dado	n/a
	5) Drawer Side Bottom Edge Rabbet	n/a
2) Fronts	1) Drawer Front Handle Holes	n/a
	2) Drawer Front Holes	n/a
	3) Drawer Box Front Pilot Holes	n/a
	4) Pullout Front Dowel Holes	PILOT
	5) Drawer Box Front Pilot Holes	n/a
	6) Pullout Front Pilot Holes	n/a
3) Backs	1) Drawer Back Hook Holes	HokHol
	3) Drawer Back to Bottom Holes	n/a
	4) Drawer Back (mid)	PILOT
	5) Drawer Back Pilot Holes (mid)	n/a
	6) Drawer Back Hole Set 2	n/a
	4) Bottoms	1) Drawer Bottom UM Clip Locator
2) Drawer Bottom to Side Connection		n/a
3) Drawer Bottom to Front Connection		TenDrwBot
4) Drawer Bottom to Front Connection		n/a
5) Drawer Bottom Pocket		n/a
6) Bottom to Side Rabbet		n/a
7) Metal Drawer Quick Build		n/a
5) Joinery	1) Drawer Side Bottom Groove	n/a
	2) Front\Back Tenon Relief Cut	n/a
6) Slide Details	2) Cabinet Side Pullout System Holes	SysHol
	3) Drawer Side Slide Holes	PILOT
	Drawer Part Horizontal Drilling	Could_be_layer_name_for_cnc_horizc

Part Rotation Tab

These settings are used to determine rotation by part by category during import.

Options

Main Options | CNC Globals | CNC Rules | Drawer Systems | **Part Rotation**

Rotation Set: 2 Save Rotation Clone Set Delete Set Close


Note: mostly for upper cabinets that will allow the upper top to rotate for overall better yield

1) Rotation

Back Rail\Stretcher	1	can rotate	Drawer Box Left Side	21	use sheet grain
Top	2	can rotate	Drawer Box Right Side	22	use sheet grain
Bottom	3	use sheet grain	Drawer Box Back	23	can rotate
Adj Shelves	4	use sheet grain	Drawer Box Front	24	can rotate
Fixed Shelves	5	use sheet grain	Drawer Box Bottom	25	use sheet grain
Divider	6	use sheet grain	Left Stile	26	use sheet grain
Left Side	7	use sheet grain	Right Stile	27	use sheet grain
Right Side	8	use sheet grain	Mid Stile	28	use sheet grain
Corner Brace	9	do not rotate	Top Rail	29	use sheet grain
Blind Panel	10	do not rotate	Bottom Rail	30	use sheet grain
Back	11	use sheet grain	Mid Rail	31	use sheet grain
Nailer	12	can rotate	Left Partition	32	can rotate
Stretcher	13	can rotate	Finished Panel	33	do not rotate
Sink Rail	14	can rotate	Left Door	34	do not rotate
Door Panel	15	do not rotate	Right Door	35	do not rotate
Drawer Front	16	do not rotate	Tall Partition	36	do not rotate
Finished Back	17	use sheet grain	Pullout Finished Front	37	do not rotate
Finished End	18	use sheet grain	Right Partition	38	can rotate
Filler	19	do not rotate	Doors / Drawer Fronts - Combined	39	must rotate
Toe Kick	20	do not rotate			

12 Skipped Parts

If parts are larger than the available material then you will have skipped parts. These are identified in a number of ways. The Material List will alert you that there are skipped parts by highlighting the Material in red.

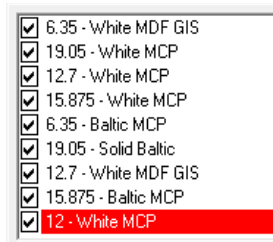

The Parts Grid also alters the color for skipped parts and displays a count for the number of skipped parts

PartID	Quantity	Thickness	Width	Length	Cabinet	Description	Material	Edging	Base
1	1	6	774	1954	01)	Back	White MDF GIS	...	<input checked="" type="checkbox"/>
2	1	19	600	762	01)	Bottom	White MCP	F...	<input checked="" type="checkbox"/>
3	1	19	582	793	01)	Dividers	White MCP	F...	<input checked="" type="checkbox"/>
4	2	19	582	762	01)	Fixed Shelf	White MCP	F...	<input checked="" type="checkbox"/>
5	1	12	100	762	01)	Hanger	White MCP	...	<input checked="" type="checkbox"/>
6	1	19	600	2680	01)	Left Side	White MCP	F...	<input checked="" type="checkbox"/>
7	1	19	600	2080	01)	Right Side	White MCP	F...	<input checked="" type="checkbox"/>
8	4	16	562	368.5	01)	Shelf	White MCP	...	<input checked="" type="checkbox"/>
9	1	16	100	762	01)	Stretcher	White MCP	F...	<input checked="" type="checkbox"/>
10	1	19	600	762	01)	Top	White MCP	F...	<input checked="" type="checkbox"/>
11	1	19	397	397	01)	Left Door	Baltic MCP	D-D-D-D	<input type="checkbox"/>
12	1	19	397	637	01)	Left Door	Baltic MCP	D-D-D-D	<input checked="" type="checkbox"/>
13	1	19	397	809	01)	Left Door	Baltic MCP	D-D-D-D	<input type="checkbox"/>
14	1	19	125	797	01)	Panel	Baltic MCP	D-D-D-D	<input checked="" type="checkbox"/>

And Finally the Parts Listing report will also identify that there are skipped parts.

Nov 21, 2016 09:59

Example part list 2

page: 1

Parts

ID	Qty	Thickness	Width	Length	Cabinet	Description	Material	Status
1	1	6	774	1954	01)	Back	White MDF GIS	*
2	1	19	600	762	01)	Bottom	White MCP	*
3	1	19	582	793	01)	Dividers	White MCP	*
4	2	19	582	762	01)	Fixed Shelf	White MCP	*
5	1	12	100	762	01)	Hanger	White MCP	*
6	1	19	600	2680	01)	Left Side	White MCP	Skipped
7	1	19	600	2080	01)	Right Side	White MCP	*
8	4	16	562	368.5	01)	Shelf	White MCP	*
9	1	16	100	762	01)	Stretcher	White MCP	*
10	1	19	600	762	01)	Top	White MCP	*
11	1	19	397	397	01)	Left Door	Baltic MCP	*
12	1	19	397	637	01)	Left Door	Baltic MCP	*
13	1	19	397	809	01)	Left Door	Baltic MCP	*
14	1	19	125	797	01)	Panel	Baltic MCP	*
15	1	19	397	397	01)	Right Door	Baltic MCP	*

Either edit the part's Width and or Length or Edit the Materials Width and or Length and then re optimize.

14 Summary Report

The Summary report has 1 line per sheet and includes statistics and costing information. There is a summary line for each material type and a grand summary for the entire report.

Nov 21, 2016 10:14 page: 1

Example_part_list_2 Material Summary

Width	Length	Thick	Material	plans sheets	# of Parts	Area sq M	waste	waste Cost	Sheet Cost	Cutting Meters
1220	2440		White MDF GIS	1	4	2.28	23.3%	0.00	0.00	12.1
1220	2440		White MDF GIS	2	4	2.20	26.1%	0.00	0.00	11.9
1220	2440		White MDF GIS	3	5	2.32	22.2%	0.00	0.00	13.7
1220	2440		White MDF GIS	4	3	1.44	51.7%	0.00	0.00	8.3
				4 (4)	16	8.24	30.8%	0.00	0.00	46.0
Width	Length	Thick	Material	plans sheets	# of Parts	Area sq M	waste	waste Cost	Sheet Cost	Cutting Meters
1220	2440		White MCP	1	5	2.84	4.6%	0.00	0.00	15.4
1220	2440		White MCP	2	7	2.71	8.8%	0.00	0.00	17.9
1220	2440		White MCP	3	7	2.86	4.0%	0.00	0.00	17.9
1220	2440		White MCP	4	8	2.85	4.2%	0.00	0.00	18.9
1220	2440		White MCP	5	10	2.86	4.1%	0.00	0.00	20.6
1220	2440		White MCP	6	8	2.82	5.3%	0.00	0.00	19.5
1220	2440		White MCP	7	13	2.81	5.5%	0.00	0.00	27.0
1220	2440		White MCP	8	7	0.94	68.5%	0.00	0.00	10.8
1220	2440		White MCP	9	14	2.88	3.4%	0.00	0.00	24.0
1220	2440		White MCP	10	26	2.66	10.8%	0.00	0.00	38.2
1220	2440		White MCP	11	63	2.48	16.5%	0.00	0.00	74.3
1220	2440		White MCP	12	11	2.71	9.1%	0.00	0.00	21.7
1220	2440		White MCP	13	16	2.68	10.0%	0.00	0.00	27.7
1220	2440		White MCP	14	1	0.15	95.1%	0.00	0.00	1.6
				14 (14)	196	34.24	17.9%	0.00	0.00	335.6
Width	Length	Thick	Material	plans sheets	# of Parts	Area sq M	waste	waste Cost	Sheet Cost	Cutting Meters
1220	2440		Baltic MCP	1	11	2.69	9.8%	0.00	0.00	21.8
1220	2440		Baltic MCP	2	12	2.67	10.3%	0.00	0.00	24.1
1220	2440		Baltic MCP	3	26	2.48	16.5%	0.00	0.00	37.0
1220	2440		Baltic MCP	4	2	0.10	96.6%	0.00	0.00	2.4
				4 (4)	51	7.94	33.3%	0.00	0.00	85.3
				22 (22)	263	50.41	23.0%	0.00	0.00	466.9

Page 1 of 1

15 Edge Banding Report

The Edge banding reports displays the required edging for the optimized parts. This report runs immediately following the Summary Report.

Oct 20, 2017 07:40

testing4_part_list_2 Edging Summary

Page: 1

Code	Full Name	Thickness	Length Meters	Strips	Cost
DB	Drawer Bottom	1	7.37	12	0.74
DE	Drawer Edging	1	10.73	24	1.07
F	Finished	2	11.15	11	5.02
S	Shelves	1	1.82	2	0.18
			31.07	49	7.01


16 Labels

CutMaster now prints 2 5/8" x 1" Part Labels complete with bar codes.

1. PartID
2. Width of Part
3. Length of Part
4. Layout Page # and Layout Item
5. Bar Code – 93
6. Thickness and Material
7. Part Description
8. Cabinet Name
9. Colored line represents edging type



17 Label Report

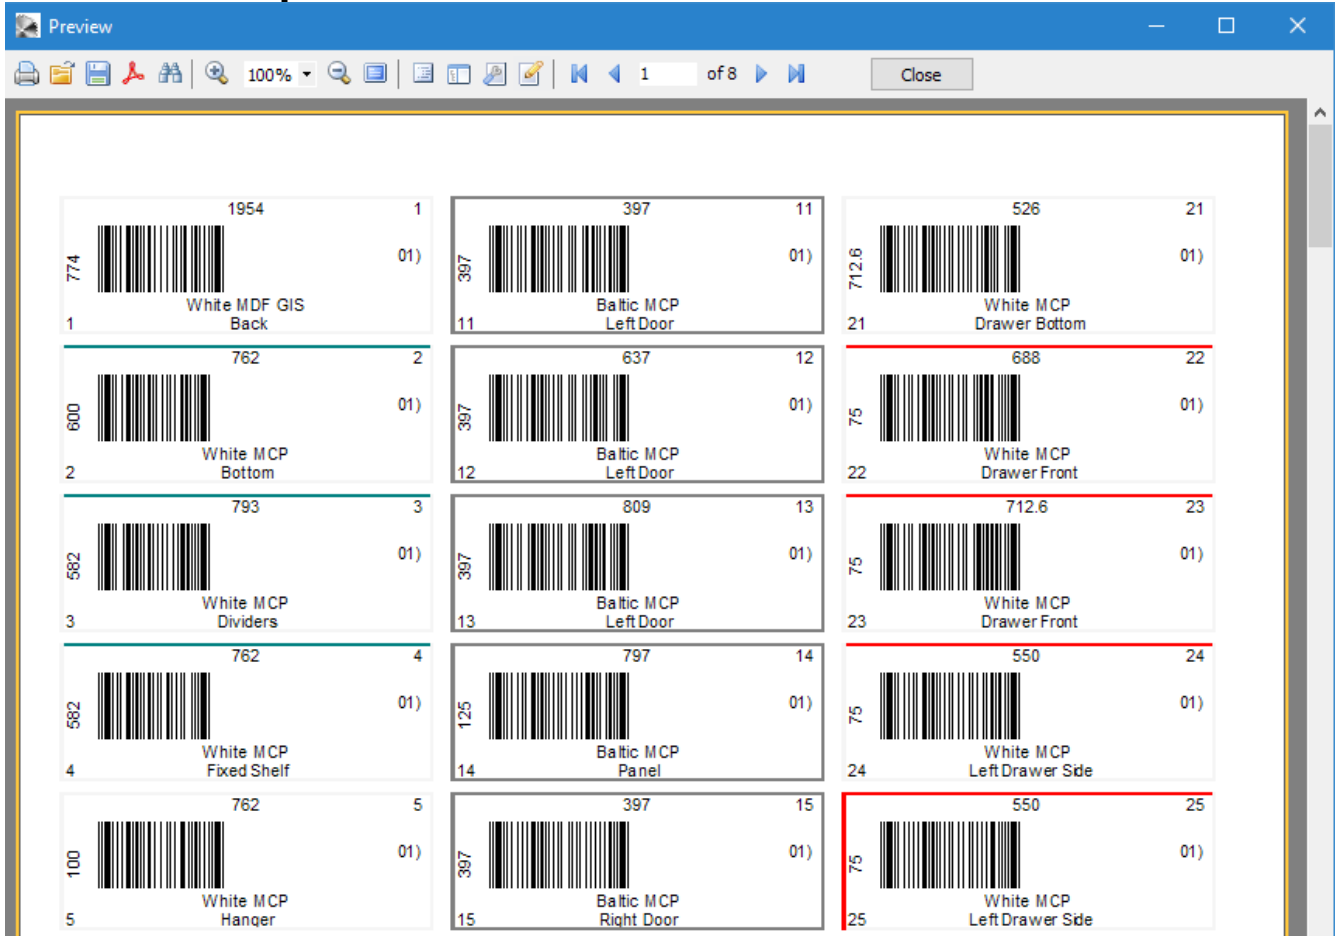

Avery 06498 are removable labels. These labels are 30 per sheet and are removable. The labels print in metric or inches. The width and length are to the left and above the bar code. The top right hand corner has the page number and item number which correlates with the sheet report. This make it easy to determine which label belongs to which sheet.

The bottom left hand corner contains the PartID which is the same as the bar code. The bar code will make it easy to get the correct DXF file.

Please note that the colored lines represents a part with 1 or more edging.

18 Import CSV File

The Current version looks for a number if the second column as the first column can be anything you want. If it finds a number then it uses the first row as data otherwise it skips the first row assuming that it contains names for the columns. Please note that only the first 7 columns are required. We will be adding additional import columns as required by the DXF files.

Importing - C:\Users\Owner\Documents\Metric_templates_part_list_2.csv

Map File: Metric

Delimiter: ,

First Row has Column N

Units: Millimeters Inches

Columns	Import Col Names	Example Data	Default Value	Columns	Import Col Names	Example Data	Default Value
Part ID	#	1		Tall	Tall	0.0 0.0 0.0 0.0	
Quantity	Quantity	1		Rule	Rule	metric_rules	
Thickness	Thickness	18.0000		Doors	Doors	0.0=157.0=0=533.0=DPRO=117.0=24.0	
Width	Width	600.0000		Fixed	Fixed		
Length	Height	160.0000		Pullouts	Pullouts		
Material	Material	White MCP		Shelves	Shelves		
Description	Item	Left Side		Note	Note	kitchen	
Edainq	Edging	F...CS		Model	Model	project	
Part Type	Part Type	6		Job	Job	Metric_templates	
Cabinet Type	Cab Type	7		Values	Values	0.0 0.0 100.0 0.0 -1.0 0.0 85.0 0.0 18.0 0.0	
Frame Type	Frame Type	0		Leqs	Legs	ll	
Base	Base	n		Hinqes	Hinges	-1.0=-1.0=0.0=0.0=0.0 -1.0=-1.0=0.0=0.0=	
Cabinet	Cabinet	012		Clusters	Clusters	-1=0 -1=0 -1=0 -1=0	
Stretchers	Stretchers	1 0.0 18.0 5		More Edainq	More Edging	F.....	
Corners	Corners	0.0 18.0 0.0 0.0 600.0 0		User Flaq	User Flag		
Drawers	Drawers	160.0		Handless	Handless		
Gaps	Gaps	0.0 3.0 0.0 24580		Closets	Closets		

Add Button

Click Add button to save the current configuration as a new import configuration.

Delete Button

Click the Delete button to delete the current import configuration.

Undo Button

The Undo button will enable when you have made changes to the current configuration. Click the button to undo changes.

Save Button

The Undo button will enable when you have made changes to the current configuration. Click the button to save changes to the current configuration.

Match Button

The Match button tries to match up the column header names with standard names that CutMaster uses.

Import Button

The Import button starts the import process using the current configuration and changes the Import Column Map (Options Form) to the currently selected configuration.

Cancel Button

The cancel button aborts the import.

Import Name

The Import Name is the currently selected Import configuration.

First Row has Column Names

Check this if you know that the CSV file has column names in the first row. When CutMaster is used with Cabmaker32 all the names map out. When you use CutMaster with other cabinet making software you can create your own import specifications and map out the columns yourself.

Please note that you can do this regardless of whether the CSV file has column names or not. It is just easier if there are column names.

Units

Choose Auto Detect, Millimeters or Inches. The Auto Detect is the recommended setting if you are using this with Cabmaker32. It looks for a double quote “ which represents inches.

1 PartID

The PartID is a unique identifier that comes from Cabmaker32 or from some other system. It is used on reports and on the layout sheets.

2 Quantity

If you set this to <Ignore> you can set the default value to 1. CutMaster uses the default value for quantity. This works well when you have a file of individual parts to make 1 assembly and you want to build X number of assemblies.

3 Thickness

Although this is a required column you could set to <Ignore> and set the default value to the actual thickness of the material. This is useful if the Cabinet software does not provide thickness as a separate column.

4 Width

CutMaster currently works with Millimeters or inches. This is a required column.

5 Length

CutMaster currently works with Millimeters or inches. This is a required column.

6 Material

This is a required column. CutMaster uses this column to map the parts to the correct Sheet.

If the Sheet does not exist and “Auto Add Sheets” is checked in the Option Form then CutMaster will create a new sheet using “Material” and Thickness.

7 Description

Description is used in the parts report and the layout report.

8 Edging

Edging is a hyphen delimited list of edging short codes starting with the most import edge. For a Side panel the first edge is the front edge. The second edge is the opposite or back edge. Then comes the Top Edge and finally the Bottom Edge.

9 Part Type

The Part Type is used by CutMaster for joinery and dxf files.

- 0 Top Split Shelf
- 1 Top Shelf
- 2 Bottom Shelf
- 3 Middle Shelves
- 4 Fixed Shelf
- 5 Divider
- 6 Left Side
- 7 Right Side
- 8 Corner Brace
- 9 Blind Panel
- 10 Cabinet Back
- 11 Cabinet Hanger
- 12 Stretcher
- 13 Sink Stretcher
- 14 Door Panel
- 15 Drawer Front
- 16 Finished Back
- 17 Finished End
- 18 Filler
- 19 Toe Kick
- 20 Drawer Left Side
- 21 Drawer Right Side
- 22 Drawer Back
- 23 Drawer Front

- 24 Drawer Bottom
- 25 Left Stile
- 26 Right Stile
- 27 Mid Stile
- 28 Top Rail
- 29 Bottom Rail
- 30 Mid Rail
- 31 Partition
- 32 Finished Panel
- 33 Left Door
- 34 Right Door
- 35 Tall cabinets only
- 36 Pullout - Optional Front
- 37 Side by Side Partition
- 38 Combined Slab

10 Cabinet Type

The Cabinet Type is used by CutMaster for joinery and dxf files. There are 10 supported cabinet types. These are listed in the documentation for DxfConfig.

11 Frame Type

Currently Frameless Overlay is the only supported type for dxf files. There are 6 different Frame types

1. Frameless Overlay
2. Frameless Inset
3. Partial Overlay
4. Partial Inset
5. Full Overlay
6. Full Inset

12 Base

Base is used by CutMaster for joinery and dxf files. Bottom panels for side panels are adjusted for base cabinets using integrated kicks.

13 Cabinet

This is the description from cabmaker. By default CabMaker numbers the cabinets in the format of "01)", "02)" etc. This strategy forces the sorting of the parts_list_2 csv file to be by cabinet. The Cabinet value is included with labels, the part list report, the cut plan report and the dxf plan report.

14 Stretchers

Stretchers is used by CutMaster for joinery and dxf files. The Stretchers section has 4 values separated by the “|” pipe symbol. The first value can be positive or negative and is the height adjustment for the actual placement of the Stretcher. Then second value is the width of the stretcher and the third value is the thickness of the stretcher. Stretchers are centered behind doors and drawers by default. The fourth value is a flag used internally.

15 Corners

Corners is used by CutMaster for joinery and dxf files. The Corners section has 4 values separated by the “|” pipe symbol. The first value is the amount the Top's and Bottom's are dadoed into the Side Panels (often 0). If you used Blind dado's then set this value in CabMaker to the depth of the blind dado. The second value is the width of the back brace (if used) and can be different for base cabinets and upper cabinets. The third value is the Depth of the Cabinet. The fourth value which is the Depth of the right side.

16 Drawers

Drawer information is used by CutMaster for joinery and dxf files. The drawer section has up to 6 values separated by the “|” pipe symbol. These are the values that you set in CabMaker for each of the spacing for drawers. This section is needed for proper joinery for Side Panels, Back Braces and special Panels such as for Blind Cabinets.

17 Gaps

Gaps is used by CutMaster for joinery and dxf files. The Gaps section has 3 values separated by the “|” pipe symbol. The first value is the Top Gap, the second value is the Gap and the third value is the Bottom Gap.

18 Tall

The side panels for tall cabinets need additional information so as to properly place additional fixed shelves. Tall is used by CutMaster for joinery and dxf files. The Tall section has 3 values separated by the “|” pipe symbol. The first value is the available room for the Top section. The second value is the available room for the middle section. The third value is optional and used for double ovens. It is the placement of the extra fixed shelf used to support the top oven.

19 Rule

The Rule is the CabMaker rule used for each specific part. CutMaster supports multiple rules. If the Rule is not setup in CutMaster then CutMaster will use the default rule.

20 Doors

The doors section contains one row for each Door / Drawer Front. The first column is the starting distance from the bottom of the panel to the bottom of the Door / Drawer Front. The second column contains the actual height of the Door / Drawer Front. The third column contains one of the following:

- 0 – Drawer
- 1 – Pair of Doors – right and left hinges
- 2 – Opening – no door or drawer
- 3 – Hinge Top
- 4 – Hinge Bottom

5 – Pullout

6 – Hinge Left

7 – Hinge Right

The fourth column is the depth of the drawer box.

21 Fixed Shelves

The Fixed Shelves section contains one entry for up to four fixed shelves. Any entry with a value greater than 0 represents a fixed shelf. It is the distance from the bottom of the Bottom to the bottom of the fixed shelf.

22 Pullouts

The Pullouts section contains one pullout for each row. The First column is the distance from the bottom of the Bottom to the bottom of the pullout. The second column is the height of the pullout and the third column is the depth of the pullout box.

23 Shelves

The Adj Shelves section contains one entry for up to four adjustable shelves. Any entry with a value greater than 0 represents an adjustable shelf. It is the distance from the bottom of the Bottom to the bottom of the adjustable shelf. This value is used to determine the middle hole when using clustered shelf supports.

24 Note

The Note is the CabMaker Note which is normally used to contain the cabinet room number

25 Model

The Model column is the CabMaker Model which is often the cabinet template name.

26 Job

The Job Name is the Sketchup file name without the .skp

27 Values

The Values section contains internal extended cabinet information and is used by CutMaster to fine tune various parts.

28 Legs

29 Hinges


30 Clusters

31 More Edging

32 User Flag

19 Import Selection

The Import CSV File Dialogue box appears when you click the Import button.

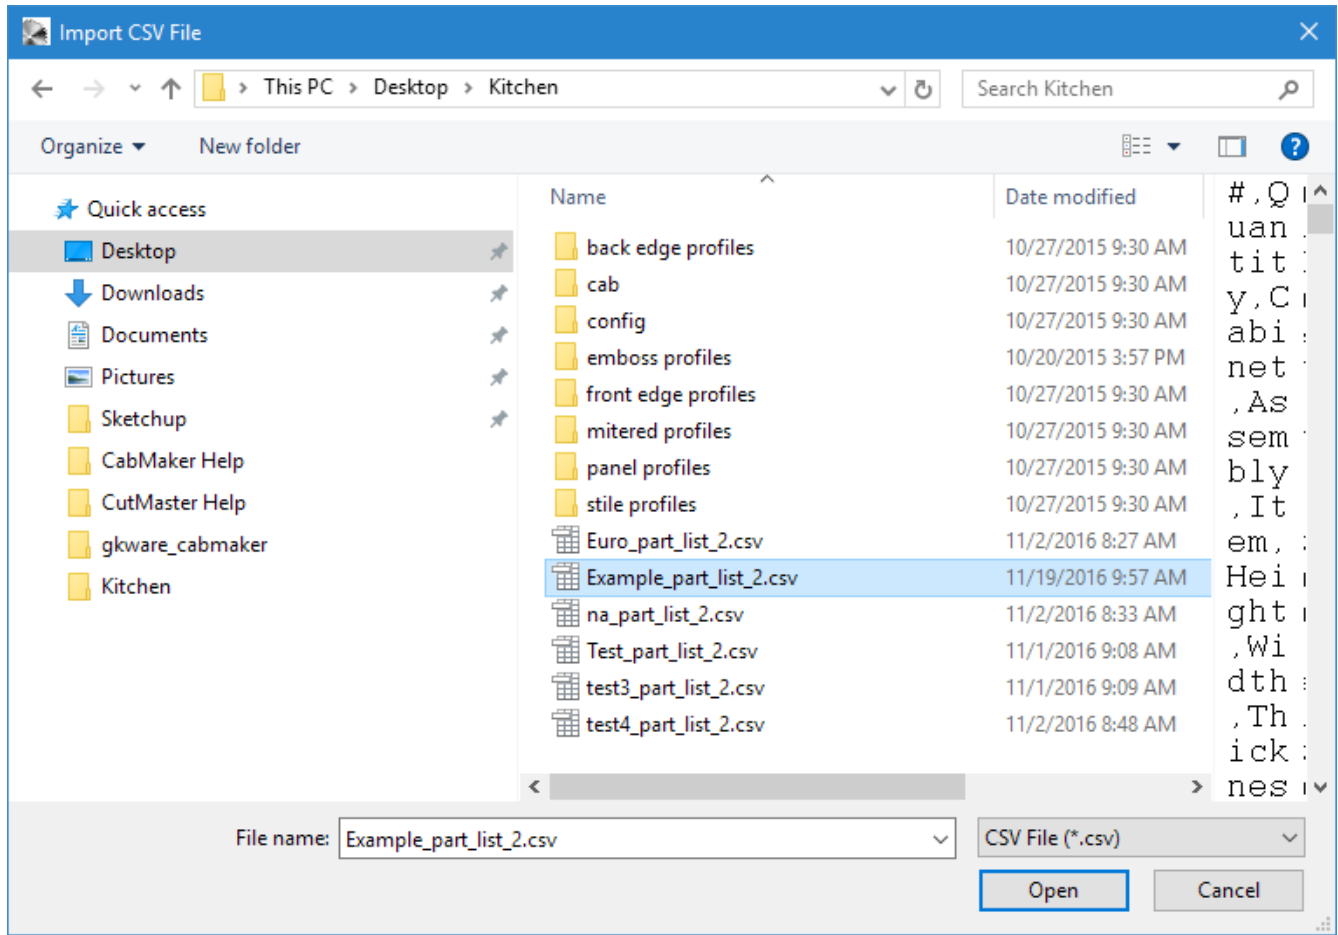

Example 1 - CSV File - millimeters

#	Quantity	Cabinet	Assembly	Item	Height	Width	Thickness	Material	Material Type	Edging	Part Type	Frame Type	Base	Cab Type	Drawers	Stretchers	Corners	Gaps	Tall	Rule
1	1	01)	Cabinet	Back	1954	774	6	White MDF GIS	Sheet Good	---	10	0	y	7						metric_rules
2	1	01)	Cabinet	Bottom	762	600	19	White MCP	Sheet Good	F---	2	0	y	7						metric_rules
3	1	01)	Cabinet	Dividers	793	582	19	White MCP	Sheet Good	F---	5	0	y	7						metric_rules
4	2	01)	Cabinet	Fixed Shelf	762	582	19	White MCP	Sheet Good	F---	4	0	y	7						metric_rules
5	1	01)	Cabinet	Hanger	762	100	12	White MCP	Sheet Good	---	11	0	y	7						metric_rules
6	1	01)	Cabinet	Left Side	2080	600	19	White MCP	Sheet Good	F---	6	0	y	7	128.0	110.0 16.0		0.0 3.0 0.0	373.0 793.0 600.0	metric_rules
7	1	01)	Cabinet	Right Side	2080	600	19	White MCP	Sheet Good	F---	7	0	y	7	128.0	110.0 16.0		0.0 3.0 0.0	373.0 793.0 600.0	metric_rules
189	1	12)	Cabinet	Back	742	525.1594	6	White MDF GIS	Sheet Good	---	10	0	n	3						metric_rules
190	1	12)	Cabinet	Back	742	625.1594	6	White MDF GIS	Sheet Good	---	10	0	n	3						metric_rules
191	1	12)	Cabinet	Bottom	581	681	19	White MCP	Sheet Good	F---	2	0	n	3			0.0 100.0 300.0			metric_rules
192	1	12)	Cabinet	Corner Brace	730	100	19	White MCP	Sheet Good	---	8	0	n	3						metric_rules

Example 2 - CSV File – decimal inches

#	Quantity	Cabinet	Assembly	Item	Height	Width	Thickness	Material	Material Type	Edging	Part Type	Frame Type	Base	Cab Type	Drawers	Stretchers	Corners	Gaps	Tall	Rule
1	1	01)	Cabinet	Back	81.0	24.0	0.25	White MDF GIS	Sheet Good	---	10	0	y	7						default
2	1	01)	Cabinet	Bottom	30.5	23.5	0.75	White MCP	Sheet Good	F---	2	0	y	7						default
3	1	01)	Cabinet	Dividers	793	22.75	0.75	White MCP	Sheet Good	F---	5	0	y	7						default
4	2	01)	Cabinet	Fixed Shelf	30.5	22.75	0.75	White MCP	Sheet Good	F---	4	0	y	7						default
5	1	01)	Cabinet	Hanger	30.5	4.0	0.5	White MCP	Sheet Good	---	11	0	y	7						default
6	1	01)	Cabinet	Left Side	82.0	23.5	0.75	White MCP	Sheet Good	F---	6	0	y	7	5.0	0.0 0.0 0.75		0.0 3.0 0.0	15.5 32.0 24.0	default
7	1	01)	Cabinet	Right Side	82.0	23.5	0.75	White MCP	Sheet Good	F---	7	0	y	7	5.0	0.0 0.0 0.75		0.0 3.0 0.0	15.5 32.0 24.0	default
189	1	12)	Cabinet	Back	31.0	20.625	0.25	White MDF GIS	Sheet Good	---	10	0	n	3						default
190	1	12)	Cabinet	Back	31.0	24.625	0.25	White MDF GIS	Sheet Good	---	10	0	n	3						default
191	1	12)	Cabinet	Bottom	22.75	26.75	0.75	White MCP	Sheet Good	F---	2	0	n	3			0.0 4.0 11.5			default
192	1	12)	Cabinet	Corner Brace	30.5	4.0	0.75	White MCP	Sheet Good	---	8	0	n	3						default

Notice the first 2 parts for example 2 have '---' for edging. This means those parts do not get edged.

20 Version History

Version 11.0.1.143 Nov 5, 2025

1. Grooving back dado in Top even when Reduce Back height was turned on. Fixed.
2. Stretcher offsets were not working. Fixed
3. Added 3 Global settings. 1) Show Database List at Startup 2) DXF Files – Both groups one and two 3) Show DXF Count and Prompt to Run CAM
4. Sliding window now allows you to optimize with Enter key then it focuses the parameter and selects it all. You can now go # Enter # Enter very quickly.
5. Offcuts grid now sorting properly. Optimizer honoring offcut order.
6. Hi lite current row in all 3 grids. Made separator line a bit darker.
7. Added Selected Label – You can add parts to Selected by Ctrl Click on Thumbnails or by using Ctrl Click on individual parts on the nested graphic.
8. Offcuts that don't have parts are creating rendering issues. Offcuts with 0 parts now show up as yellow.
9. Job Grid works like Parts Grid when using Alt Click for copy. Done.
10. Summary list now has a form to choose which Summary report to run.
11. DXF options needed to be applied immediately after opening Job. Fixed.
12. Added “Filter Selected” option. Works well when tracking redo parts. You can then select all parts on last sheet and add parts that need to be redone. Then filter for this scenario.
13. Suspension blocks side panel cut outs not honoring that three is a top hanger. Fixed.
14. Added a Clear Button under Parts tab. You have a choice of clearing Selected Flags and or Filtered Flags.
15. Modified the Options Icon and changed its prompt to “Rules”
16. When Split Tops and holes – the Top was only seeing the first hole. Fixed.
17. M&T issue for cabinet parts (not drawers) mortises use radius instead of diameter for single line routing.
18. Dashed lines now identify small parts.
19. Hinge plates not always correct for Right Blind and Left Blind panels. Fixed.
20. Small Parts Modifier incorrectly modifying Drawer Bottoms section 3). Fixed.

Version 10.0.1.138 Mar 23, 2025

1. You can now Rename a Project – F2 Key works. You can also Merge 2 projects into 1.
2. Modified Job form to show group 1 and group 2 switch totals. You can quickly update the switches by holding down the Alt Key and left click the mouse on Group 1 or Group 2 cell. Copies the default values over to the current record. Plus version only.
3. Added second group of Dxf switches in Dxf Configuration area. As an example you can

create 3D Dxf one Dxf per part on the first group and create 2D Nesting on the second group.

4. The config.ini has an optional entry named DatabaseName=cutmaster?.db where ? can be a different database such as a backup.
You can use the escape key or X button and cause cutmaster.db to load without updating the ini file.
5. Rule Set and Drawer System dropdowns are now in Bold Blue to more easily show you which Rule / Drawer you are on.
6. Vertical and Horizontal Dividers have drilling for dowels or screws for Tops, Bottoms and Sides.
7. Added a new Global Layer for Divider shelf supports.
8. Horizontal shelves can now be "Fixed", "Adjustable" or "Interlocked".
9. Added Pocket Screw section for captured backs (top and bottom). Honors Slide in and or extend back.
10. Added Balanced Shotgun for Shelf Supports.
11. The Hanging bracket section can now be configured for French Cleats.
12. CabMaker sending more info over to cutmaster for sides, tops, bottoms and backs etc.
13. Return cabinets now have a split top / bottom option making the corner cabinet into a 2 cabinet corner.
14. Added more hinge options for Return Cabinets. Supports 2 doors hinged and 1 door hinged.
15. Base Cabinet door drilling for hinge positions was using Upper Cabinet drilling positions. Fixed.
16. Alt Left Click now copies Edging to another part.
17. When you choose project material automatically putting the panel count X panel height into the paste buffer. You can now paste into vcarve for use with tiling. mm works best.
18. Enter Key now enabled on Open Job. Calls Optimize.
19. Increased the width of the Rule and Drawer drop down controls.
20. Added Outside Angle cabinet style. Works with mortise and tenon, rafix and minifix.
21. Assembly report would give an exception from time to time. Fixed it by modifying the sql switched from Count() to Total().
22. Imperial CNC Labels weren't forming the Cabinet Numbers properly. Fixed.
23. Loosing Switches configuration from time to time. Added new Global table.
24. Grooving back dado in Top even when Reduce Back height was turned on. Fixed.

Version 9.0.1.136 Oct 25, 2024

1. Some legs use skids with 4 press in fittings. Now supported.

Version 9.0.1.135 Sep 20, 2024

1. Now handling Blind Panel offset and Blind Panel Wider than. Fixed.

Version 9.0.1.134 Sep 08, 2024

1. Blind cabinets were not handling hinge drilling and shelf supports properly. Fixed.

Version 9.0.1.133 Sep 05, 2024

1. DXF's were set at UTF-7 Encoding. Fixed.

Version 9.0.1.132 Aug 15, 2024

1. You can now turn off plant on back Top or Bottom pilot holes.
2. Assembly report now available in imperial units (inches).

Version 9.0.1.131 Mar 15, 2024

1. Added JobName for Assembly Reports.
2. All reports now have Preview turned on.
3. Batch reports had index out of bounds error if main report was chosen. Fixed.
4. Temporarily Disables Optimize On Open during Clear All.
5. Hide Thumbnails during Clear All.
6. Fixed Section 4) for Front and Back in Drawers Options.
7. Layout is now stored per Material Instance along with plan parameters.
8. Now storing Layout in Plan table. Now have a default Layout for nest per material.
9. Now have a default Layout for printing (separate from dxf nest).
10. Material list now has a Plan indicator (small rose colored box next to check mark)
11. Materials now looking up strategies when clicked (check mark turns on)
12. Added Delete Plan for current material.
13. Added Import / Export of Rules.
14. Materials occasionally finds the wrong material because of a partial locate. Fixed.
15. Single slab for drawer fronts and doors – sizes come across as description so you can cut the parts out of the single sheet.
16. Added configuration parameters for slabs.
17. Cabinet Labels and Assembly Cabinets have better graphics.
18. Added Door / No Door Choice when running Cabinet Labels.
19. Modified JobName for Cabinet Labels. Removed '_Part_List_2' from the end of the name.
20. Added Filter by Part Type. You can now user Saved Names for Filter by Part Type.

Version 8.0.1.129 Dec 28, 2023

1. Updated documentation.

Version 8.0.1.128 Dec 10, 2023

1. Added material thickness to material pick form.
2. Added new optional form when adding a part manually.
3. Added Option column for parts grid. You can now update checked parts when changing materials or changing grain rotation.
4. Added Check button for parts grid. Check Button toggles between select ALL and unselect ALL. Alt button click selects only materials that match.
5. Delete key now honors check boxes.
6. You can now update checked parts with Rotation or material by updating one record.
7. Mouse wheel was moving between records in Parts Grid when various editors were showing. Fixed.
8. Cutmaster was not honoring horizontal grain on backs. Fixed.
9. Drawer Fronts with vertical grain not drilling connection holes for metabox etc. Fixed.
10. Cutmaster not handling pilot holes through tops / bottoms into hanger correctly. Fixed.
11. If part wouldn't fit on sheet but could fit if rotated it was still marked as not fitting. Now honors Must Rotate and Can Rotate.
12. Escape key deselects current part on Sheet Layout. You then had to choose a different part before choosing the same part again. Fixed.
13. Left mouse down now acts like a toggle when choosing part on a sheet.
14. In Dxf View the part layer is now rendered before geometry. Looks cleaner.
15. Got rid of hatch for selected parts in Dxf View and Plan View.
16. Dxf View now has transparent labels. The background is same color as the part layer.
17. Under various conditions parts that do not fit on material were not showing up in red. Fixed.
18. Sometimes deleting the wrong sheet. Fixed.

Version 8.0.1.127 Nov 20, 2023

1. Added 2 items to Joinery form - Hanger width bottom and Back has Horizontal grain.
2. Added Double Click when picking jobs which works the same as clicking Select.
3. Current Job now appears above materials in Layout tab
4. Added Color for selected part in Global settings for CNC.
5. Added Color for selected part when in Plan view.

Version 8.0.1.125 Oct 16, 2023

1. Radiused Corners did not handle the last corner properly. Fixed.

Version 8.0.1.122 Jul 21, 2023

1. Added an optional feature for mortise and tenons. Fixed Shelves, Bottoms and Full tops may have a third rafx connector or pilot hole in a gap. This extends to horizontal rails.

Version 8.0.1.121 Jul 16, 2023

1. Added Split Overlay as a construction method.
2. Dropped Fixed Shelf Offset – now passing information over from CabMaker.
3. Added Spacing List Full and Spacing List Split for Overlay construction.
4. Fixed bug when initializing part variables.

Version 8.0.1.119 Jun 12, 2023

1. Change from WMI to Registry to get the UUID for security.
2. Fixed issue in CutMaster where Drawer Layer Names were not always saving correctly.
3. Modified drawer fronts in CutMaster Options.
4. Cleaned up Job form. No longer reloading job when you choose "Close".
5. Added global button in cutmaster options to restore Dxf Switches from Project.
6. Added ini file choice to run Dxf Create twice with a second Dxf Switches stored and the Job level.
7. Modified DXF Export housekeeping when using group 2.
8. Added new security strategy to get around gigabyte motherboards when OEM didn't set up a machine ID.
9. Slide holes were missing in partition for side by side drawers. Fixed
10. Clear Selected in Cutmaster was not properly updating the rest of the UI – Fixed.
11. CutMaster Removed Help button and Added Save Button (Strategies).
12. Modified Assembly report. Added a small dialog box before running the report which allows you to reduce number of report sections.
13. Added a small dialog box before the Sheet report allowing you to adjust the origin in the layout.
14. Added Cabinet Labels report.
15. Support for Concave shelves for angled cabinets including Dxf bulge.
16. Added material choices when printing main cut plan report.
17. The main layout wasn't updating after optimize when Select First Thumbnail was set to false - fixed.

Version 8.0.1.116 Apr 17, 2023

1. Fixed Door count in Assembly report.
2. On Joinery tab - 2) Front / Back Tenon Cut Setting the Overruns to 0 disabled the other parameters – fixed.
3. Escape key now clearing selected parts in CutMaster.
4. Alt-C now cloning current record in CutMaster.
5. Added count on Layout tab for Parts Grid in CutMaster.
6. Added radius for all inside cuts (especially tenons) - from Bit Diameter.
7. Cleaned up code for 72 arcs in CutMaster.
8. Added Refresh() command to materials click - drawer part no longer missing undermount notch first time through.
9. Changed Hint duration from 5 seconds back to default 2.5 seconds.
10. Enable / Disable Clone button and Adjust Button Just Like the Print Button.
11. Filtered Labels now updating when you manually change the number of filtered records.
12. Fixed parts.csv file - length and width now are original sizes.
13. New Globals (most moved from config.ini) - Language, Font Name, Font Size, Show Note .

Version 8.0.1.112 Feb 27, 2023

1. Added Mortise and Tenon for backs with 0,1,2 or 3 rafix connectors per side.
2. Extended Fixed shelves to 24 for tall wine racks.
3. Modified Joinery form to include len, wid and ht etc.
4. Shift Left button now takes you to the correct rule or correct drawer system.
5. Reorganized Drawer System.
6. Added CSV custom export.
7. Now displaying Drawers or Pullouts in Parts grid.
8. Alt-Delete now deletes from data grids without confirmation.
9. Fixed optimizer bug where a part may get rotated when it shouldn't
10. Fixed Shelf support bug where shelf supports on backs no lining up with Sides.
11. Fixed cloning and saving empty text – no longer showing as (null)
12. Added Flatten 2D for Dxf Options.
13. Removed Try Rotation from Sliding Window area. It was redundant. Doubled the optimization speed for Tightest.
14. Modified Main Report – dropped PartID and added Short Code. Displays optimization settings.

15. Modified Labels – added Cabinet Number, PartID and Job when Barcode is turned off.
16. Added Custom Colors for Dxf View and Dxf Report.
17. Added Export and Import to Drawer Systems.
18. Enhanced Job Form – now a data grid.
19. Added note field for Jobs, Rules and Drawer Systems.
20. Added See More button for Drawer System (Sides, Front and Back).
21. Added Clear Selected button beside Clear Optimization.
22. Added Restore Plan button for optimizer settings. Restores Settings to last saved values.
23. Added Mortise & Tenon for Drawer Sides, Fronts and Backs.
24. Added Filter Button on Parts Grid. Toggles Show All parts and Show non filtered.
25. Modified Filter Form. Now filtering all but current selection.
26. Now automatically storing Dxf Switches at the Project level.

Version 7.0.1.111 Dec 18, 2022

1. Added Mortise and Tenon for backs with 0,1,2 or 3 rafx connectors per side.
2. Added 2 new values to miscellaneous in Joinery Form.
3. Added FontSize to config.ini. Default is 8 – works well up to 11.
4. Added hot keys which take you to Parts Tab, Joinery Form and or Configuration System.

Version 7.0.1.110 Dec 12, 2022

1. Major changes to Drawer Systems including Slide drilling per System instead of global.
2. Added new tables to support the change to Drawer Systems.
3. Reorganized Top Buttons to work better with work flow.

Version 7.0.1.108 Nov 18, 2022

1. Added Closet Rod drilling - Plus version only.
2. Added Filtering to CutMaster - Plus version only.
3. Organized CNC options
4. Added Short Code to parts.csv for DXF files. Now shows on Dxf View
5. Fixed Import form - easier to read.
6. Added Closet section and 3 new variables to Joinery form. Reorganized
7. Now supporting many small DXF batches - now 8 variations
8. You can now clone a part with 1 button press

Version 7.0.1.106 Oct 3, 2022

9. Added swap X and Y for VCarve etc.
10. Simplifying licensing - no longer using mac address.
11. Now showing number of days until next web check.

Version 7.0.1.105 Jul 23, 2022

12. Added horizontal drilling for WoodHog.
13. Added commercial shelf standards.
14. Fixed Sink rail machining in sides for handless system.

Version 6.0.1.104 Oct 16, 2020

15. Added callback for drawer system options for Description. Cut and paste now works.
16. Modified Sink rail machining in sides for handless system.

Version 6.0.1.103 Aug 24, 2020

1. Added check in Pilot holes to avoid a divide by 0 error.

Version 6.0.1.102 Aug 7, 2020

1. Added Hardware summary report.
2. Added Hardware section to Assembly report.

Version 6.0.1.101 Jun 30, 2020

1. Fixed drawer bottoms for single line routing directionality.
2. Added pocket screws for drawer bottoms.
3. Added optional X / Y offsets for routed label positioning.

Version 6.0.1.99 Jun 19, 2020

1. Fixed Parts report when using fractions such as 16 29/64". Had to increase the size of the Width and Length columns.
2. Fixed merged panels for DXF. The left panel of the right merged cabinet now goes into a folder named "BackFace".
3. Modified Blind Mortise and Tenon for CNC. More control for handling tenon notches.

Version 6.0.1.98 Jun 7, 2020

1. Added Flip Tops, Flip Fixed and Flip Bottoms to General Options.
2. Removed "Drill From Bottom"
3. Completed Angled Ends for Blind Dado.
4. Added Single line tenon cuts instead of pockets.
5. Modified Leg positions for Return cabinets and Angled Ends.
6. Added pocket option for Construction holes and Dowels. This supports Festool Domino

and Lamelo.

Version 6.0.1.97 May 11, 2020

1. Configuration settings now has checkboxes to turn on / off DXF sections.
2. You can now have any width of blind tenon (stop tenon).
3. You can now set full dado width to 0 to get single line instead of a pocket.
4. Bottoms, Tops, Stretchers, Fixed Shelves and rails can now have single line choice instead of pocket.
5. For Blind Dado's added 4 new parameters, Depth Adjustment, Up Down Adjustment, Tenon Width Adjustment and Reverse Bottoms.
6. Reverse bottoms is intended to be used with integrated kicks.
7. Added Pocket Length to Construction Holes to support Festool Domino and Lamello.
8. Added Start Line indicator for CNC view.

Version 6.0.1.96 Mar 31, 2020

1. Added Handless support.

Version 6.0.1.95 Feb 29, 2020

1. Kicks were not getting blind dado's. Fixed

Version 6.0.1.94 Feb 15, 2020

1. Angled Tops and Bottoms - no backs - Fixed
2. Import mapping modified in database
3. Cleaned up 4 tables in database - no more fixed length characters
4. Layout listing now adjusts sizing for extra room for small parts.
5. DXF Reports now use adjusted size but without parts padding.
6. Angled fixed shelves were not angled. Fixed.

Version 6.0.1.92 Jan 31, 2020

1. Added new Sliding report to CutMaster Plus version.
2. Now have ability to adjust room between small parts using area smaller than X.
3. Fixed hinge locations to honor what comes over from CabMaker.
4. Added note to Layout list and to Cabinet reports.
5. Blind cabinets no longer have hinge plate drilling on the hidden side.
6. Blind cabinets now have hinge drilling on the backside of the Blind Panel.
7. Blind panels now have shelf supports.

Version 4.0.1.91 Oct 14, 2019

1. Fixed Tall Cabinet shelf support holes.

Version 4.0.1.90 Sep 27, 2019

1. Added Sliding window for Cabinet number priority optimization.
2. Added Rotation control during import.
3. Added Rotation Drop Down for each part.
4. Added narrow part layer name modifier.
5. Fixed Tall cabinets - no longer drilling hinge holes twice.
6. Fixed Backs with notches for hanging brackets.
7. Added option to jump to first thumbnail after optimize.
8. Fixed Off cuts.

Version 4.0.1.88 Jun 23, 2019

1. Drawer layer names no longer can have spaces. Now converted to underscores.
2. Drawer layer names now show in applicable machining section.
3. Added machining section for drawer bottoms pocket screws.
4. Added comment / purpose for each machining section.

Version 3.0.1.87 Jun 11, 2019

1. Drawer slide drilling on sides got confused when skipping a drawer box. Fixed
2. Sink Rail drilling and grooving not working with a drawer bank. Fixed

Version 3.0.1.85 Feb 9, 2018

1. Modified database for more edging information.

Version 3.0.1.82 Dec 9, 2018

2. Added pilot holes for backs.

Version 3.0.1.81 Nov 26, 2018

1. Added Width and Length editor to Parts Grid.
2. Modified attributes that are sent over from CabMaker.

Version 3.0.1.80 Nov 5, 2018

1. Added Edging to Parts Grid.
2. Added Adjusted Button to Parts Grid. You can now toggle between Adjusted and Original for sizes. Adjusted has to do with edging and edging thickness.
3. Parts printout now includes edging short codes. It also shows Adjusted or Original depending on the Parts Grid setting.

Version 3.0.1.79 Oct 11, 2018

1. Added Reference from Drawer Box for configuring Drawer Fronts Hole Sets and Pilot holes.

2. Fixed bug where spaces in Purpose breaks the configuration.

Version 3.0.1.78 Oct 2, 2018

1. Modified Drawer Rules. Added drawer box drilling and machining operations.
2. Drawer Rules now contain layer name information.
3. Slide configuration now synchronizes Drawer Rules.

Version 3.0.1.77 Jul 12, 2018

1. Modified shelf support drilling. Auto Depth Adjustment only works for Backs.
2. Fixed shelf support set back for upper cabinets when set back is different from base cabinets.
3. Fixed editing and saving Joinery.
4. Added Sheet ID to “Cut Plan” and “Labels”

Version 3.0.1.76 Jun 27, 2018

1. Added control for CNC labelling such as scaling and distance between objects.

Version 3.0.1.74 Jun 15, 2018

1. Fixed Parts report – now honors inches.
2. Fixed Shelf supports for Backs.

Version 3.0.1.73 Jun 7, 2018

1. Added Pullout Vertical Offset.
2. Added new Assembly Report to CutMaster Plus.

Version 3.0.1.71 May 7, 2018

1. Fixed pullout slide holes in side panel when slides are of different depths.
2. Added support for new Side by Side Partition.

Version 3.0.1.70 Apr 17, 2018

1. Fixed bug with DXF export.

Version 3.0.1.69 Apr 8, 2018

1. Fixed merging.
2. Completed the Joinery editor.

Version 3.0.1.68 Mar 26, 2018

1. Cutmaster now supports Bottom Overlay.
2. Modified how Cutmaster handles drilling for the back panel of split tops.
3. Added drilling from underside for legs for bottom panels of base cabinets.
4. Added Leg levelers for corner cabinets.

Version 3.0.1.67 Mar 21, 2018

1. Internal update to support Merge Cabinets.
2. Cutmaster Plus now supporting Bottom Overlay.

Version 3.0.1.66 Mar 9, 2018

1. Modified Rafix Connector by converting From Edge to From Edge List. It now supports drilling for Cabineo connectors.
2. Added flexibility for drilling Construction holes and Dowel holes. You now have the ability to offset the holes instead of only centering them.

Version 3.0.1.65 Mar 6, 2018

1. Added support for horizontal cabinet.

Version 3.0.1.64 Feb 12, 2018

1. Added more locations for labeling in Plus version.
2. Added support for permanent licensing. With this option CutMaster only checks in with the web service once after a version update.

Version 3.0.1.63 Feb 7, 2018

1. Added support for Unicode Strings.
2. You can now edit config.ini and specify a font.

Version 3.0.1.62 Jan 2, 2018

1. Fixed CAD call for nested sheets.
2. Fixed Arcs for labeling and hangers for imperial dxf.

Version 3.0.1.61 Dec 28, 2017

1. Removed Trim Back DXF option. Width now determines pocket or straight line dado.
2. Now allowing drawers in upper cabinets.
3. Added dowels and construction holes for upper cabinet stretchers.

Version 3.0.1.60 Dec 12, 2017

1. Modified the layout of Options.
2. You can now have multiple Drawer / Pullout Subsystems.
3. Added more parameters to allow configuration of Zargen, Metabox etc.

Version 2.0.1.57 Oct 20, 2017

1. Parts are now clickable.
2. Added CAD support for current parts or nested dxf for Gold version.
3. Added Auto Depth for drilling.
4. Added an Edge Banding usage report in Gold version.

5. Completed Dxf Tall Partition for Tall cabinets in Gold version.

Version 2.0.1.56 Sep 29, 2017

1. Added double sink stretchers for Tip Out Tray.
2. Fixed Dowel locations for Sink Stretchers and for Integrated Kicks.
3. Modified DXF to support 2D labelling
4. Modified Joinery Form
5. Modified Options

Version 2.0.1.55 Sep 19, 2017

6. Added "Save" button for Options form.
7. Added Scoring Depth.
8. Added PartType to Dxf.csv file
9. Fixed flags bug. Flags were not set during import when called from CabMaker
10. Added Symbols to edging form. This is used for DXF labeling.
11. Added labeling location to Flags tab. There are 8 possible locations for labels including none.
12. Added DXF labeling. Each part gets a scored label.
13. DXF Rules are now global and are now read and written only to the default rule set regardless on which rule is current.

Version 2.0.1.54 Aug 4, 2017

1. Remembers last form size and position
2. Report preview is no longer maximized. It is now centered and approx 800 X 600
3. Added modifier for Sides (Bottom=1, Top=2, Backs=4) These are added together
4. Modified Joinery screen - added text box to Gap line
5. Added NailerList for Dowels and Construction holes
6. Adjust Side panel for 3 drawer sink cabinet
7. Simplified General DXF screen. Removed parameters which now are sent over from CabMaker.

Version 2.0.1.53 Jul 24, 2017

1. Added a new tab under dxf configuration called Flags.
2. Completed partitions (slide holes) and back brace (shelf supports).
3. Double click on part (1 part per dxf) and associated CAD program will start up .
4. Fixed stretcher adjust.
5. Completed Hanger drilling.

6. Added model to import (need to add column to mapping) .

Version 2.0.1.52 Jul 15, 2017

1. Added Bottom Offset and Hanger Width to Miscellaneous section in General DXF tab.
2. Added Leg Levellers section and Hanging Brackets section to Connector's tab.

Version 2.0.1.51 Jul 2, 2017

1. Added Note Column to Parts Data.
2. Parts Report now shows Note column.
3. Import now has Note column and Shelf info.
4. Added options for shelf supports. You set the center hole of the cluster from adjustable shelf position in CabMaker.
5. You no longer have to restart after changing Edging thickness.
6. Changed Match button on import to map several fields.
7. Added more info to DXF file naming for 1 part per dxf.
8. Fixed Third Hinge mounting bracket.
9. Construction holes now honor edging thickness.
10. Added scoring option for Fixed shelves and Stretchers

Version 2.0.1.49 Jun 19, 2017

1. Added optional drilling for pullouts.
2. Depth for Pullouts and Drawers are now used in determining slides and drilling pattern.
3. Fixed Labels for Avery 06498 (1" X 2 5/8")

Version 2.0.1.48 Jun 10, 2017

1. Added support for A4 labels for Avery L7159.
2. Modified top buttons since they were disappearing on some installs.

Version 2.0.1.47 May 23, 2017

1. Options now work properly with inches. Requires " (inch) mark.
2. Dxf option lists now can have last argument as c1 or c2. This forces CutMaster to divide the space by 2 or by 3.
3. Slides table in Database no longer restricted to 30 characters for holes.
4. Options in red (mostly depths) can receive fractional inches.
5. Added additional optional configuration for dxf files.
6. Added more layer names.
7. Added horizontal boring for dxf where 3D and where one part per dxf.

Version 2.0.1.46 May 9, 2017

1. Fixed bug in DXF cutting report and with labels.

Version 2.0.1.45 May 6, 2017

1. Added rule to create one DXF file for each part.
2. Side panels will now create hinge holes only when required. A left side will not have hinge holes when there is one door which is hinged right.

Version 2.0.1.44 May 2, 2017

1. Added Blind dadoing for Backs where the back is the same thickness as the sides.

Version 2.0.1.43 Apr 25, 2017

1. Completed the context sensitive help.
2. Added Dado Sides Only for cabinet backs.
3. Added Last Front Overhang. You now can have the slide holes in the sides positioned the same for cabinet bottoms and for stretchers.
4. Fixed bug for middle doors of tall cabinets when Tight Gap was 0.
5. Fixed bug for shelf support placement on Middle and Top sections of Tall cabinet when using integrated kicks and Overlay doors on Frameless cabinets.

Version 2.0.1.42 Apr 13, 2017

1. Fixed Label report for A4 printer.
2. Reorganized Dxf Options tabs. Rules and Miscellaneous are now on General tab and Shelf Supports are now on Holes tab.
3. Added context sensitive help to options. Not complete but a good start.
4. Fixed top hinge placement for doors.
5. Fixed bug when using partial sheets.

Version 2.0.1.41 Mar 31, 2017

1. Recompiled Cutmaster to fix internal synchronization of files.

Version 2.0.1.40 Mar 31, 2017

1. Cutmaster now supports Fridge cabinets.
2. You now have a choice of 2D or 3D for Dxf files.
3. Added Layer names in Dxf files for every entity for acad compatability.

Version 2.0.1.39 Mar 24, 2017

1. Tall cabinets now have shelf supports in top 2 sections.
2. With inches the DXF files had illegal characters in their names. Fixed
3. Modified labels for A4 printer.

Version 2.0.1.38 Mar 20, 2017

1. Tall cabinets now have door hinges in proper place.

Version 2.0.1.36 Feb 16, 2017

1. Draw box was missing dado's in Sides in Dxf view. Fixed.
2. Draw Side ends for pullouts weren't edged properly. Fixed.
3. Added Cabinet Description (Cabinet) to listing.
4. Fixed Cut Plan for Show Every Sheet option.
5. Adjusted Drawer dadoing for bottom to work properly with CabMaker.

Version 2.0.1.35 Jan 28, 2017

1. Split Top choice is removed and Top Style drop down added. Now supporting Front Stretcher option.
2. Changed Dxf View so that it synchronizes with Edging View.
3. Dxf files now supporting Layout direction.
4. Labels now in same order as cut plan.
5. New option to print labels for current cut plan.
6. When printing screen reports windows printer dialog now comes up allowing you to switch printers and or print just the page you want.

Version 2.0.1.34 Jan 23, 2017

1. Stretcher Construction and Dowel holes were not recognizing more than 1 hole. Fixed.
2. With multiple rules Cutmaster would sometimes use the wrong rule. Fixed.
3. With Full Dado's Cutmaster was running a zero depth rout. Removed.
4. Labels were only printing in millimeters even when inches is selected. Fixed.

Version 2.0.1.33 Dec 24, 2016

1. Label reports were not printing a label for each part when the quantity was greater than 1. Fixed.
2. Added check box option "Show Barcode".
3. For labels the Cabinet

Version 2.0.1.32 Dec 12, 2016

1. Now supports connector adjustment for the acute end of Angled End tops and bottoms.
2. Added a 24 label choice for A4 printers.

Version 2.0.1.31 Dec 3, 2016

1. Corner cabinets now support different depths for the left and right sides.
2. Import dxf now defaults to where cutmaster places the dxf files.

Version 2.0.1.30 Nov 29, 2016

1. Added angled cabinet support.
2. Added cabinet column to parts listing report, labels and to cutting plan reports.
3. You can now choose letter or A4 for reports and labels.
4. Fixed dxf for top and bottom panels on corner cabinets.

Version 2.0.1.27 Nov 1, 2016

1. Fixed joinery bug for dxf files.
2. Fixed Dado bug for dxf files.

Version 2.0.1.26 Oct 30, 2016

1. Ported Cutmaster over to newer compiler.
2. Added new reporting choices. Reports can now be sent to Screen, Printer, PDF, HTML, CSV or RTF.

Version 2.0.1.25 Sep 14, 2016

1. Added Dxf output.
2. Created DxfConfig testing programming. It's version is also 2.0.1.25

Version 2.0.1.23 Jul 6, 2016

1. Complete the documentation.

Version 2.0.1.22 Jul 1, 2016

1. Changed Database to SQLite
2. Requires free SQLite ODBC driver
3. Added edging editor
4. Added joinery editor
5. Now loads last job at startup
6. Batch Optimization wasn't happening on Open Job or Import. Fixed.
7. Layout wasn't preserved between sessions. Fixed.
8. Import routine now handles different field delimiters and handles commas with numbers
9. With Metric units the Summary report can optionally show meters instead of feet
10. With Metric units material usage can optionally show meters instead of feet
11. Now Storing cost as pennies etc. You must now enter pennies etc.
12. Modified import routine - now handles commas as a decimal separator and gives choice for field delimiter.

Version 1.0.10.20 Oct 20, 2014

1. Changed Copy Protection strategy.
2. Changed link to web site.

Version 1.0.9.19 May 5, 2014

1. Recompiled to get Copy Protection working.
2. Added Edging for each part. Edging displays on sheet display report and labels.
3. Added Rotate check box for parts.
4. Added Joinery form for extended attributes.
5. Added Use Part Rotate in Options. If user leaves unchecked then part rotation is by material.
6. Sped up optimizer - it is now 100 times faster. This becomes noticeable with big jobs.
7. Added in Version upgrade for jobs saved in prior versions.

Version 1.0.8.18 Jun 15, 2013

1. General Maintenance.
2. Display trial information on main caption.

Version 1.0.7.17 Jun 13, 2013

1. Added an example Job.
2. Added more hints and modified Options form.

Version 1.0.6.16 Jun 12, 2013

1. If Optimize on Import / Open is not checked and you click the check box then has an exception. Fixed.
2. You can now batch import.
3. If you modify, add or delete Offcuts we now make sure the offcuts button is down.
4. Changed Layout to toggle between the 4 corners.

Version 1.0.5.14 Jun 5, 2013

1. Fixed Printing Issue after open or import but before optimization.
2. Fixed Screen Sizing issue.
3. Fixed Auto Add new Sheet – Kerf was 0 – now uses default from options.

Version 1.0.4.13 Jun 4, 2013

1. New Main menu, Hot Keys and hint line.
2. Modified Options Form.
3. Added Summary Report.
4. Added Import Form for Column Mapping.

Version 1.0.3.11 May 24, 2013

1. Grid editor columns are now sortable. Just click the column title.
2. Added a label print button. Labels are 2 5/8" X 1" and include a bar code. Avery 06498 are Removable labels - perfect for wood and plastic panels.
3. Fixed Printer Dialogue. Did not honour the print range.

Version 1.0.2.9 May 18, 2013

1. This is the first version of CutMaster.